


# Patio Watcher

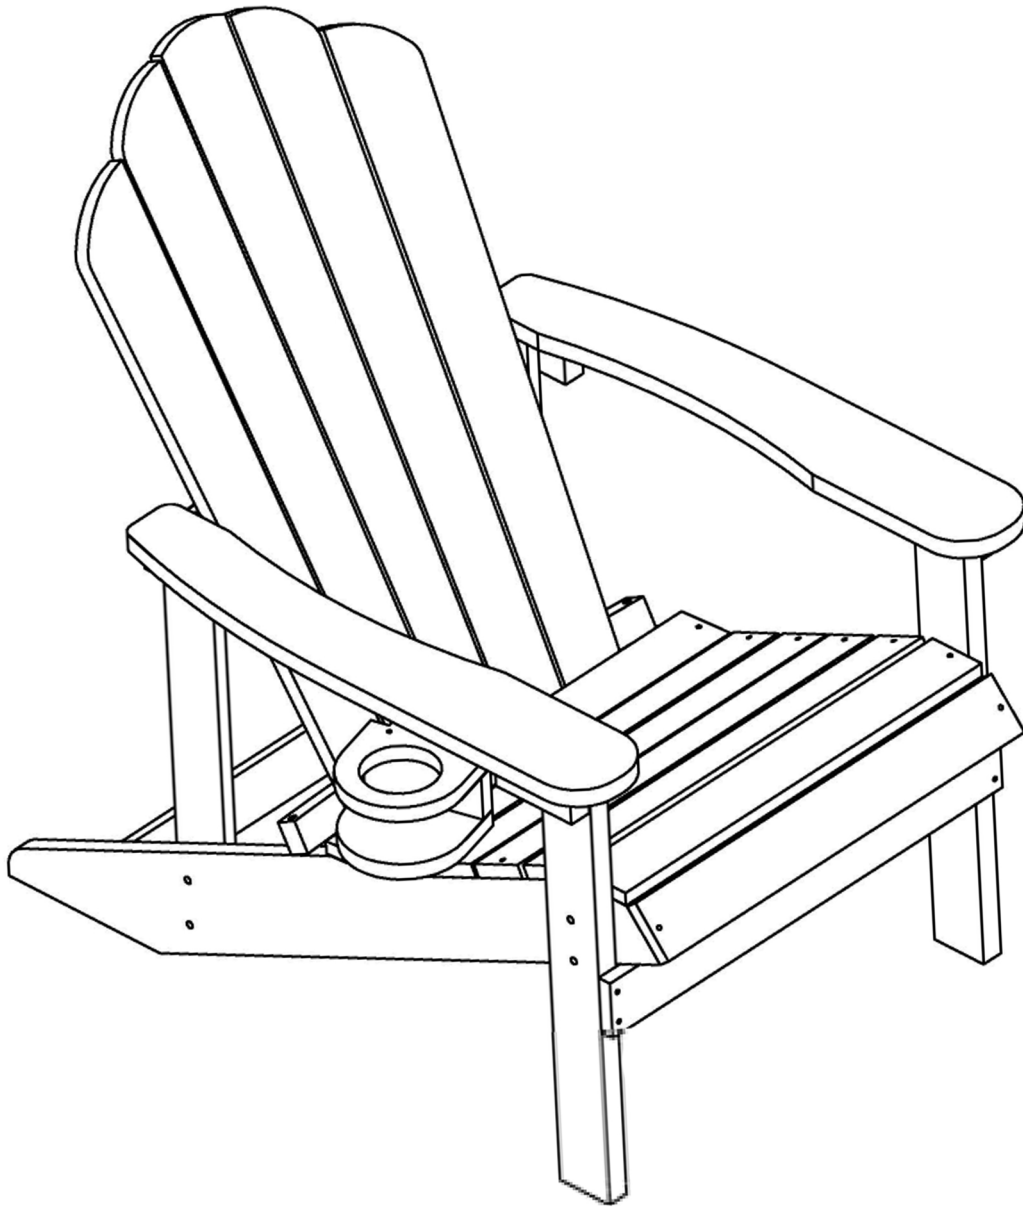


✉ [service@patiowatcher.com](mailto:service@patiowatcher.com)

READ AND SAVE THIS INSTRUCTIONS FOR FUTURE USE

## ASSEMBLY & INSTRUCTION MANUAL

# Pre-Assembly

## TOOLS REQUIRED (not included)



Phillips screwdriver

## HARDWARE INCLUDED




**NOTE:** Hardware not shown to actual size.



Part	Description	Quantity
AA	Screw (3.5x40)	6
BB	Bolt (M6x60)	2
CC	Bolt (M6x70)	2
DD	Bolt (M6x60)	6
EE	Bolt (M6x45)	4
FF	Bolt (M6x30)	1

.....  
*Thank you for your purchase!*

# Parts

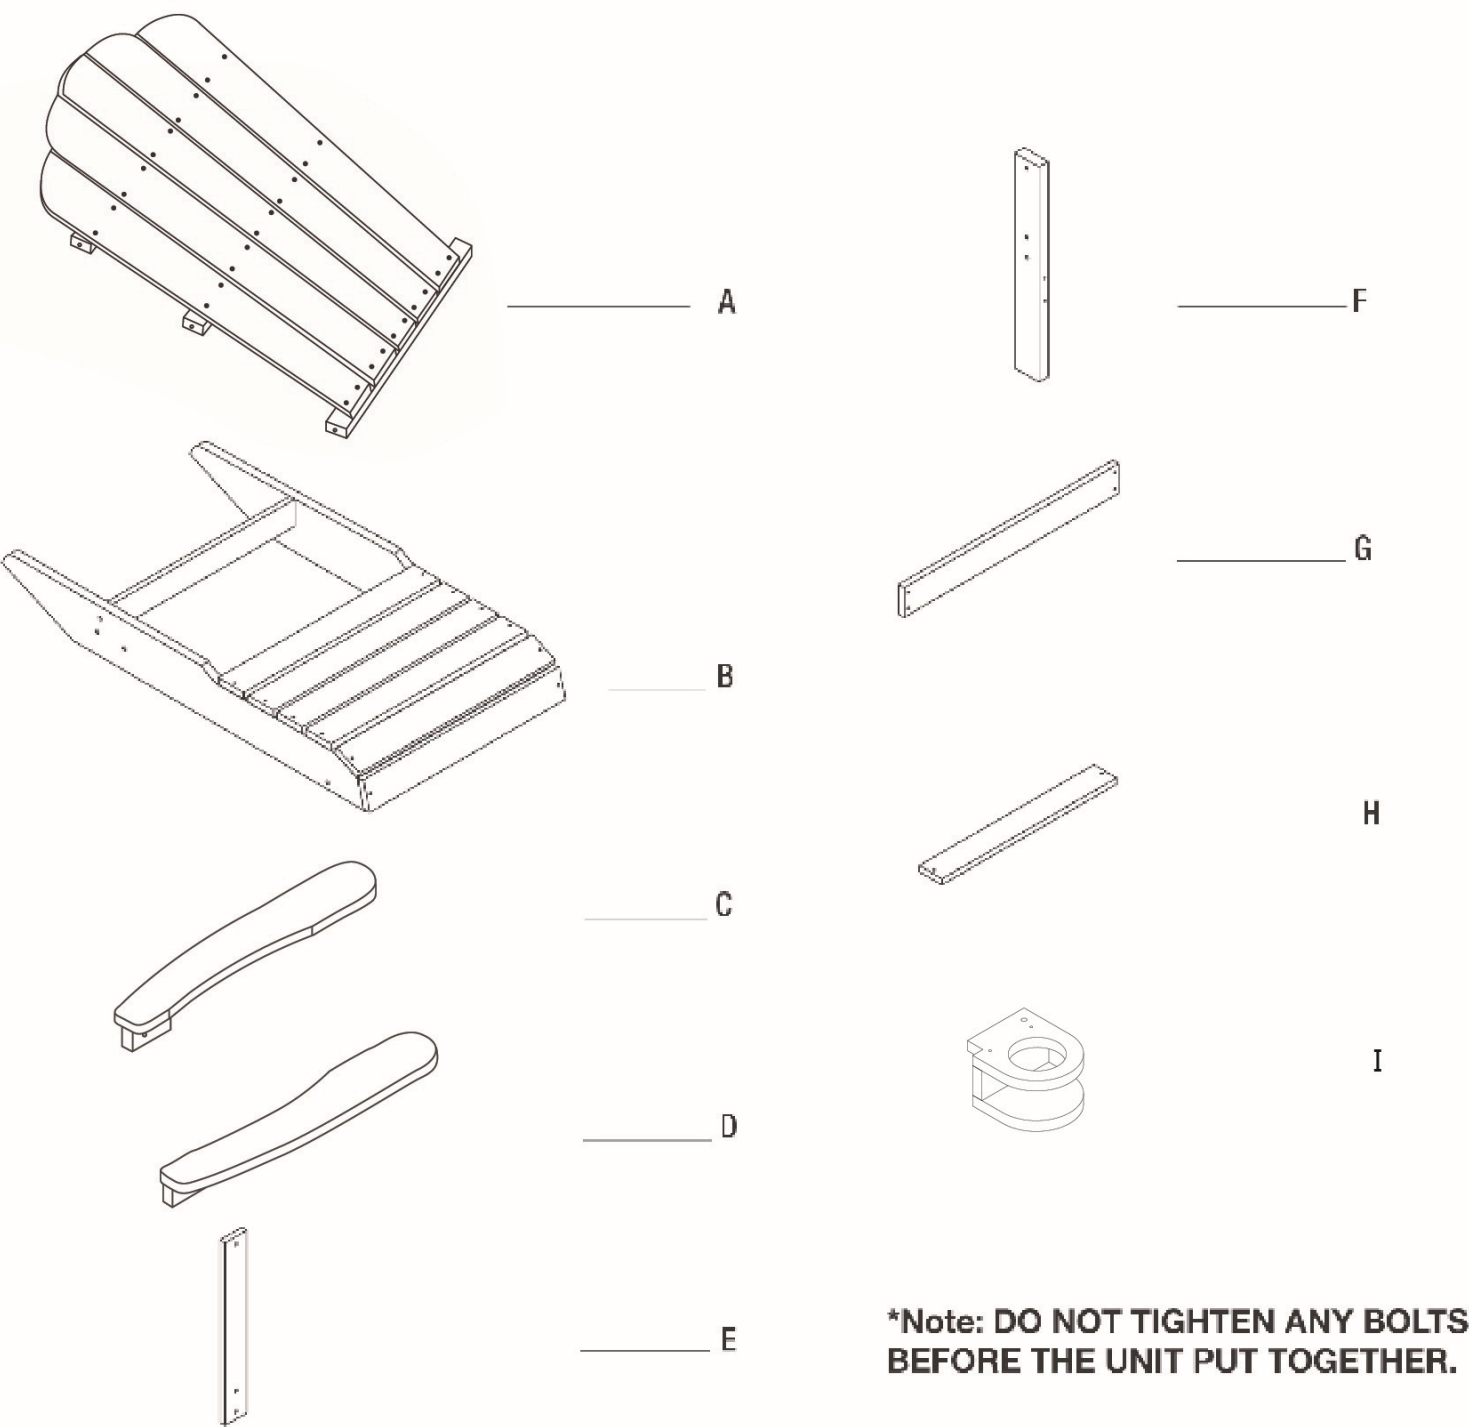


**\*Note: DO NOT TIGHTEN ANY BOLTS BEFORE THE UNIT PUT TOGETHER.**

Part	Description	Quantity	Part	Description	Quantity
A	Back	1	F	Front Legs	2
B	Seat	1	G	Front Leg Cross Beam	1
C	Left armrest	1	H	Rear Seat Slat	1
D	Right armrest	1	I	Cup Holder	1
E	Vertical Back Support	2			

*Thank you for your purchase!*


## Step 1 Attaching the rear seat slat

- Attach the rear seat slat (H) to the seat (B) with screws (AA).

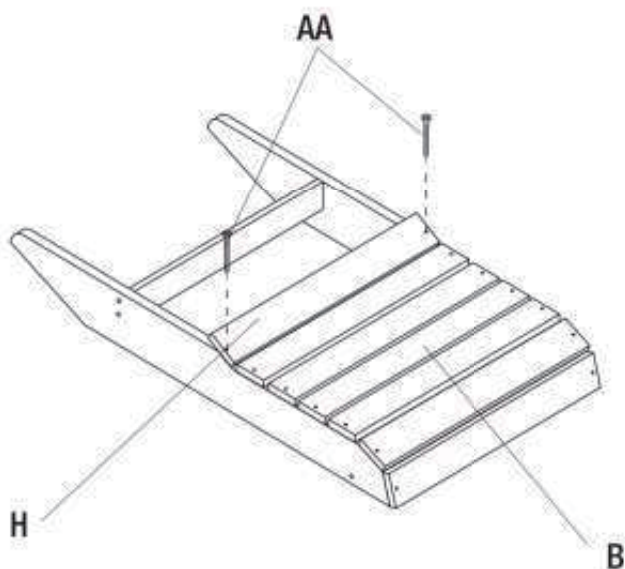


## Step 2 Attaching the front legs

- Attach the front legs (F) onto the seat (B) with Bolts (DD). Attach Vertical Back Support (E) onto the Seat with Bolts (EE).

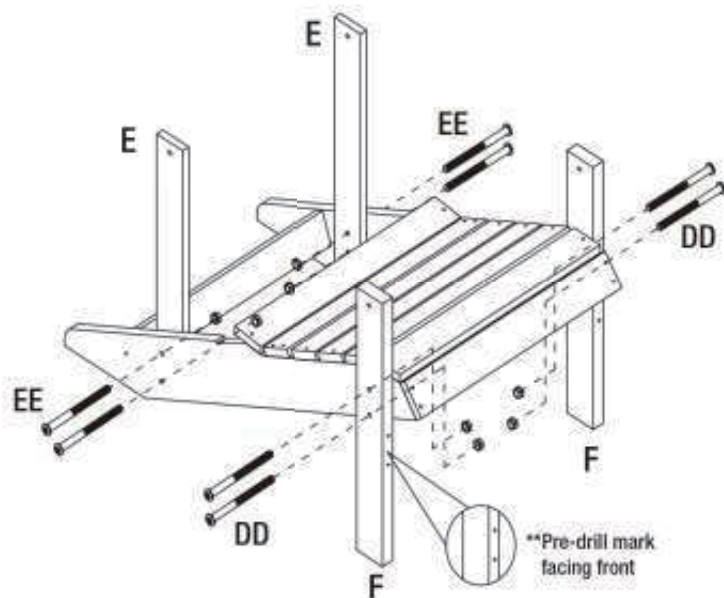


## Step 3 Attaching the cross board

- Attach the Cross Beam (G) to the front legs (F) with screws (AA).

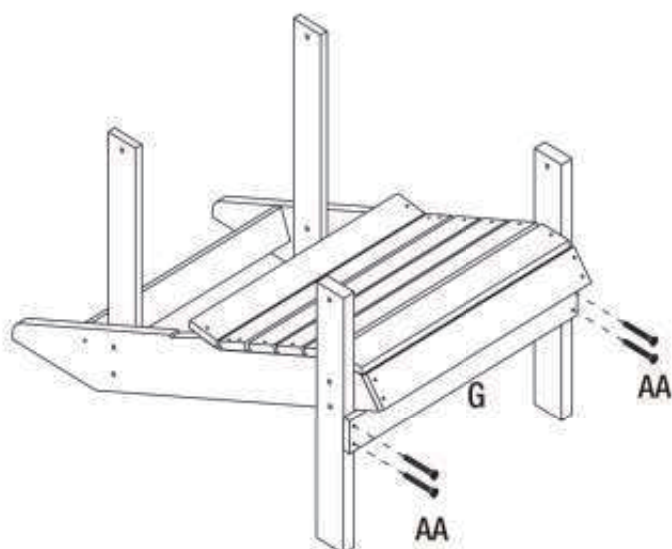

## Step 4 Attaching the Hinge



- Attach the Back (A) to the Seat (B) with Bolts (BB). Attach the Armrest (C & D) to the Front Legs with Bolt (DD). Attach the Armrest to the Vertical Back Support (E) with Bolt (CC).

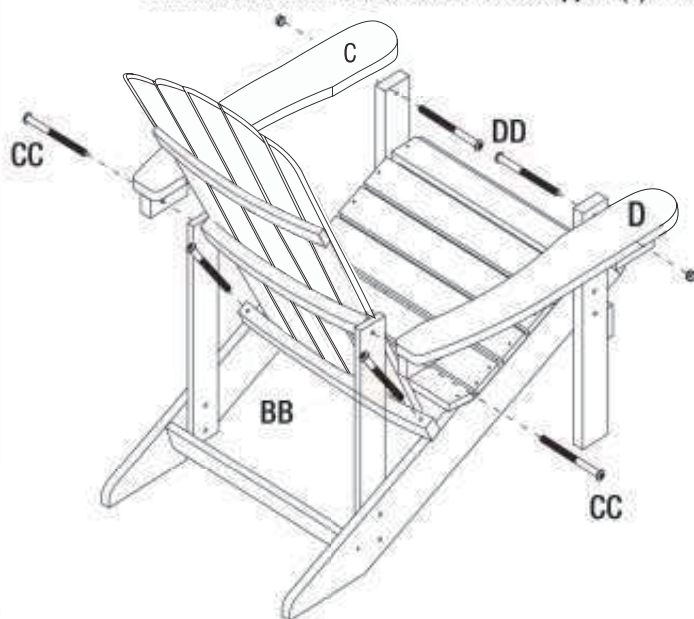

*Thank you for your purchase!*

## Step 5 Attaching the cup holder

Attach the Cup Holder (I) to the Right Armrest (D) with Bolt (FF)

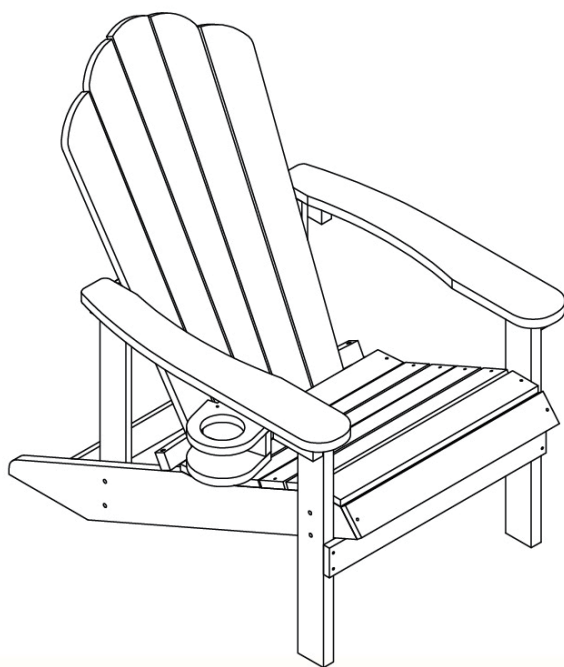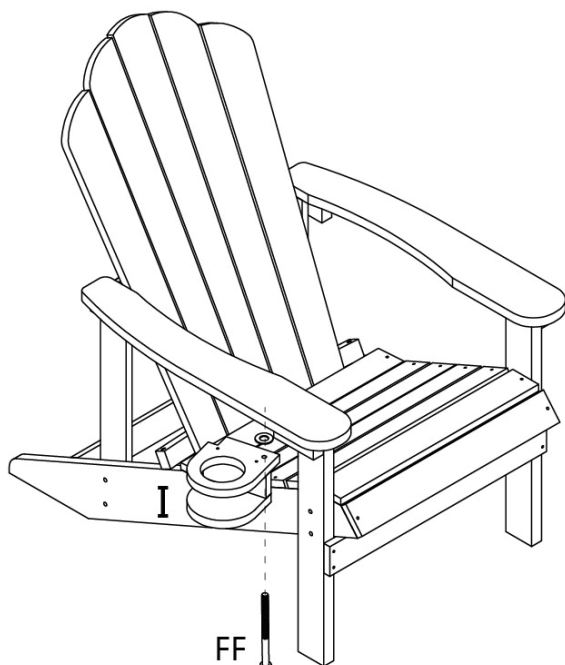

.....

*Thank you for your purchase!*