

Waterproof Shower Niche Installation

Our niches are made of high density closed cell foam that is 100% waterproof. These niches can be installed before or during tile installation.


STEP 1

Determine desired location and trace your niche dimensions, including outside dimensions, onto the wall backer board making sure the lines are level and plumb. Cut and remove the wall backer board such that the niche will be supported on both sides of the studs or other wall framing.

STEP 2

Place a bead of the recommended joint sealant/adhesive on the stud frame where the lip of the niche will sit. Insert your waterproof niche into cut location. Use the recommended joint sealant/adhesive to around all stud framing and backer board seams. Use the recommended screws and washers to fasten to the wall panels, placing these fasteners approximately $\frac{1}{4}$ " from the edges of the niche. Fasten all corners and limit fastener spacing to 12" o.c.

Note: The exact order of installation can vary, provided all fastening and waterproofing measures are performed properly.

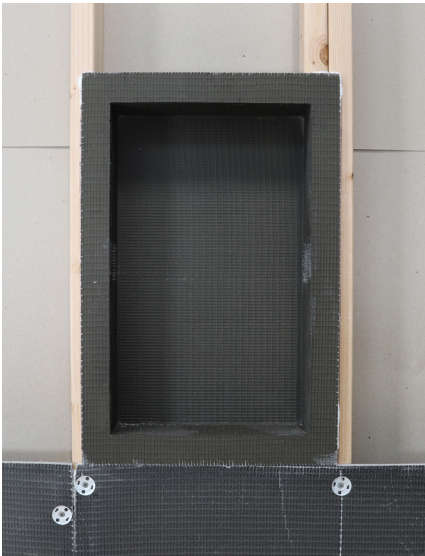

MADE IN EGYPT / HECHO EN EGIPTO
DISTRIBUTED BY: / DISTRIBUIDO POR:

THE W.W. HENRY COMPANY
400 ARDEX PARK DRIVE
ALQUIPPA, PA 15001
WWW.WWHENRY.COM