
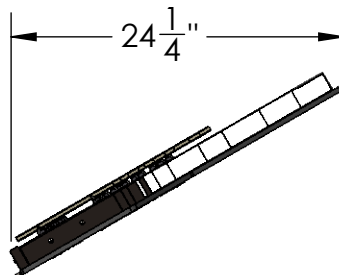
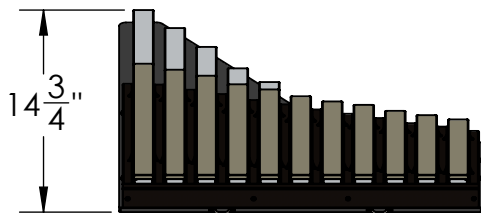
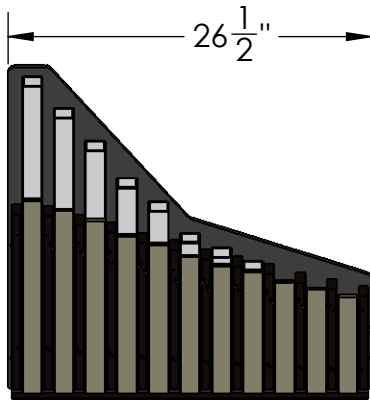


PIPER

A great instrument to play improvisational rhythms.
This Weenote features fiberglass bars providing
a contrast in tone to the other 2 instruments
in the Weenotes ensemble.


C MAJOR PENTATONIC

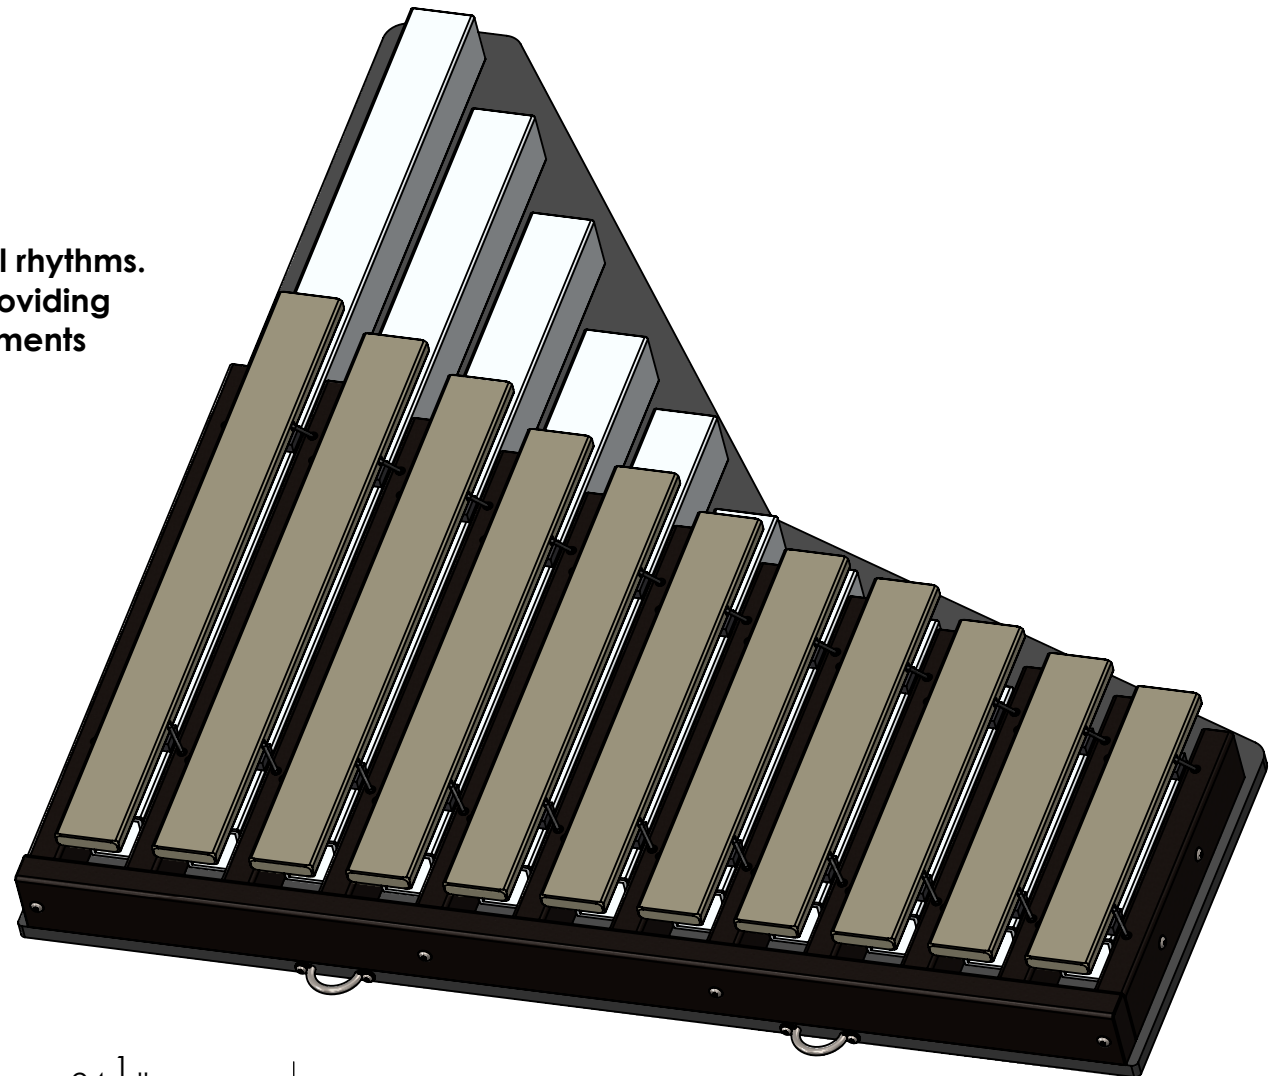

MOUNTING OPTION IDENTIFICATION:

This instrument is offered with various mounting options. Identify your option below and follow installation instructions on the following sheets.

Recycled Post In-Ground
Sheet 3 of 6

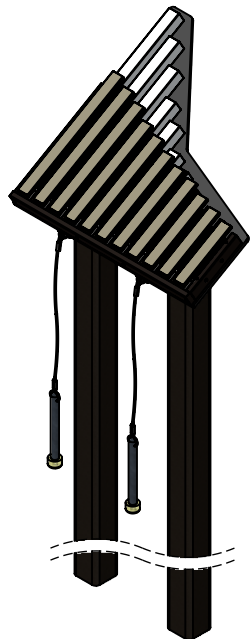


Parts List:

- ☐ Piper Instrument Assembly (1)
- ☐ In-Ground Post (2)
- ☐ 1 1/4" Tamper-Resistant Screw (10)
- ☐ Security Driver (1)
- ☐ Dual Drive #2 Screw (8)
- ☐ Holster (2)

Weights:

Boxed Instrument Weight, 33 lbs.
Boxed Post Weight, 57 lbs.

Steel Post In-Ground
Sheet 3 of 6

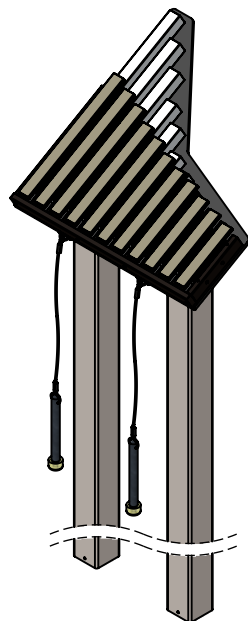


Parts List:

- ☐ Piper Instrument Assembly (1)
- ☐ In-Ground Post (2)
- ☐ 1" Tamper-Resistant Screw (10)
- ☐ 10-24 Tap (1)
- ☐ 11/64" Drill Bit (1)
- ☐ Security Driver (1)
- ☐ Dual Drive #2 Screw (8)
- ☐ Holster (2)

Weights:

Boxed Instrument Weight, 33 lbs.
Boxed Post Weight, 72 lbs.

Recycled Post Surface Mount
Sheet 4 of 6

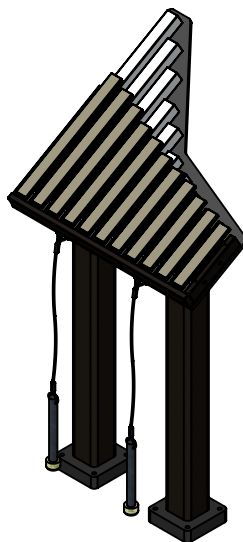


Parts List:

- ☐ Piper Instrument Assembly (1)
- ☐ Surface Mount Post (2)
- ☐ 1 1/4" Tamper-Resistant Screw (10)
- ☐ Security Driver (1)
- ☐ Ø3/8" x 5" Anchor Bolt (8)
- ☐ Plastic Anchor Cap (8)
- ☐ Dual Drive #2 Screw (8)
- ☐ Holster (2)

Weights:

Boxed Instrument Weight, 33 lbs.
Boxed Post Weight, 35 lbs.

Steel Post Surface Mount
Sheet 4 of 6

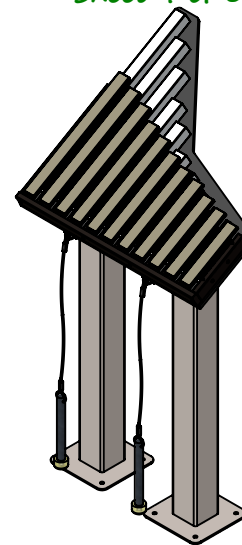


Parts List:

- ☐ Piper Instrument Assembly (1)
- ☐ Surface Mount Post (2)
- ☐ 1" Tamper-Resistant Screw (10)
- ☐ 10-24 Tap (1)
- ☐ 11/64" Drill Bit (1)
- ☐ Security Driver (1)
- ☐ Ø3/8" x 3 3/4" Anchor Bolt (8)
- ☐ Plastic Anchor Cap (8)
- ☐ Dual Drive #2 Screw (8)
- ☐ Holster (2)

Weights:

Boxed Instrument Weight, 33 lbs.
Boxed Post Weight, 40 lbs.

Recycled Post Portable
Sheet 5 of 6

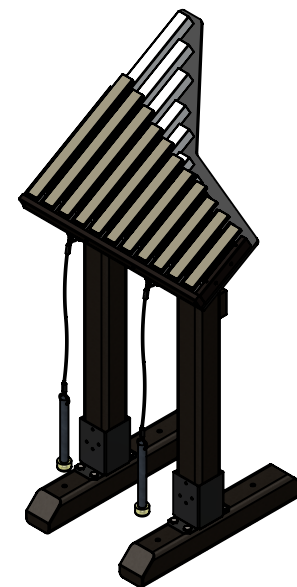

Parts List:

- ☐ Piper Instrument Assembly (1)
- ☐ Portable Post (2)
- ☐ 1 1/4" Tamper-Resistant Screw (10)
- ☐ Security Driver (1)
- ☐ Ø3/8" x 12" Stake (4)
- ☐ Dual Drive #2 Screw (8)
- ☐ Holster (2)

Weights:

Boxed Instrument Weight, 33 lbs.
Boxed Post Weight, 45 lbs.

RECYCLED AND STEEL POST IN-GROUND INSTALLATION PROCEDURES

Step 1: Excavate two 10" diameter hole, 36" deep, and 13 3/4" on center at the installation location. Contractor can modify post to desired height.

Post Length = Frost Depth (36" Recommended) + Finished Height (Refer to Height Guideline)

Step 2: Lower the posts into the excavated holes.

Step 3: Refer to sheet 6 for installation of instrument to posts.

Step 4: Verify the correct placement, levelness, plumbness, and finished height of the instrument. Also check for sufficient clearance around the instrument. A 36" radius is recommended around the instrument for wheelchair accessibility, however this is not required for instrument function. Instrument may be installed next to a wall or in a variety of different configurations.

Step 5: Last pour concrete around the posts. It is recommended to brace the instrument to hold it rigid while the concrete cures. Leave to set according to the concrete manufacturers guidelines. Approximately (4) 80lb. bags will be needed.

FINISHED HEIGHT GUIDELINE

Ages 3-5, 22"

Ages 5-7, 27"

Ages 7-11, 32"

Adult, 36"

10" Excavated
Hole W/Concrete
Fill

13 3/4" On
Center




Finished Height

Frost Depth

Post Length


RECYCLED AND STEEL POST SURFACE MOUNT INSTALLATION PROCEDURES

- Step 1:** Determine installation location. Verify concrete footing is a minimum of 6" thick. If the concrete pad is at an angle, steel washers are required to act as shims. (Shims not provided)
- Step 2:** Stand the surface mount post upright onto the concrete pad with a 13 3/4" offset on center. Mark the center of the holes on the surface mount plates. After you have made your marks, set aside the posts in order to drill for anchor holes. With a hammer or rotary drill, drill through the concrete at marked locations. Drill to a minimum depth of 4". (A 3/8" masonry drill bit will be needed)
- Step 3:** Place the surface mounted posts back over the drilled out holes. Insert provided anchor bolts into aligned holes. Position anchor nut so that it is flush with the top of the bolt. Pound anchor bolts into the hole until the anchor washer is flush with the post base. Tighten anchor bolts until they are snug. Cover remaining bolt sections with provided plastic caps.
- Step 4:** Refer to sheet 6 for installation of instrument to posts.
- Step 5:** Verify the correct placement, levelness, plumbness, and finished height of the instrument. Also check for sufficient clearance around the instrument. A 36" radius is recommended around the instrument for wheelchair accessibility, however this is not required for instrument function. Instrument may be installed next to a wall or in a variety of different configurations.

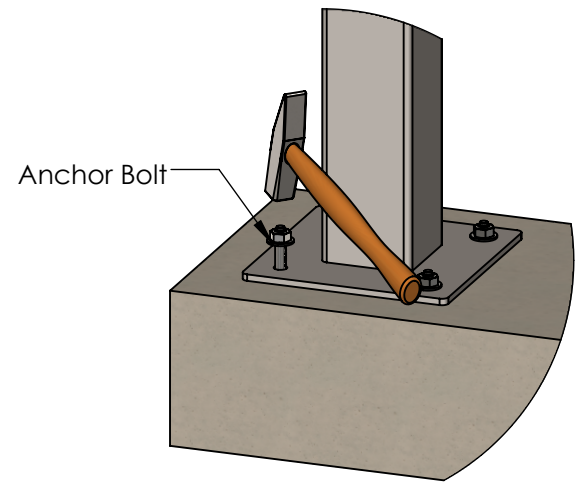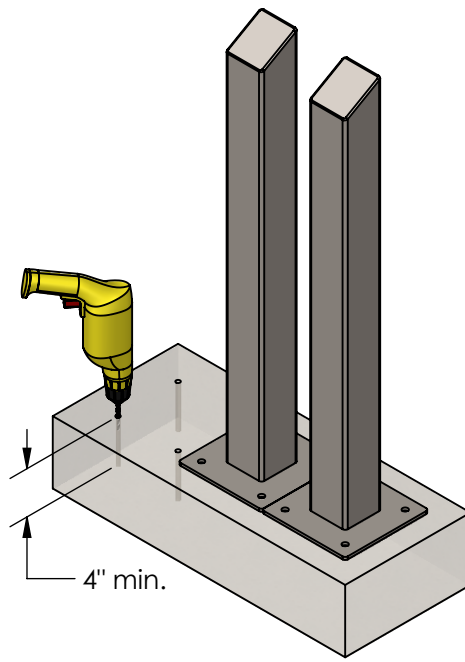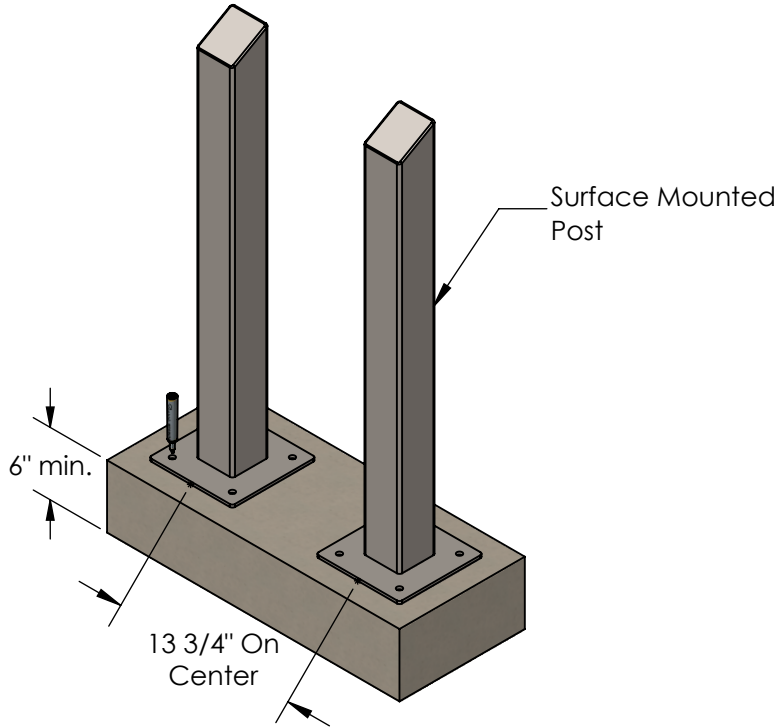

RECYCLED POST PORTABLE INSTALLATION PROCEDURES

- Step 1:** With Holsters installed onto the Instrument (see sheet 6 for Holster installation instructions) place the Portable Posts to a 13 3/4" offset on center.
- Step 2:** Place the Instrument Assembly onto the Portable Posts. Verify correct placement, levelness, and plumbness of posts.
- Step 3:** Refer to sheet 6 for installation of instrument to posts.
- Step 4:** Install the Portable Posts Brace 6" below the backside of the Holsters. Fasten down using the provided T25 2" Screws.
- Step 5:** Screw heads should be flush with the outer surface of the Brace when properly installed. Drive screws in slowly to prevent stripping.
- Step 6:** $\phi 3/8"$ x 12" Stakes are provided and can be installed through the feet of the Portable Posts to prevent Instrument from moving around during use.

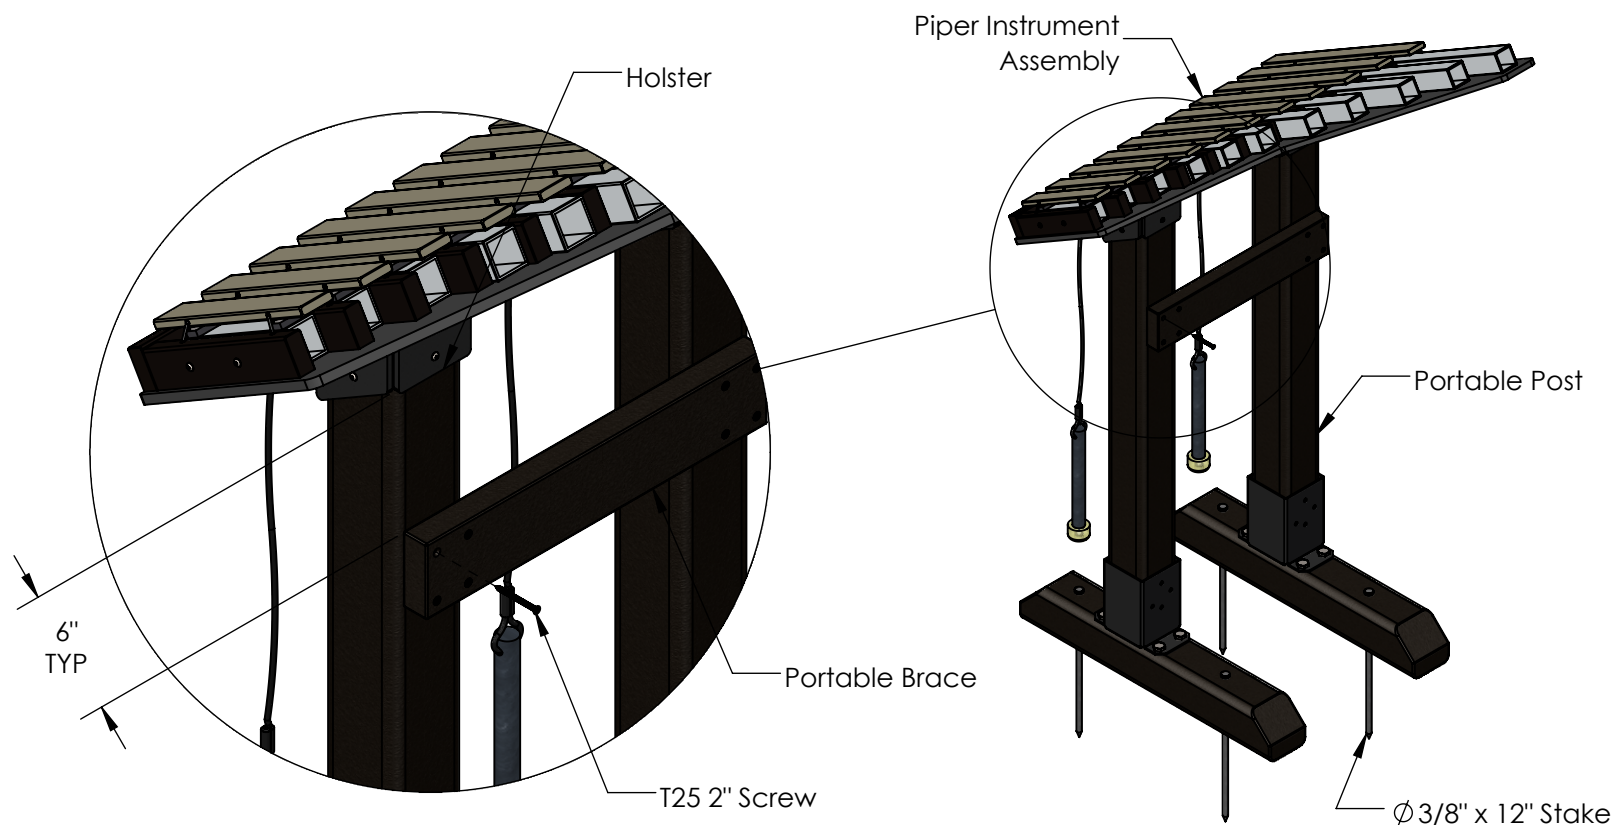

HOLSTER AND INSTRUMENT TO POST INSTALLATION PROCEDURES

Step 1: Align Holsters to the instrument back with the corresponding arrows and letters. Fasten Holster to back with the provided dual drive screws. Backs are predrilled. Screw heads should be flush with the Holster surface when properly installed. Holster must also be flush along the back. An extended square drive or Phillips will be needed. Drive screws in slowly to prevent stripping.

Step 2: (Recycled Post Only) With two people, situate the instrument onto the posts. Predrill 1/8" pilot holes into the posts through the existing holes on the instrument holster. Fasten the instrument to the posts with the provided 1 1/4" tamper-resistant screws and security driver.

(Steel Post Only) With two people, situate the instrument onto the posts. Predrill 11/64" pilot holes into the posts through the existing holes on the instrument holster. Next tap the holes with the provided 10-24 Tap, the Tap may be used with a cordless drill. Last fasten the instrument to the posts with the provided 1" tamper-resistant screws and security driver.

