


Assembly Instructions

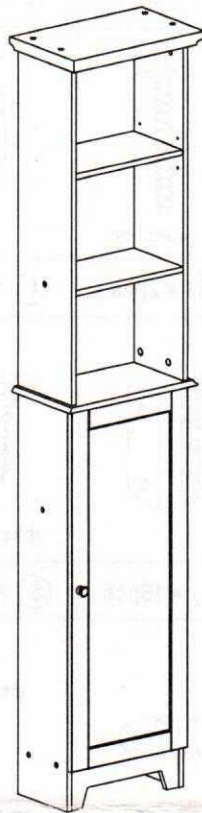

Dimensions

Width-35cm
Depth-20.5cm
Height-167cm
Made in China





Note:Each "Cam Insert"(part B) has an arrow stamped on the top of the Cam at the end of one of the cuts to accept the screwdriver.

When you place the eight Cam inserts (B) into the holes on each panel,make sure the arrow is pointing toward the hole in the edge of the panel.This will allow the one inch threaded post (part A) to be inserted into the Cam insert correctly.


Turn each Cam insert clockwise with a screwdriver, normally about $\frac{1}{2}$ turn, to pull the panels together.

1 × 1pc	2 × 1pc	3 × 1pc	4 × 1pc	5 × 1pc	7 × 1pc	9 × 1pc
				6 × 1pc	8 × 1pc	10 × 1pc
11 × 1pc	12 × 1pc	13 × 1pc	14 × 1pc	15 × 1pc	16 × 2pcs	


Assembly Instructions

(A) × 4pcs	(B) × 8pcs	(C) × 12pcs	(D) × 8pcs	(E) × 12pcs	(F) × 1pc	(G) × 1pc
			 Φ6x45mm			
(H) × 6pcs	(I) × 2pcs	(J) × 8pcs	(K) × 2pcs	(L) × 12pcs	(M) × 2pcs	(N) × 2pcs
 Φ3x16mm				 Φ3x12mm	 Φ4x35mm	
(O) × 1pc	(P) × 1pc	(Q) × 4pcs	(R) × 16pcs	(S) × 1pc	(T) × 4pcs	
					 Φ6x65mm	

STEP 1

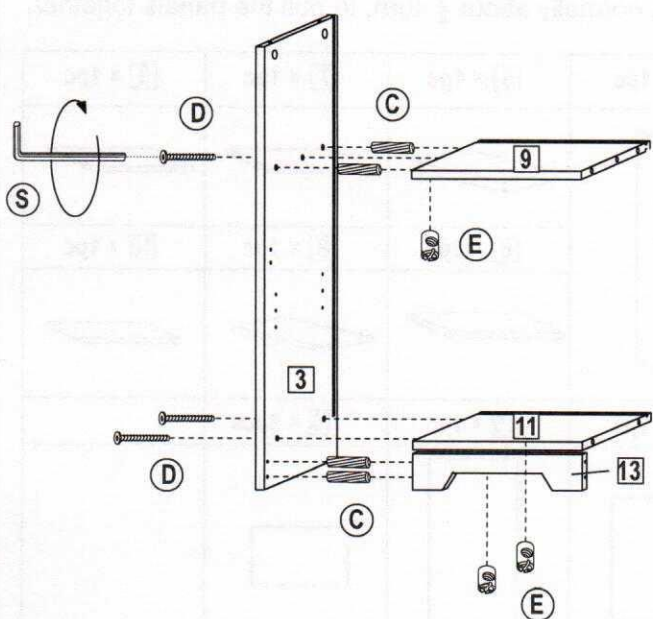


STEP 2

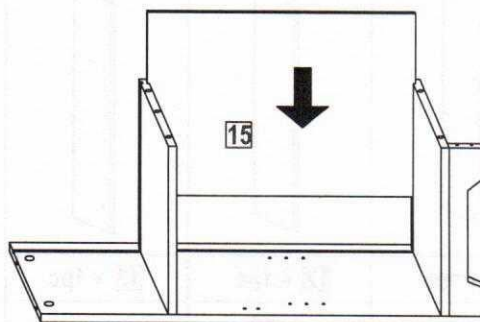


Assembly Instructions


STEP 3

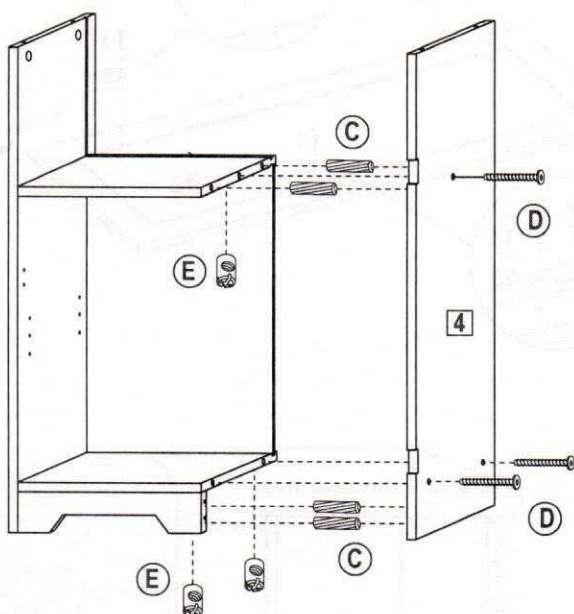


STEP 4

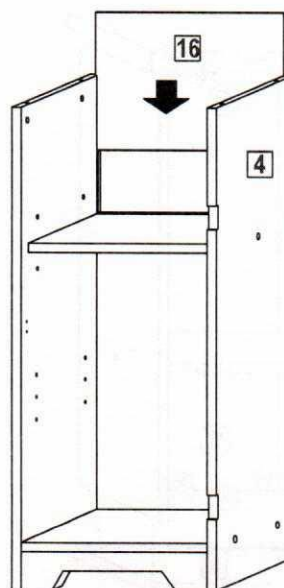

STEP 5




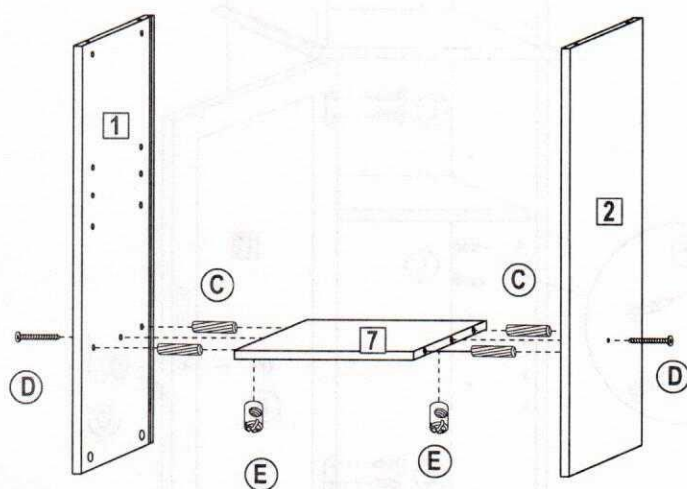


STEP 6



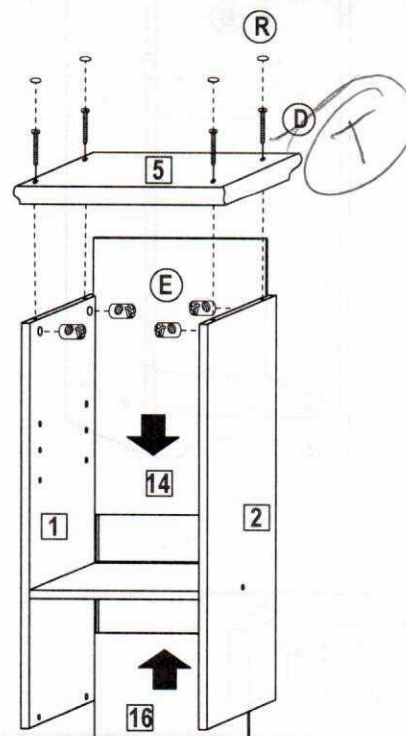


Assembly Instructions

STEP 7

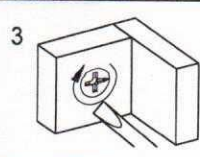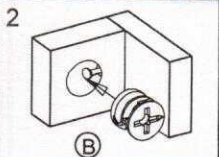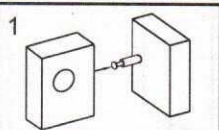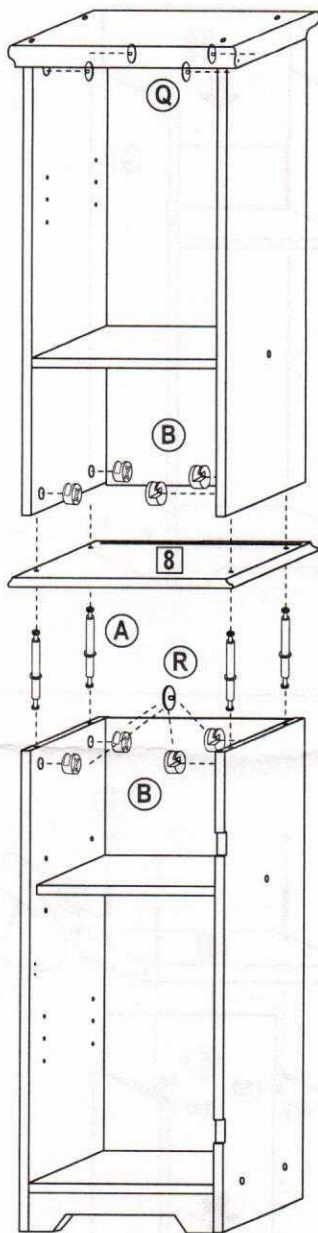


STEP 8

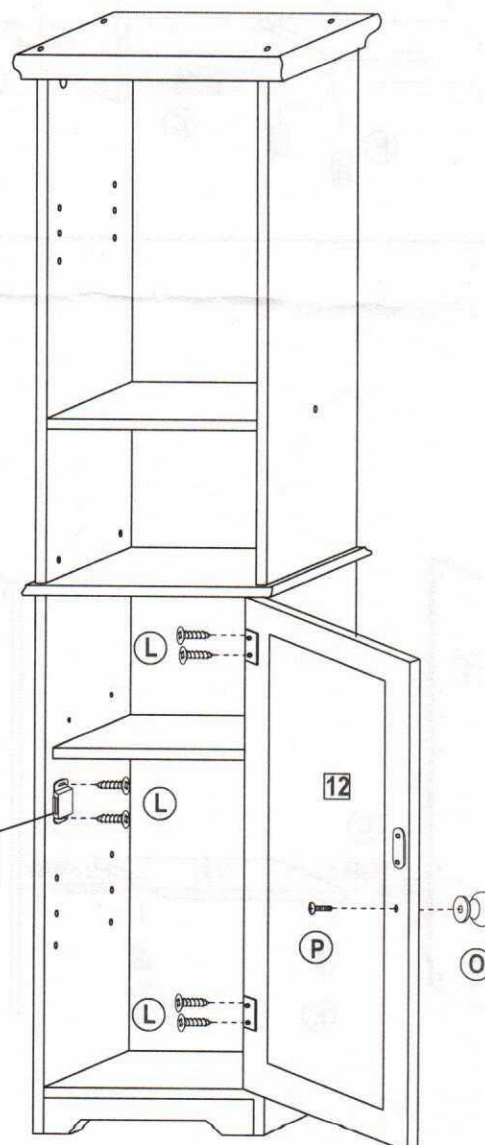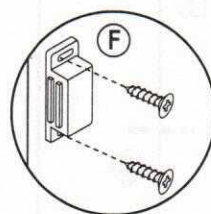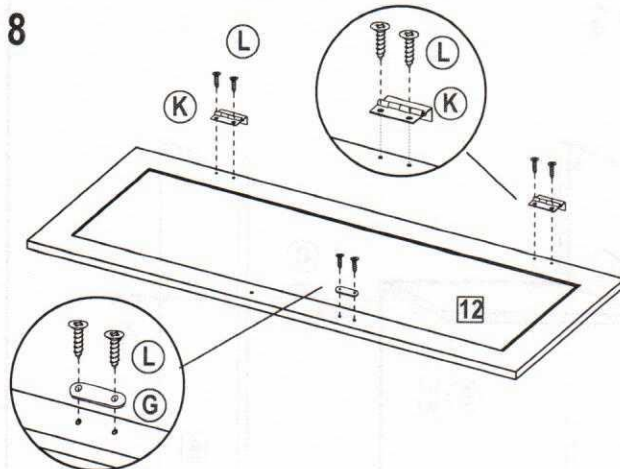


Assembly Instructions

STEP 9

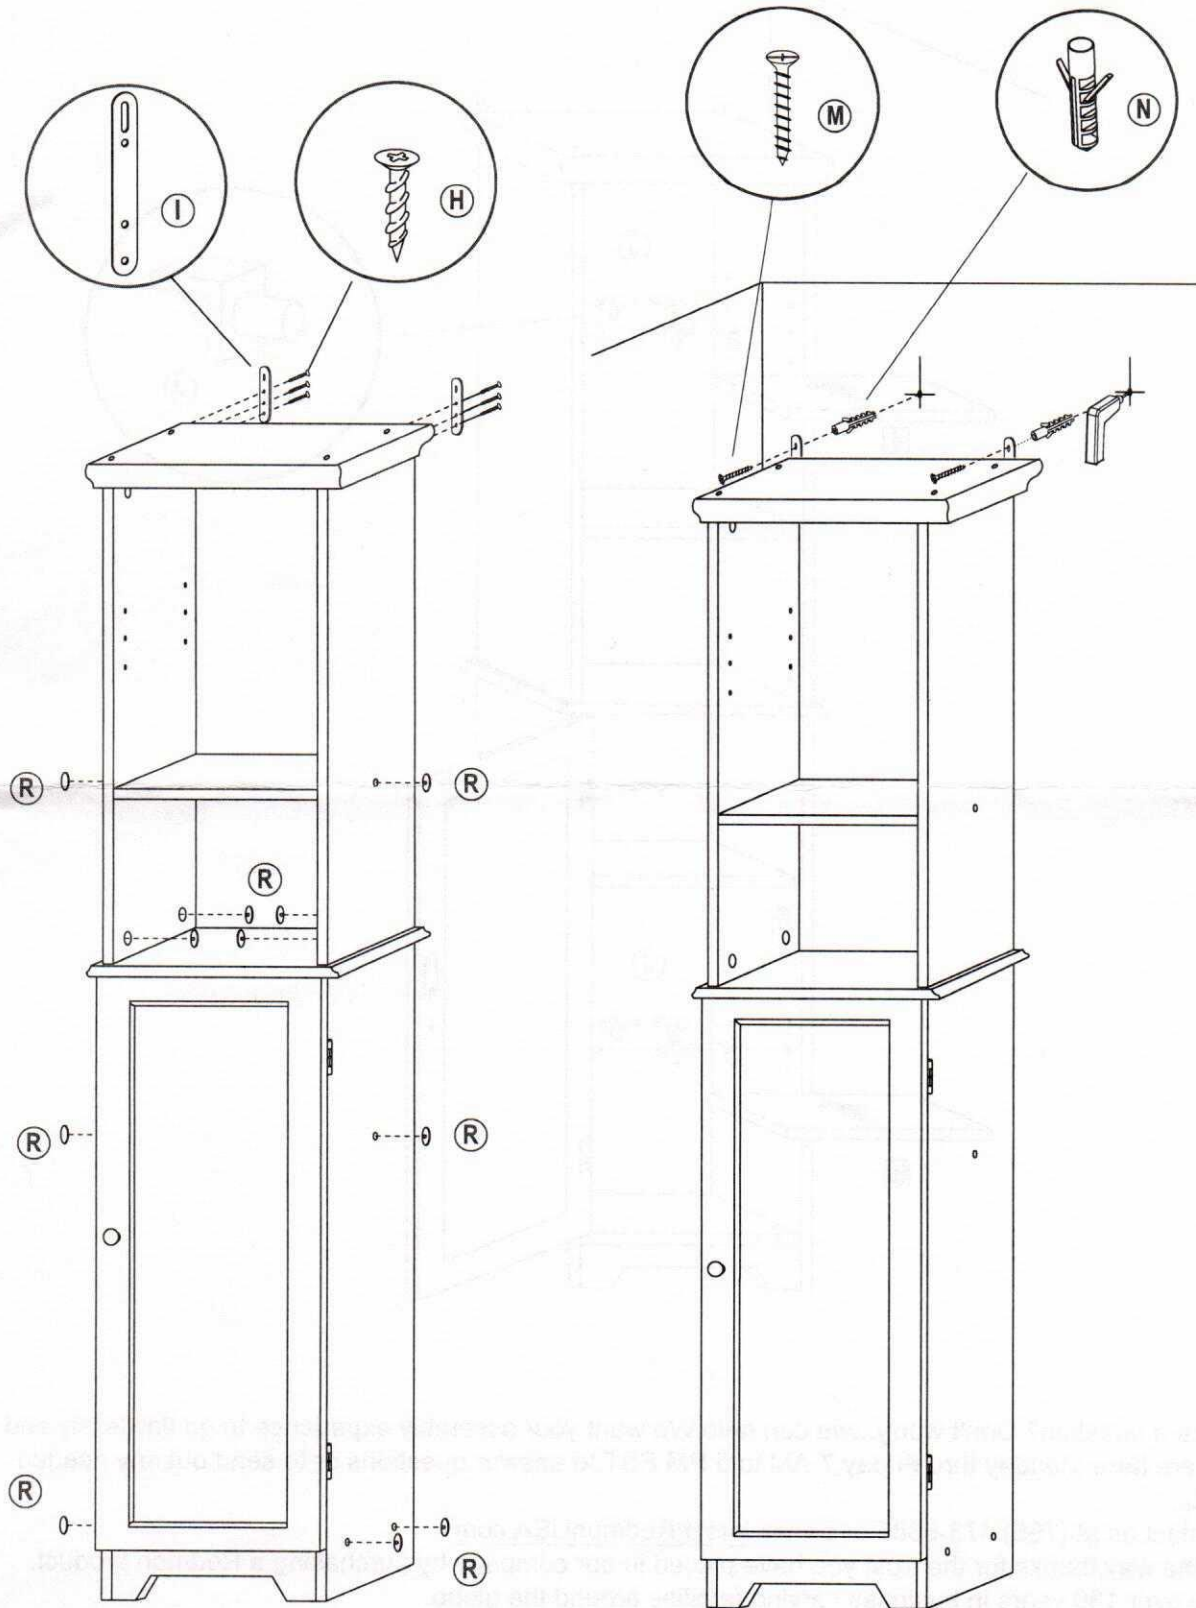

Assembly Instructions

STEP 10

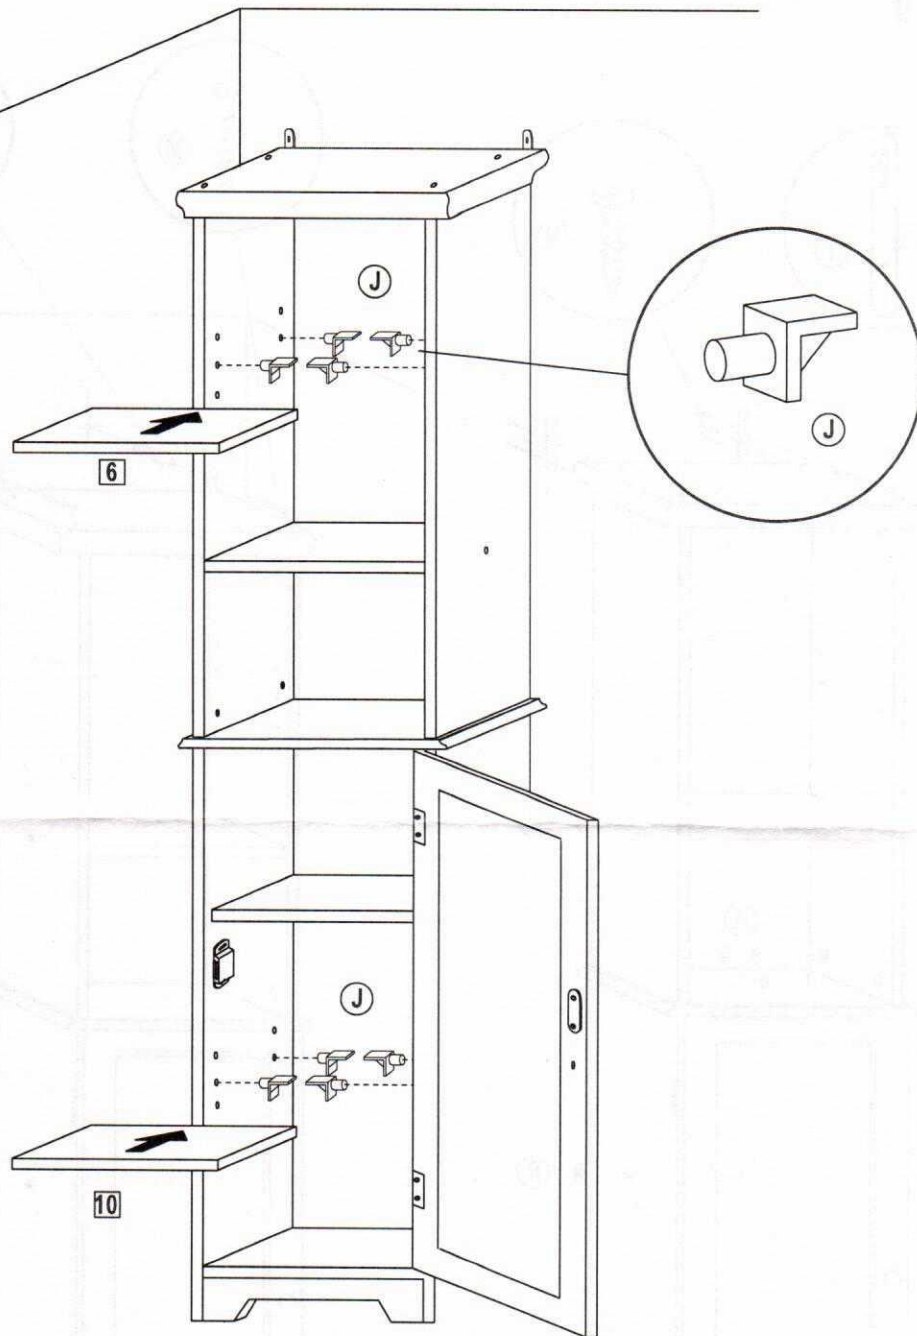

Have a question? Don't worry...we can help. We want your assembly experience to go flawlessly, and we are here Monday thru Friday, 7 AM to 5 PM EST, to answer questions or to send out any needed parts.

Contact us at (765) 473-6683 or e-mail info@RedmonUSA.com

By the way, thanks for the trust you have placed in our company by purchasing a Redmon product, now over 130 years in business serving families around the globe.

Redmon Company

Established 1883

www.RedmonUSA.com