


WRAP ROD


Installation Instructions

You will need the following tools:
Pencil - Drill - Screwdriver - Step Ladder


Wood walls

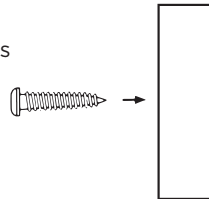


Other walls

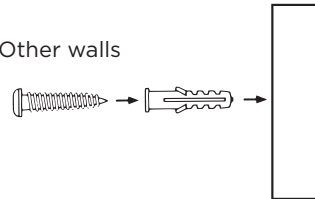


1. Loosen the screws on the end of both pole sections to release the end plates.

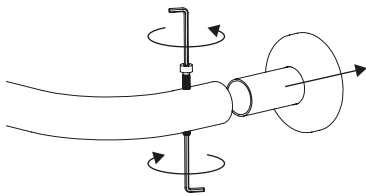


5. Slide each curtain on each half of the extendable pole. Slide the smaller pole inside the larger one.

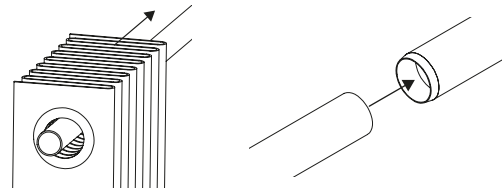


2. Identify the larger and smaller end plates. Note on which side of the window each one will be mounted as they will have to match their respective pole ends.

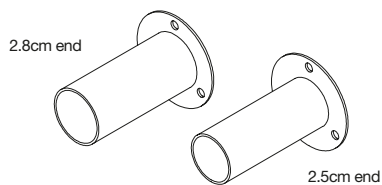


6. Place the larger and smaller cover plates onto their respective end plates.

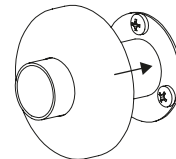


3. Position each end plate and use it as a guide to mark the screw positions. If using a centre bracket, mark the top screw position 1cm over the horizontal line and the bottom screw 2cm under the line.

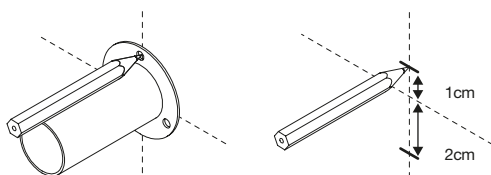



7. Place the pole in position onto the end plates making sure that the larger and smaller ends of the poles are facing their respective end plates. If using a center bracket, ensure that the cup is supporting the pole (adjust the bracket if necessary).

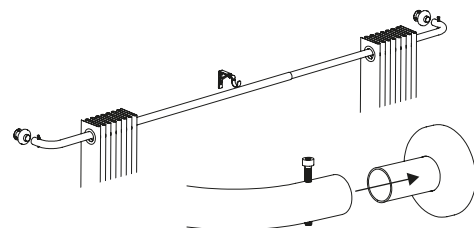

4. Drill the holes and secure the end plates with the appropriate fixings. If you are unsure, consult your local DIY store.

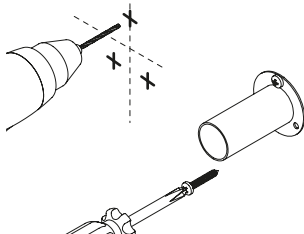

8. Secure the pole on the end plates by tightening the short grub screw underneath the pole. If using the center bracket, tighten the grub screw at the back of the cup.

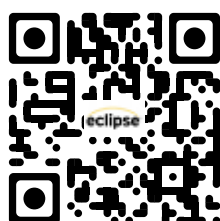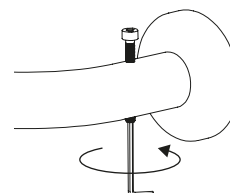

For helpful videos & more information visit
eclipsecurtains.com

or scan this QR code with your smartphone