

SUN ZERO®

CORDLESS ROLLER SHADE Installation Instructions








Pat. US 10,364,602

GETTING STARTED:

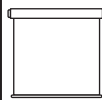Please read all instructions before attempting to install your shade. Carefully unpack your shade and check to make sure you have the following parts. If any part is missing or damaged, do not attempt to assemble or install the shade.

PARTS INCLUDED:


				
Shade (a)	Bracket (b)	Bracket Screw (c)	Wall Anchor (d)	Handle Pull (f)
1	2	2	2	1

YOU WILL NEED THE FOLLOWING TOOLS:




OUTSIDE MOUNT OPTION:

Shades are mounted on the wall surface above opening or casing. Ideal for window with little or no window depth.

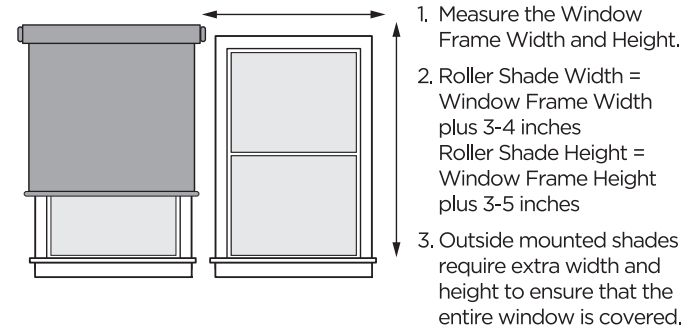

INSIDE MOUNT OPTION:



Provides a neater, more tailored look without hiding your decorative window frame.

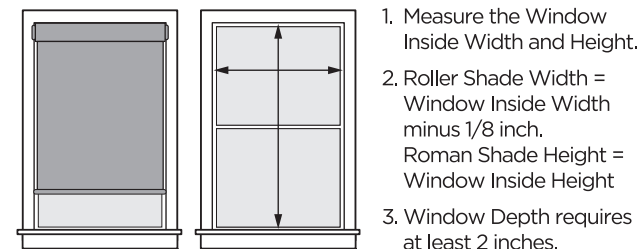

MOUNTING BRACKETS:


The Roller Shade (a) can be mounted two ways; either Inside (Ceiling Mount) or Outside (Wall Mount) of your frame using the provided Brackets (b).

You will need to leave no more than 2 inches of space from the ends of the Headrail (e) to properly mount the Brackets (b). ONLY use the Wall Anchors (d) if you are mounting the brackets onto dry wall.

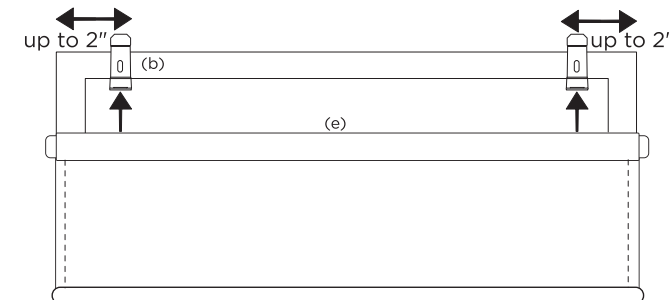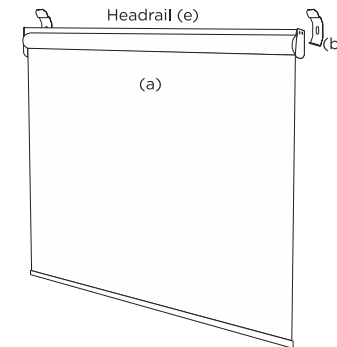


1A. INSTALLING YOUR BRACKETS: OUTSIDE MOUNT

Ensure that the Brackets are installed outside and above the window frame starting from no more than 2" in from the end of the headrail. Using a 13/64 drill bit, drill a hole for the bracket screws. With a light weight hammer, insert the Wall Anchors (d) until flush with the surface. Fix the Brackets (b) on the wall and tighten the bracket screws (c) until securely fastened to the wall.

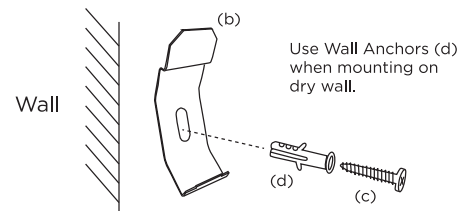


1B. INSTALLING YOUR BRACKETS: INSIDE MOUNT

Fix the Brackets (b) onto the ceiling (top) inside the window frame, leaving a depth of 3 inches or more from the window. Ensure that the Brackets are moved in 3-5 inches from the sides of the window frame. Then place the Bracket Screws (c) through the bracket holes and tighten until securely fastened to the top of the window frame.

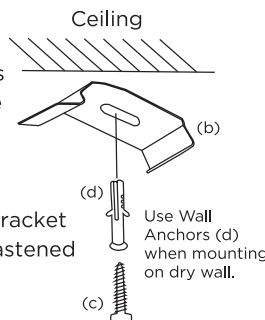


2. FITTING THE SHADE & SECURING THE HEADRAIL:

Place the Headrail (e) onto the Brackets (b) by placing the channel edge of the Headrail (d) onto the lip of the bracket and then push to snap the Headrail into place. There should be an audible click, when the Headrail is secured.


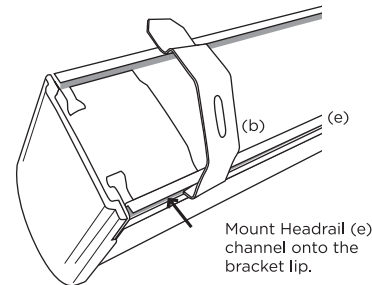


Push to snap the Headrail (e) into place until you hear an audible click.

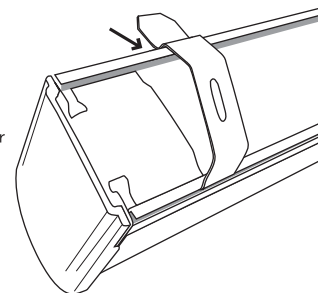


HANDLE PULL INSTALLATION:

Slide the handle pull (f) over the Slat Bar located at the bottom edge of your shade as shown below.

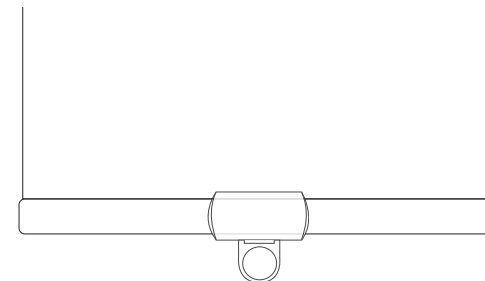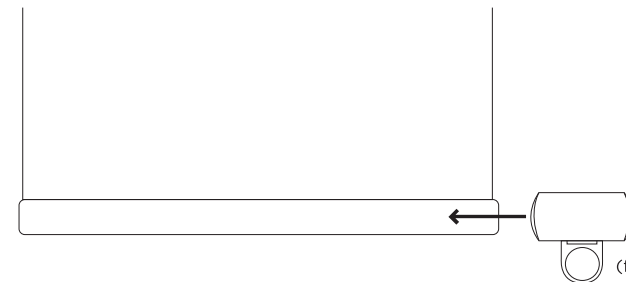


OPERATING INSTRUCTIONS:

To Lower the Shade: Pull the bottom edge of the shade to lower the shade until the desired height. Pull the shade again to hold the shade in place.

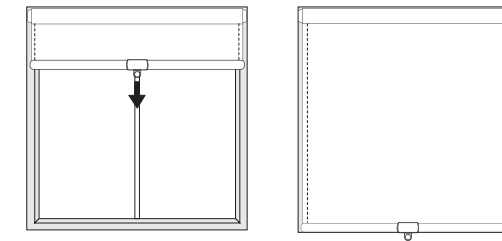

To Raise the Shade: Pull the bottom edge of the shade twice to release the shade. Lift to the desired height then pull the shade again to hold the shade in place.

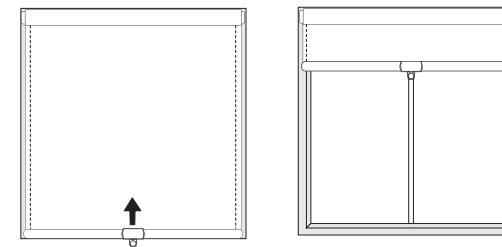

Care Instructions: Spot clean only.

For inquiries, email: CustomerService@Lichtenberg.com