





EAC Series Undereave Soffit Vent

EASY INSTALLATION INSTRUCTIONS

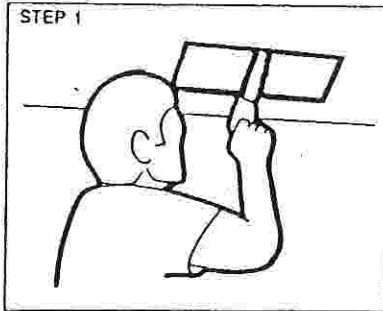

STEP 1
Select area for installation, make sure there are no obstructions or hidden wiring. Cut the appropriate sized hole with a sabersaw or keyhole saw.

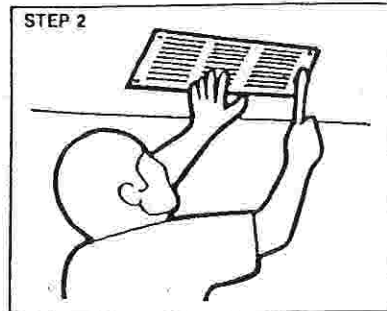

STEP 2
Center over the opening with the louvers facing toward the house and nail or screw in place.

Model Number	Opening Size
EAC 16-8	15" x 7"
EAC 16-6	15" x 5"
EAC 16-4	15" x 3"

DETERMINE THE RIGHT AMOUNT OF VENTILATION FOR YOUR HOME

Did you know that most homes aren't properly ventilated? That means relatively little intake and exhaust ventilation in the attic.

Effective ventilation, according to industry test, requires 1.2 square inches of free ventilating area square foot of attic. This provides a uniform air flow of .8 cubic feet per minute per square foot of attic.

MODEL NO.	White	Brown	Dimensions	Construction	NFA (Sq. In.)
EAC16X4	EAC16X4W	EAC16X4BR	16" x 4"	Screened Aluminum	28 3/2
EAC16X8	EAC16X8W	EAC16X8BR	16" x 8"	Screened Aluminum	65



Proudly Made in The U.S.A.