

Installation Suggestions for Your Fence

Build on 3-Rails

Use 3-rails in new construction or add a 3rd rail when remodeling.

A: Top rail should be 6 inches from the top of fence.

B: Bottom rail should be 6 inches from the bottom of fence.

C: Center the middle rail between top and bottom rail.


Construcción con 3 travesaños

Utilice 3 travesaños en la nueva construcción o añada un tercer travesaño al realizar una reforma.

A: el travesaño superior debe estar a 6 pulgadas (15,24 cm) de la parte superior de la valla.


B: el travesaño inferior debe estar a 6 pulgadas (15,24 cm) de la parte inferior de la valla.

C: el travesaño central debe estar entre el travesaño superior y el inferior.

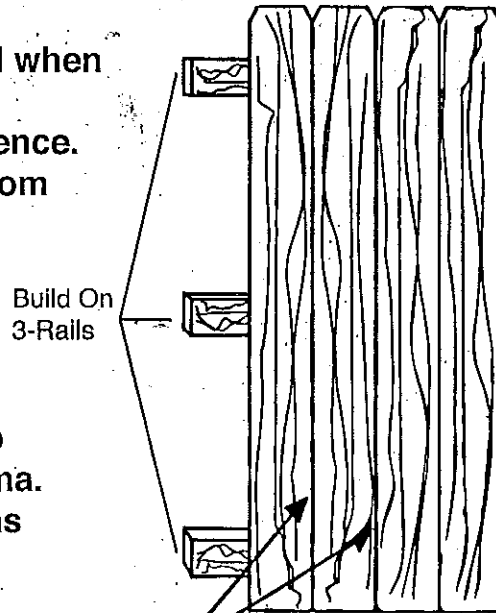

Allow For Shrinkage

Avoid Ground Contact

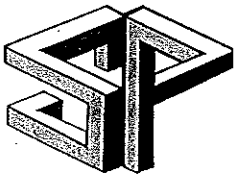

SIERRA PACIFIC
INDUSTRIES
Growing Forests For Our Future

www.spi-ind.com



SFI
CERTIFIED
PARTICIPANT