

IMPORTANT

Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.

Part List




A.
Cushion
1 pc.




D.
Front Stretcher
1 pc.



G.
Plinth
1 pc.

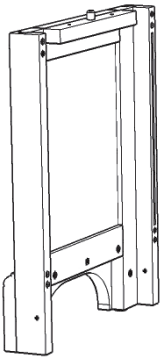


B.
Side Panel
1 pc.

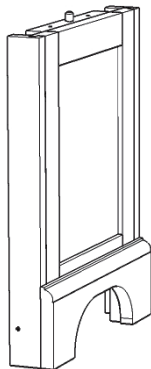

C.
Side Panel
1 pc.




E.
Plinth
1 pc.

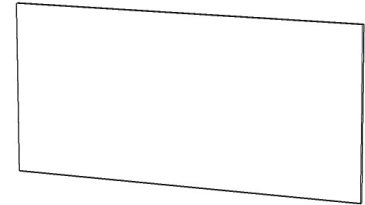

H.
Back Panel
1 pc.



F.
Back Stretcher
1 pc.




I.
Base
1 pc.

Hardware List




Hex Wrench
1 pc.




Small Hex Wrench
1 pc.



Cam Lock
5 pcs. (+2 extra)



Cam Lock Screw
5 pcs. (+1 extra)



M3x30
Wood Screw
10 pcs. (+1 extra)



M6x32
Head Cap Bolt
4 pcs. (+1 extra)



Spring Washer
4 pcs. (+1 extra)



Flat Washer
4 pcs. (+1 extra)

Tool(s) required for assembly: Phillips screwdriver