












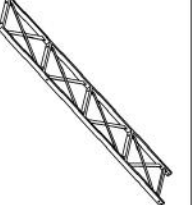

ASSEMBLY INSTRUCTION


ATTENTION: We have provided EXTRA SCREWS of A/B/C in case of any screws missing in the boxes.

PART LIST

				
60.04"x13.19" Top Panel	60.04"x11.89" Bottom Panel	Top Metal Frame	Bottom Metal Frame	Cross Bar
①×1PC	②×5PCS	③×3PCS	④×3PCS	⑤×2PCS

HARDWARE

							
M6×25mm	M6×12mm	M6	M4×35mm	ANCHOR SCREW	WALL BRACKET	WRENCH	ALLEN KEY
A×42PCS	B×12PCS	C×6PCS	D×6PCS	E×6PCS	F×3PCS	G×1PC	H×1PC

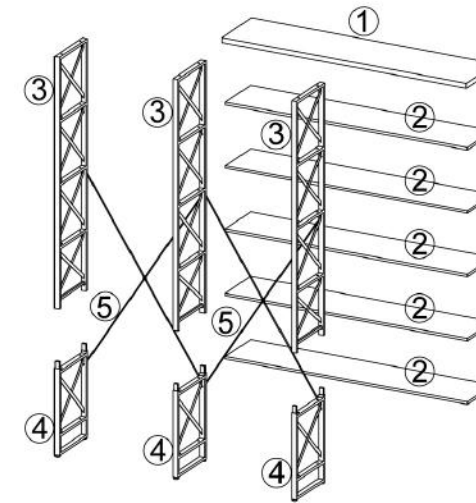


NOTED:

1. Check to ensure all parts and hardware are present. Complete assembly required by 2 adults.
2. Do not fully tighten all bolts until all parts are in place. Failure to follow these instructions may cause the bolt to misalign during assembly.
3. As you unpack and prepare for assembly, place all the metal frame and shelves on a carpeted or padded area to protect them from scratch and damage. The long shelves is a bit heavy, please handle gently to avoid knocked into the ground.


Step 1:

Attach the Bottom Frame ④ onto the Top Frame ③, then screw up the Bolt(B) by Allen Key(H).

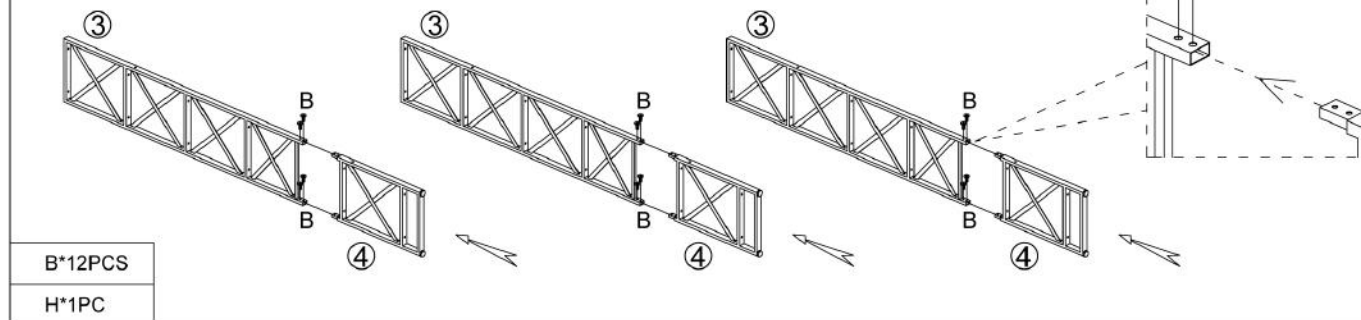


Step 2:

Open the folding Cross Bar ⑤ and assembly the Cross Bar ⑤ onto the metal frame (assembled ③ and ④). Then screw up the Bolts (A) and Nuts (C) by Wrench (G) and Allen Key (H). Note: Don't fully tighten all bolts until all shelves are in place.

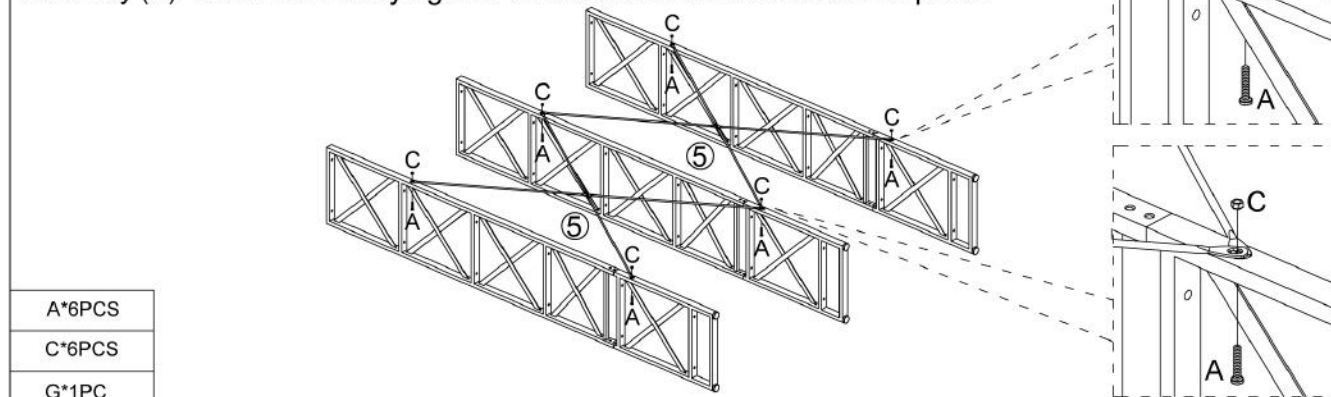

Step 3:

Assembly the Top Panel ① and Bottom Panel ② onto the metal frame. Then using the Bolt (A) by Allen Key(H). Finally tighten all the connections with Allen key(H).

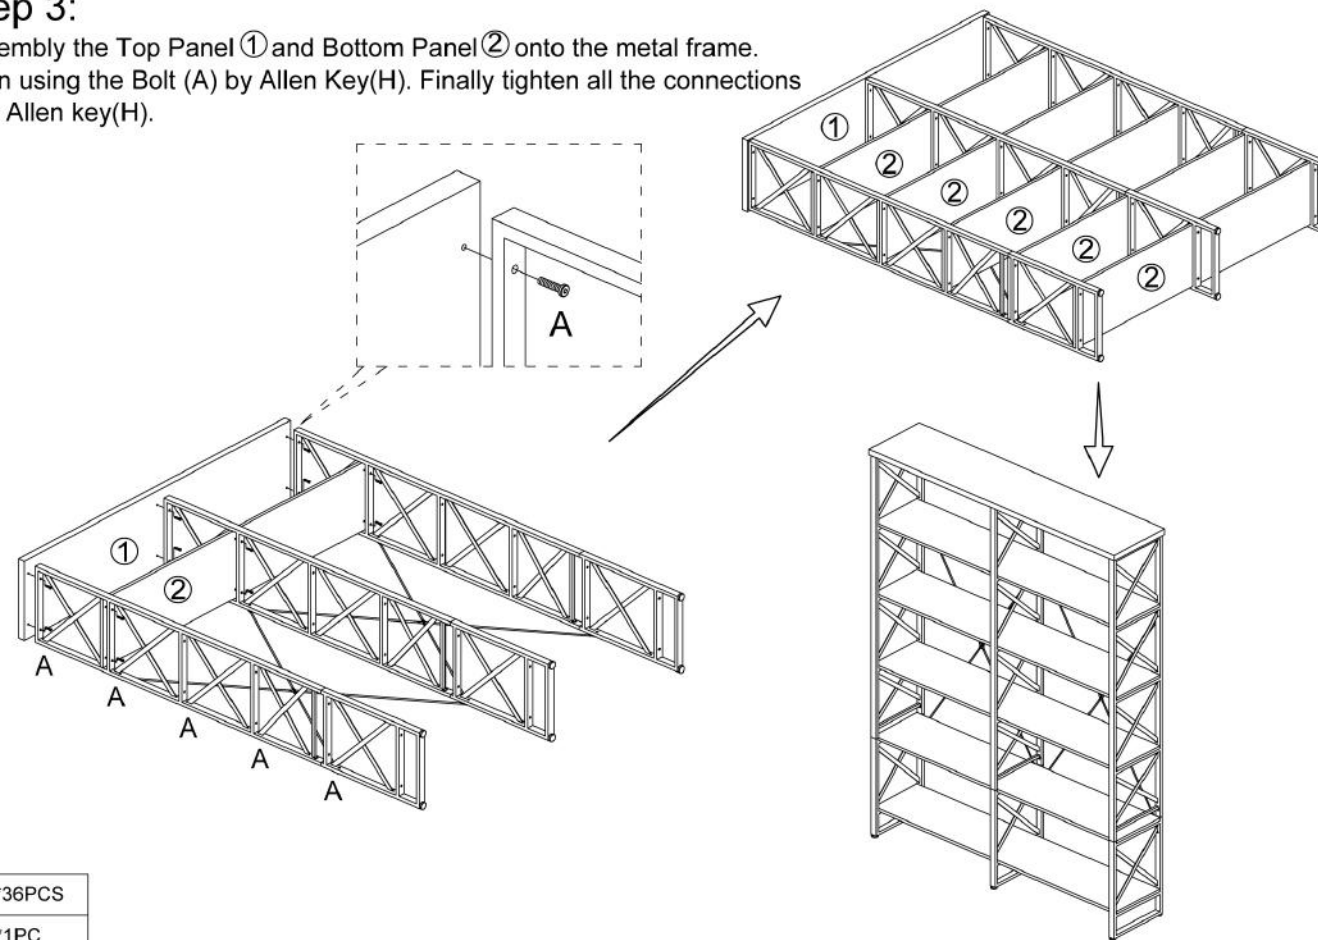

Step 4: Assembly the Wall Bracket (F) between the metal frame and the wall. To prevent injury and property damaged from unexpected tipping of furniture.

