




1
Upon receiving the package, open it and conduct a quality and quantity check. Ensure that you have received the correct item and quantity, and that they are in good condition and consistent. Should you encounter any quality issues, please do not hesitate to reach out to us.



2
Before starting the work, measure the area and plan accordingly to ensure that you have enough quantity of materials.

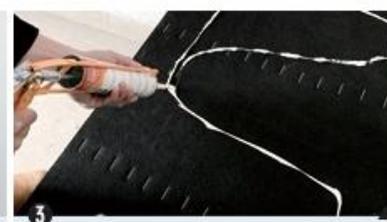

3
Apply construction adhesive to the back of the panels in a "Z-like" pattern.



4
Attach the panel to the wall.



5
Secure the panel in place using the screws provided.



6
Use a circular saw, table saw or jigsaw to cut the panel as required to fit the sections.




Warning:

Do not install the panel in high humidity environments such as bathrooms, and keep them away from water to avoid damage.



▲ Due to processing tolerance, it may be difficult to align every slat of two panels. When that happens, we recommend you to leave a gap between two panels to achieve a beautiful result.

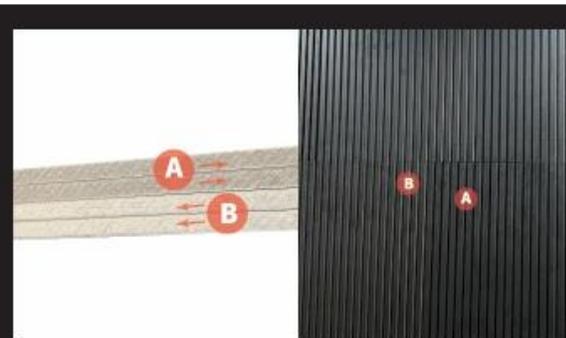

▲ The side colors of the slats of every panel may vary due to different cutting directions. If you find the tones of certain panels different, please rotate these panels in the opposite direction to achieve a coherent look.

For more information reach out to us via info@art3d.com or call 8103775777