


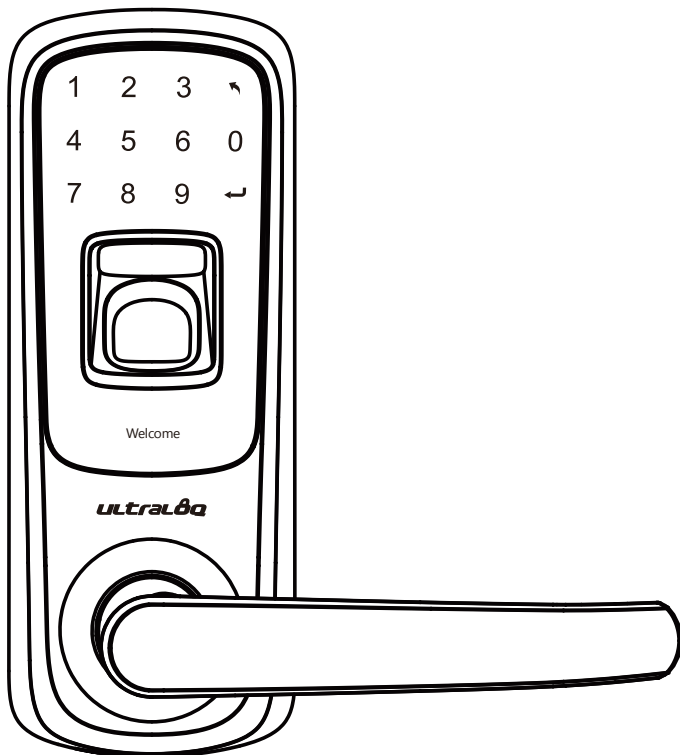

Ultraloq UL3 Series

Fingerprint and Touchscreen Smart Lock

Installation Instructions (v1.6)



ultralq

Installation Video

Please watch our easy step by step installation video before attempting to install your UltraIQ UL3 Series Fingerprint and Touchscreen Smart Lock.



www.u-tec.com/support

If you have questions regarding the installation process, please contact us at support@u-tec.com

Important Notes


- Do not use a power drill for installation.
- Install and test the lock with the door open to avoid being locked out.
- Please read all the instructions before contacting customer support.
- Please contact customer support before returning the product to the store.
- DO NOT install the batteries before installing the lock!
Follow the instructions in sequential order!
- If you have previously installed this lock on another door, you must perform a Factory Default Reset FIRST! See the User Guide for more information.
- This lock is designed for the following operating temperatures:
Outside Lock Body (exterior mounted): -31° F (-35° C) to 158° F (70° C)
Inside Lock Body (interior mounted): 14° F (-10° C) to 131° F (55° C)

Need Help?


For technical documents and more
Please visit www.u-tec.com/support
Tel: 844-HEY-UTEC (844-439-8832)
Email: support@u-tec.com

Included in the box


Exterior Assembly

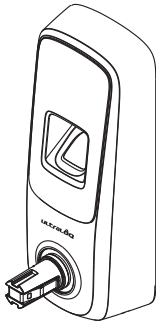


Interior Mounting Plate



Interior Assembly

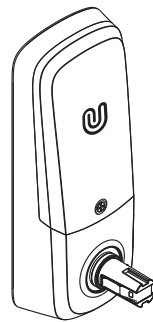


Handle

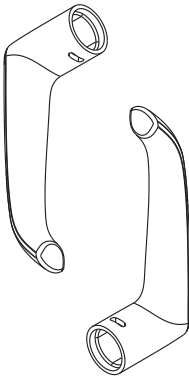

Spindle



AA Batteries




Screwdriver



Screw A



Screw B



Screw C



Screw D



Screw E



Strike



Latch



Backup Keys



Spring



STEP 1

Preparing Door

Check the door's dimensions.

Step 1:

Measure to confirm that the door is between $1\frac{3}{8}" \sim 1\frac{3}{4}"$ (35 mm-44mm) thick.

Step 2:


Measure to confirm that the hole in the door is $2\frac{1}{8}"$ (53 mm) .

Step 3:


Measure to confirm that the backset is either $2\frac{3}{8}" \sim 2\frac{3}{4}"$ (60mm-70mm) .

Step 4:

Measure to confirm that the hole in the door edge is $1"$ (25 mm) .

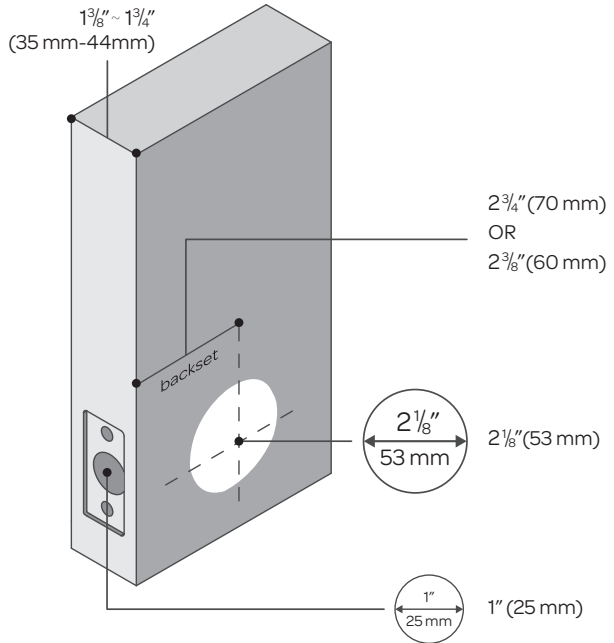


If you are installing Ultraloq on the door with an existing lock, please remove the current lock and latch.

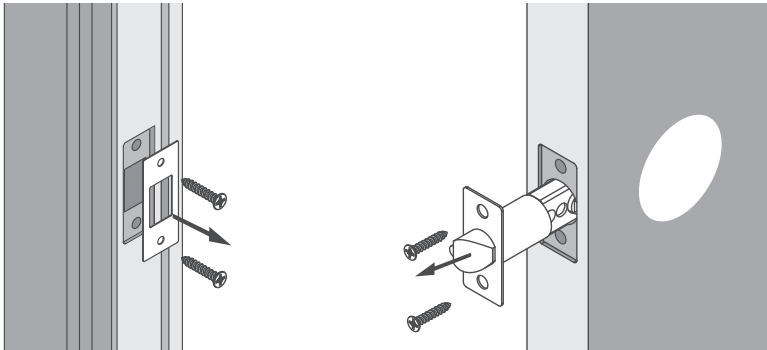

STEP 2

Preparing Lock

If your door thickness is over 1.65" (42mm), please install this spring.

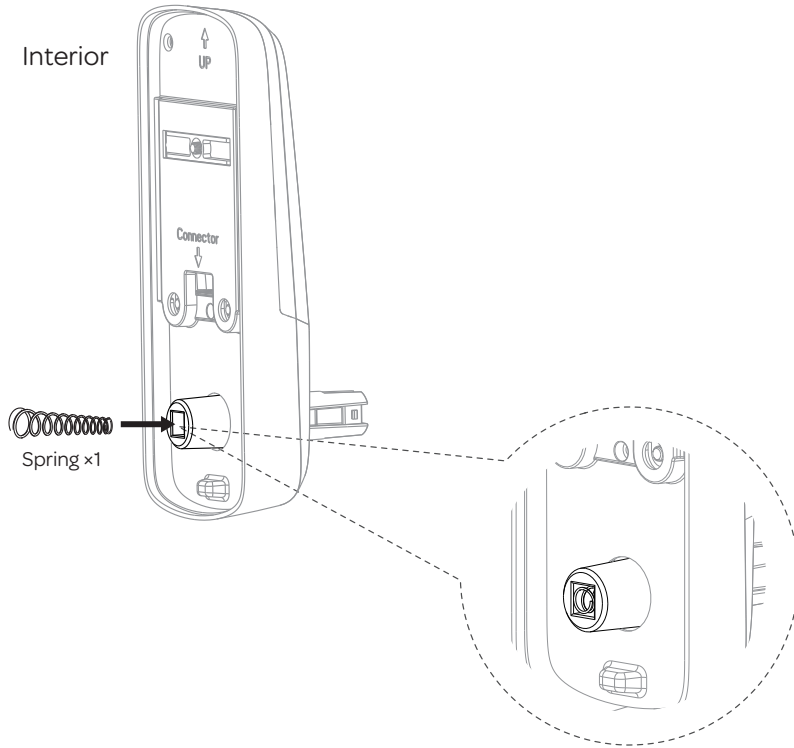


Before installing the lock on the door

1. Slide the battery cover up and out (note the two tabs at the bottom of the battery cover).
2. Remove the inside mounting plate (with gasket) from the back (door side) of the interior assembly.

STEP 3

Installing Latch and Strike


1. Install latch on the door. Make sure the latch angle faces door jamb.
2. Install the strike on the door frame, ensuring you allow for the bolt to be centered in the strike.

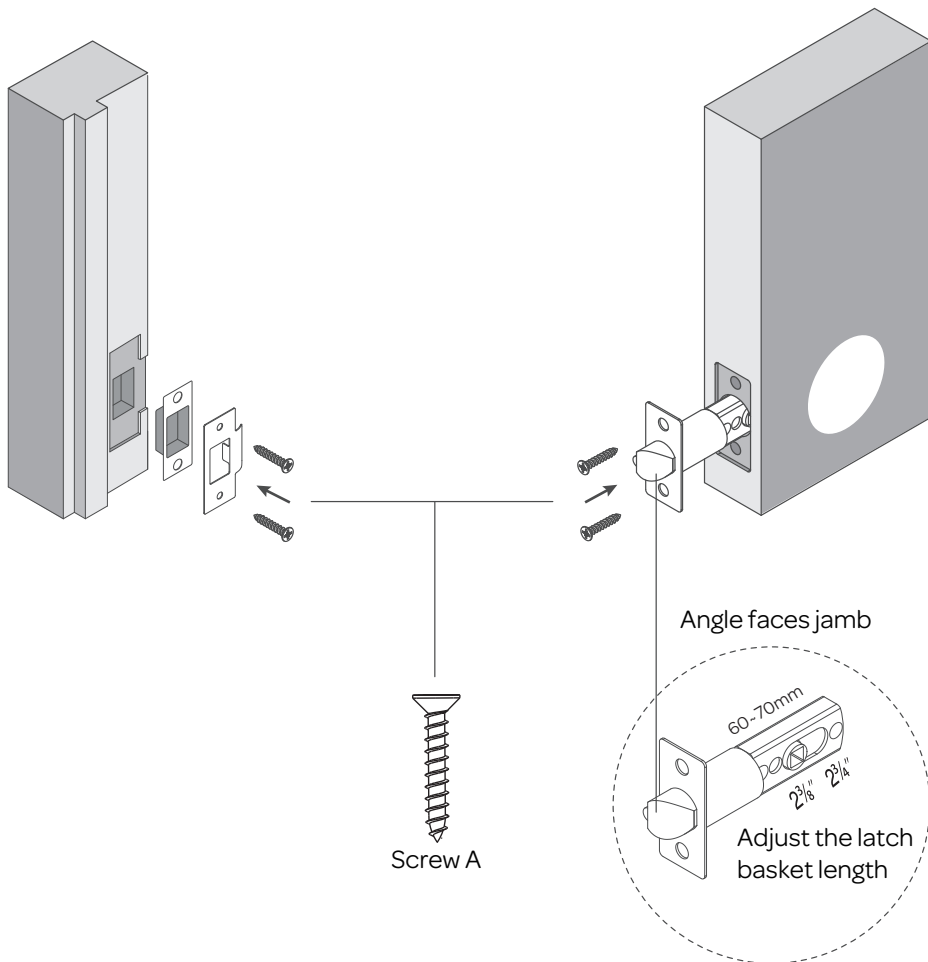

STEP 4

Installing Exterior Assembly


1. Install the exterior assembly.
2. Make sure the triangle is facing upwards as illustrated.
3. Route the cable under bolt and through hole stated below.

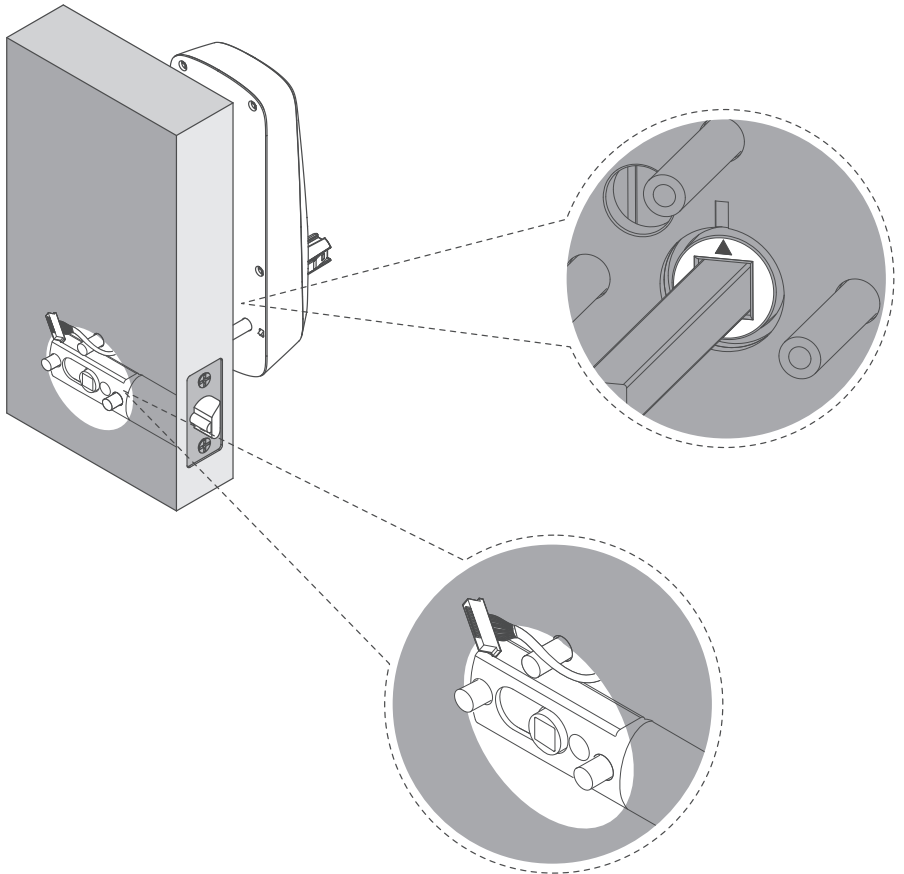

STEP 5


Installing Interior Mounting Plate

1. Install interior mounting plate.
2. Secure it to the exterior assembly using screws B.

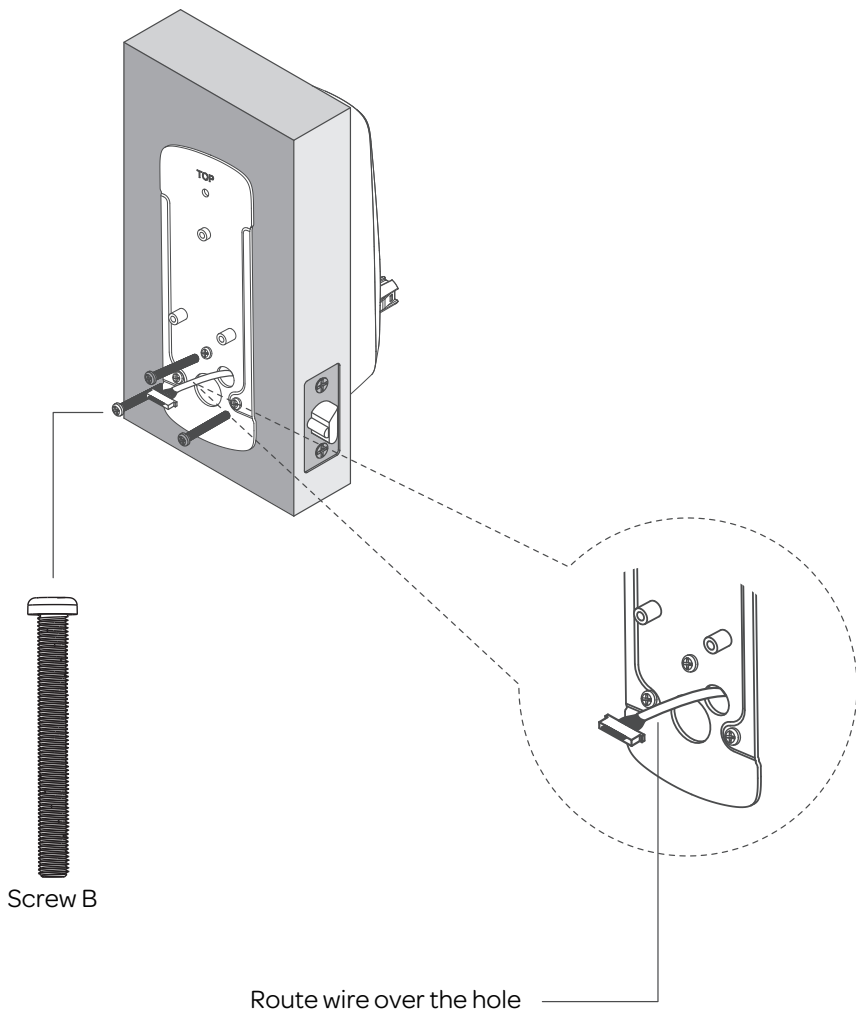

STEP 6


Plug In The Spindle

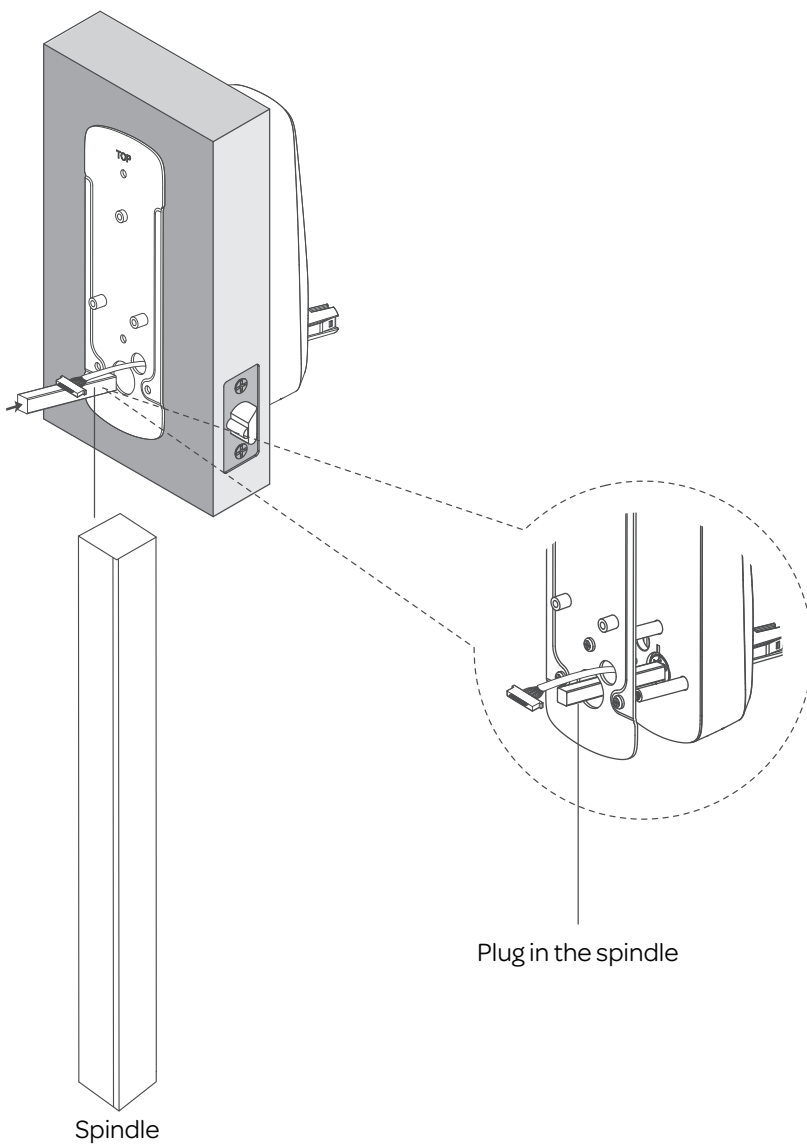

STEP 7

Installing Interior Assembly


1. Attach the cable to the connector on interior assembly by lining up notches on the cable connector to slots on that connector. Press the connector in firmly using thumbs until completely seated.
2. Secure interior assembly using screws.

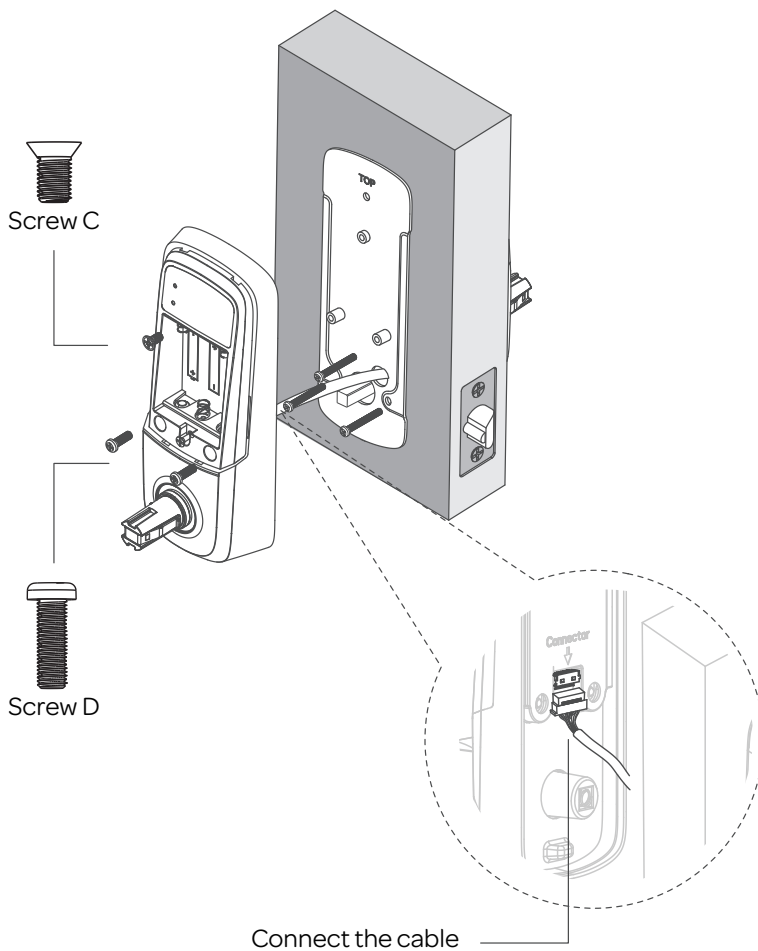

STEP 8

Installing Batteries


1. Insert 3 AA alkaline batteries.
2. Install battery cover and tighten the screw.

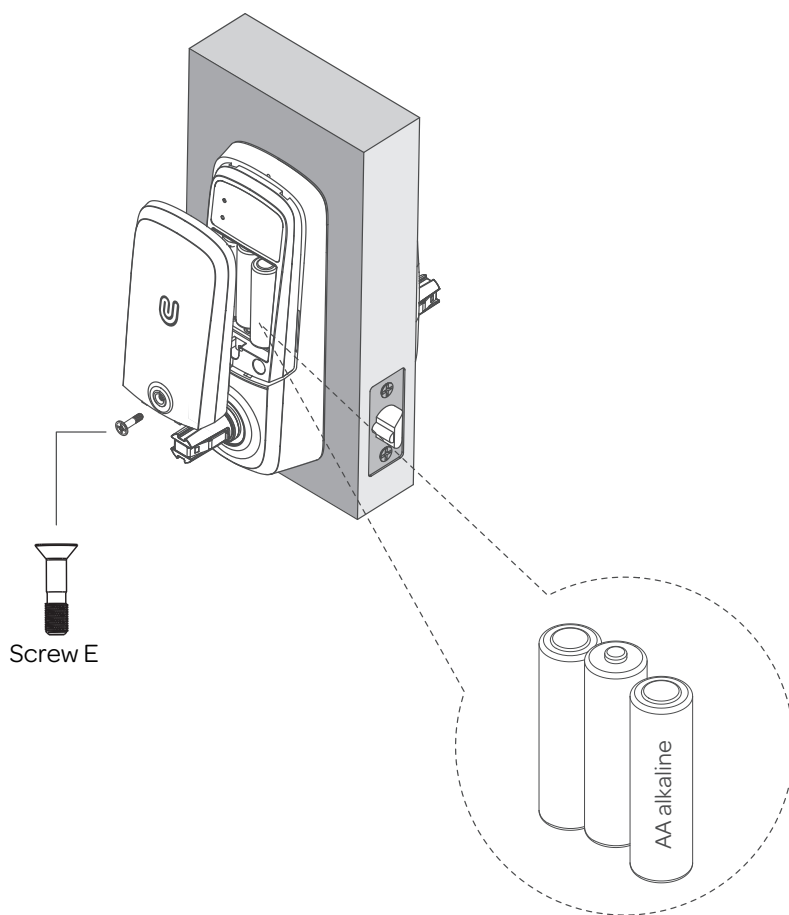

STEP 9


Installing Handles

1. Press lever handles onto handle posts.
2. Test the mechanical operation of the lock by rotating handle from inside. The movement of the bolt should be smooth and unobstructed. If the operation is not smooth, review the previous steps to ensure proper installation.

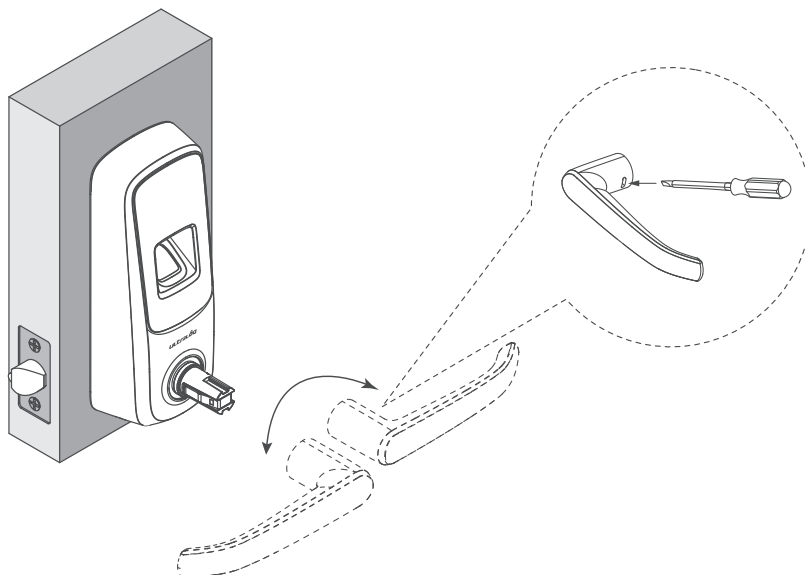


If the handles are installed in the wrong direction, you need to remove them and re-install. To remove the handle, you need to insert the screwdriver into the hole in the handle, push in and hold. Then pull the lever handle out.

Handle Plug Position

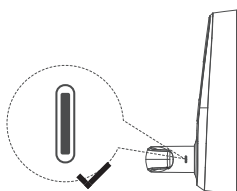

The handle is plugged in correctly.

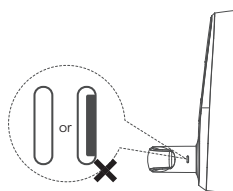

The handle is not fully plugged in.

Keep Your Records

Note: It is recommended to register several Admin fingerprints and PIN codes.

[illegible]

Example

Keep Your Records

Note: It is recommended to register several Admin fingerprints and PIN codes.

[illegible]

Example

Note



ultral8q

© 2017 U-tec Group Inc.


U-tec and Ultraloq brands and products are trademarked and protected under law in the United States.
Unauthorized use is prohibited. Ultraloq is sub-brand of U-tec Group Inc.



Ultraloq UL3 Series

Cerradura Biométrica con Huella
Digital y Pantalla Táctil

Guía de instalación (V1.6)

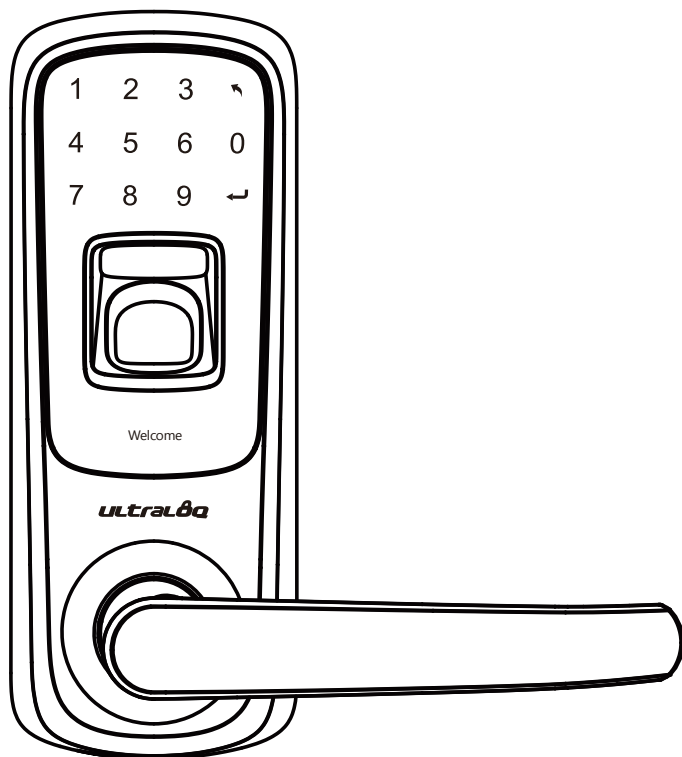

ultralock

Video instructivo

Por favor mire nuestro video instructivo paso por paso antes de instalar su cerradura biométrica con huella digital y pantalla táctil



www.u-tec.com/support

Si tiene consultas respecto a la instalación, por favor contáctenos enviando un email a la siguiente dirección: support@u-tec.com

Notas Importantes


- Instale y pruebe la cerradura con la puerta abierta para evitar inconvenientes.
- Por favor lea todas las instrucciones antes de contactarse con soporte.
- No coloque las pilas antes de instalar la cerradura. Siga las instrucciones en orden.
- Si ha instalado previamente esta cerradura en otra puerta, deberá hacer un reseteo de fábrica. Consulte la Guía de Usuario para más información.
- Esta cerradura está diseñada para usarse en las siguientes temperaturas:
Cuerpo externo de la cerradura: -35 °C a 70 °C Cuerpo interno de la cerradura: -10 °C a 55 °C

Necesita ayuda?


Para consultar documentos técnicos visite
www.u-tec.com/support
Tel: 844-HEY-UTEC (844-439-8832)
Email: support@u-tec.com

Qué hay en la caja


Montaje exterior

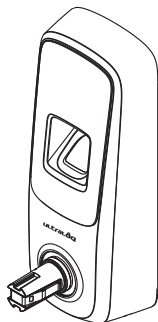


Base de montaje interior



Montaje interior

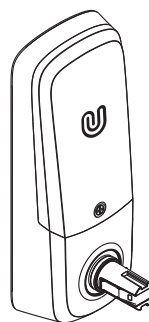

Manijas

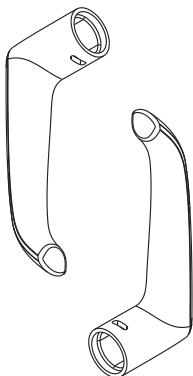


Perno cuadrado corto




Destornillador




Baterías AA



Tornillos A



Tornillos B



Tornillo C



Tornillos D



Tornillo E



Contramarco



Pestillo



Llaves de repuesto



Resorte



PASO 1

Preparando la puerta

Tome las dimensiones.

Paso 1:

Mida para con rmar que la puerta tiene un ancho de 35mm-44mm.

Paso 2:


Mida para con rmar que el agujero donde va colocada la cerradura tenga 53mm de diámetro.

Paso 3:


Mida para con rmar que la entrada de la cerradura tiene un ancho de 60mm o 70mm.

Paso 4:

Mida para con rmar que el agujero en el borde de la puerta tiene 25mm.

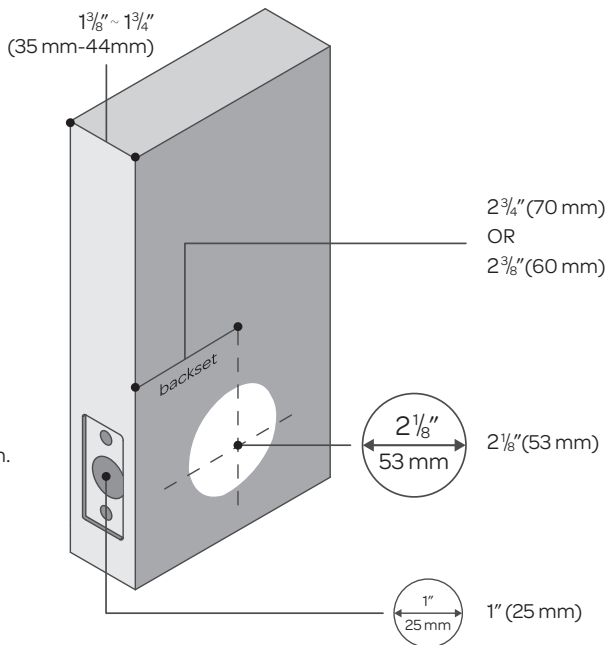


Si usted está instalando su Ultraloq UL3 en una puerta que ya cuenta con una cerradura, por favor quite la misma junto con el pestillo y el contramarco.

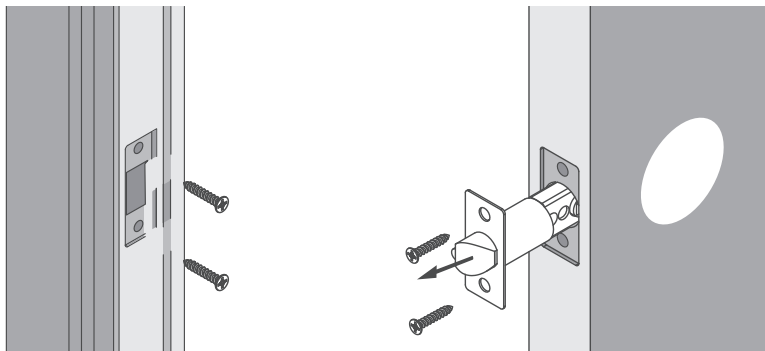

PASO 2

Preparando la cerradura

Por favor instale este resorte.

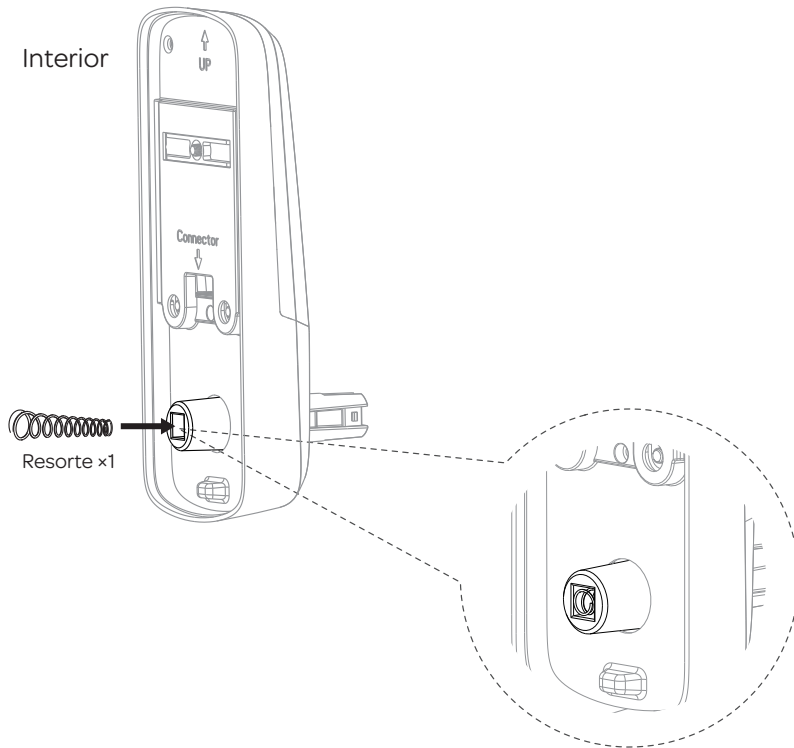


Antes de instalar la cerradura en la puerta

1. Deslice la tapa de las baterías hacia arriba y hacia afuera (note las dos barras en la parte inferior de la tapa).
2. Retirar la placa interior de montaje (con la plantilla de goma) de la parte posterior (costado de la puerta) de la unidad interior.

PASO 3

Instalando el pestillo y el contramarco.


1. Instale el pestillo en la puerta. Tenga en cuenta que el ángulo del mismo enfrente al marco.
2. Instale el contramarco en el borde de la puerta, teniendo en cuenta que el perno esté centrado en el mismo.

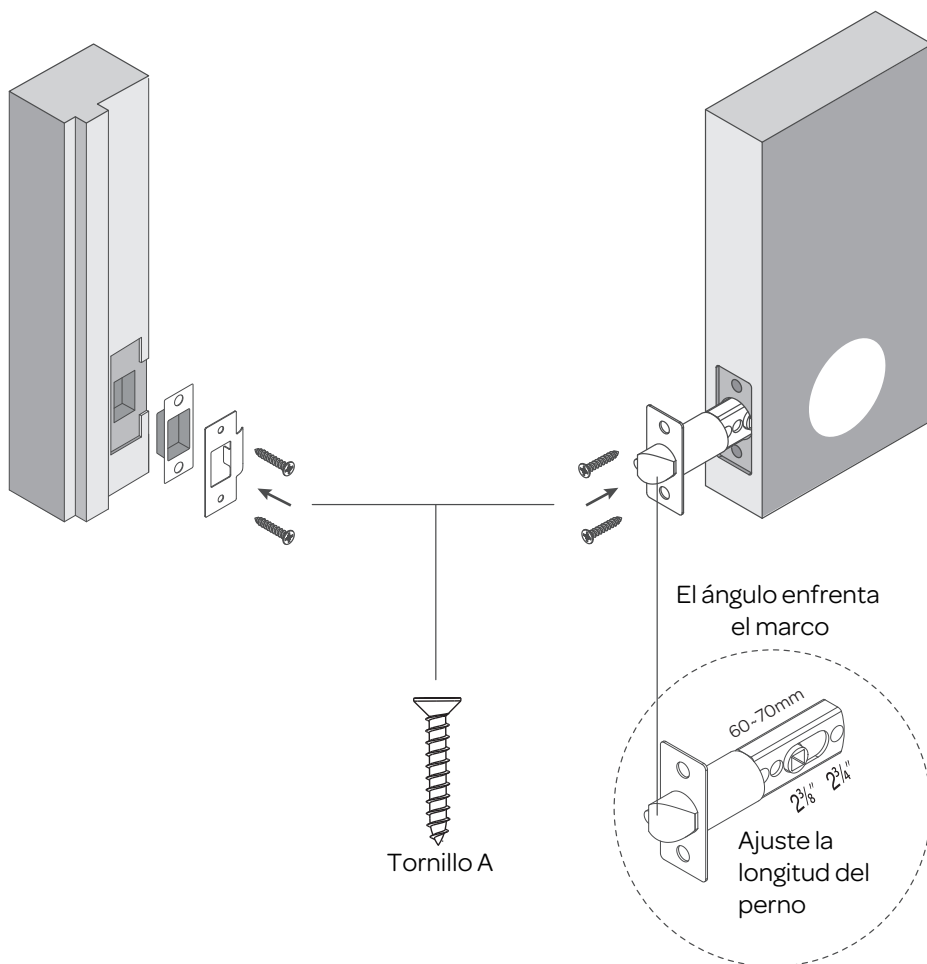

PASO 4

Instalando la placa exterior


1. Coloque la placa exterior.
2. Asegúrese de que el triángulo está hacia arriba como la ilustración.
3. Pase el cable por el agujero indicado abajo.

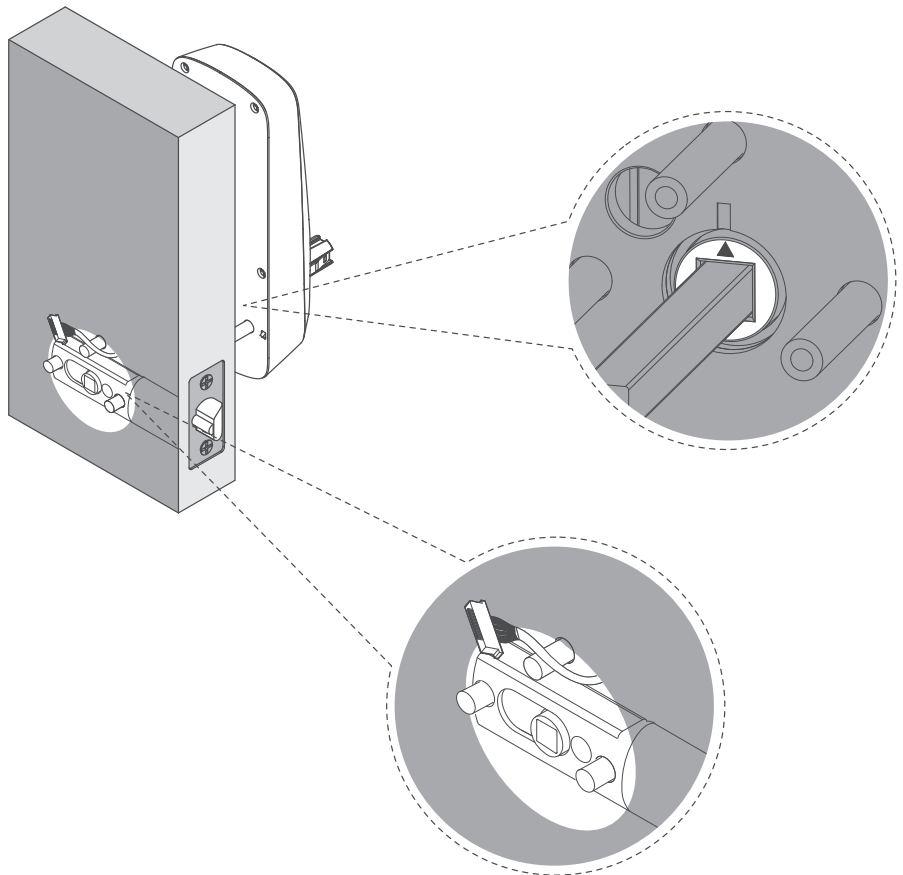

PASO 5


Instalando la placa interior

1. Coloque la placa de montado interior
2. Asegúrela usando tornillos B

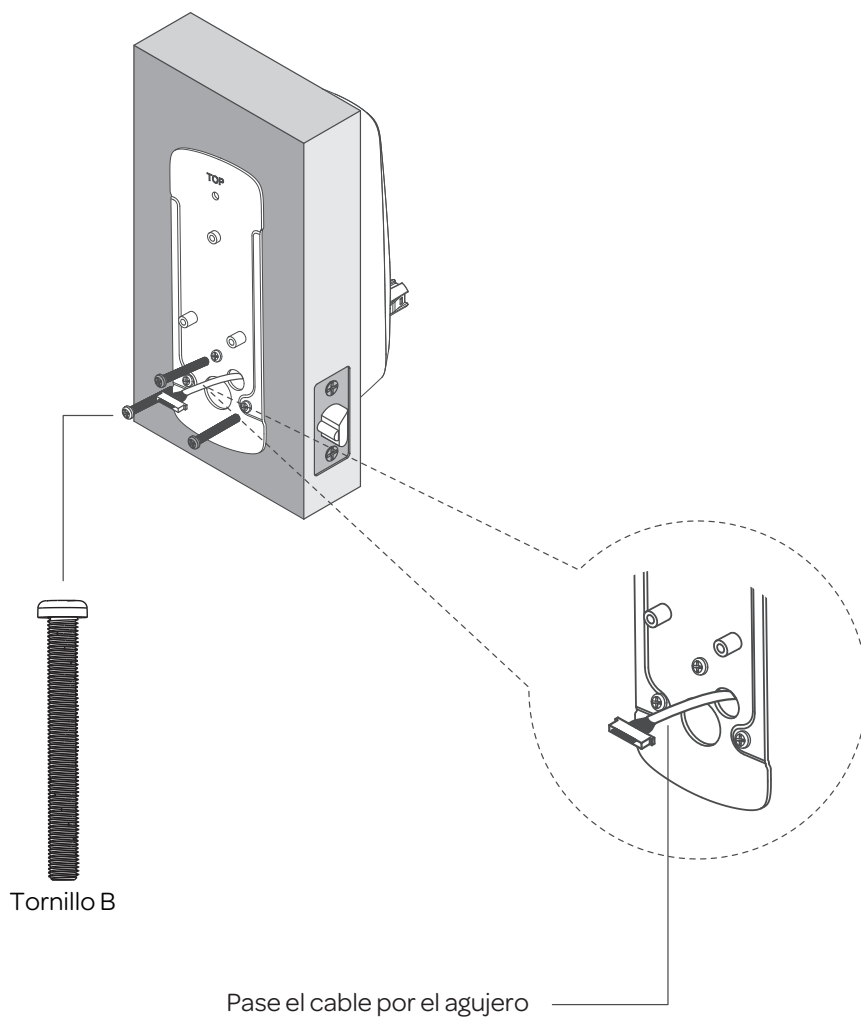

PASO 6


Coloque el perno cuadrado

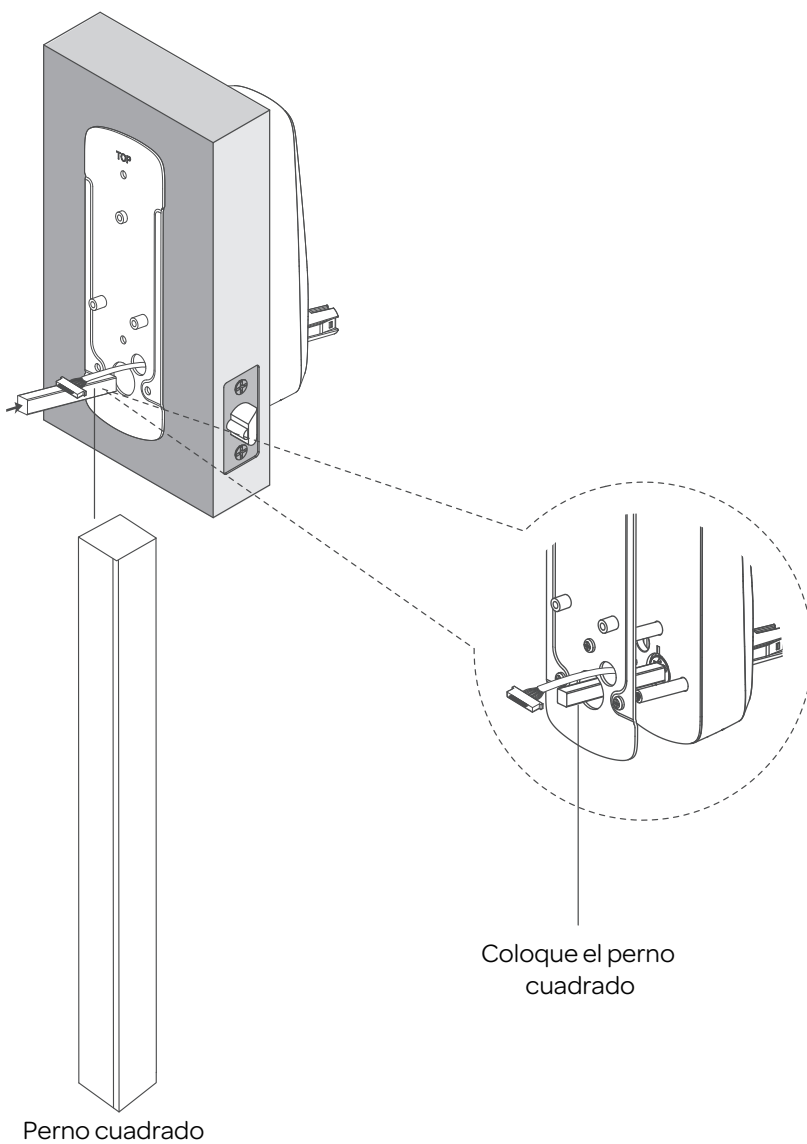

PASO 7

Instalación de la unidad interior


1. Conecte el cable al conector de la unidad interior, alineando las muescas en las ranuras. Presione rmeamente con los pulgares hasta que encaje completamente.
2. Asegure la conexión usando tornillos.

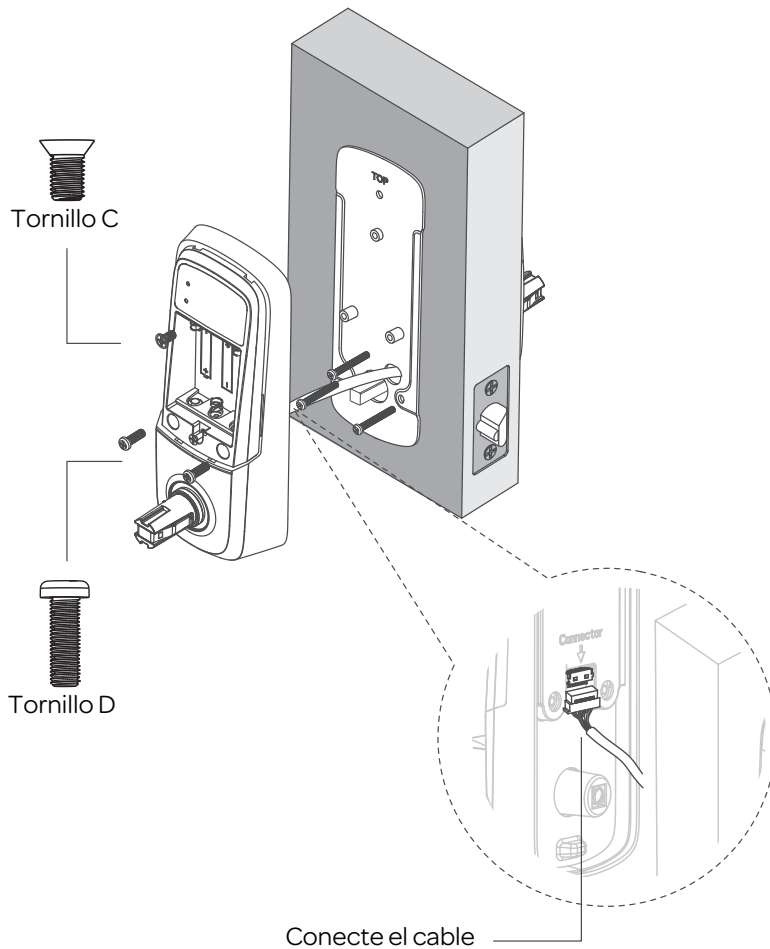

PASO 8

Instalando las baterías


1. Coloque tres baterías alcalinas AA.
2. Instale la tapa y asegúrela con el tornillo E.

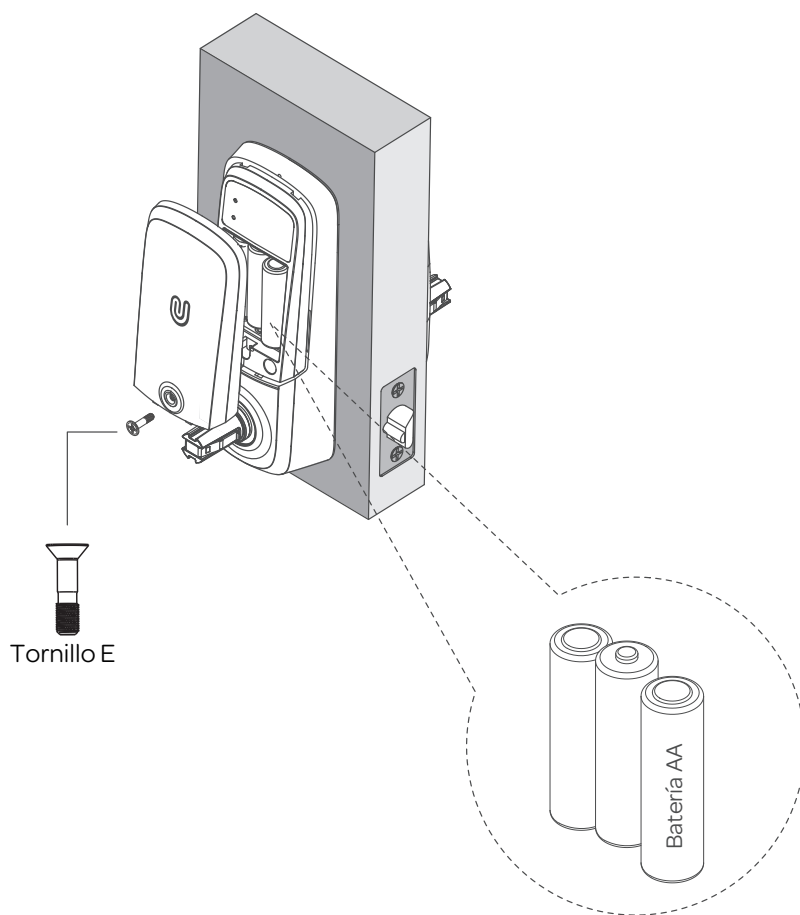

PASO 9

Instalando las manijas


1. Coloque las manijas en los pernos.
2. Pruebe el funcionamiento de la cerradura accionando la manija desde adentro. El movimiento debería ser suave y sin obstrucciones. Si no es así, revise los pasos anteriores para realizar la instalación apropiadamente.

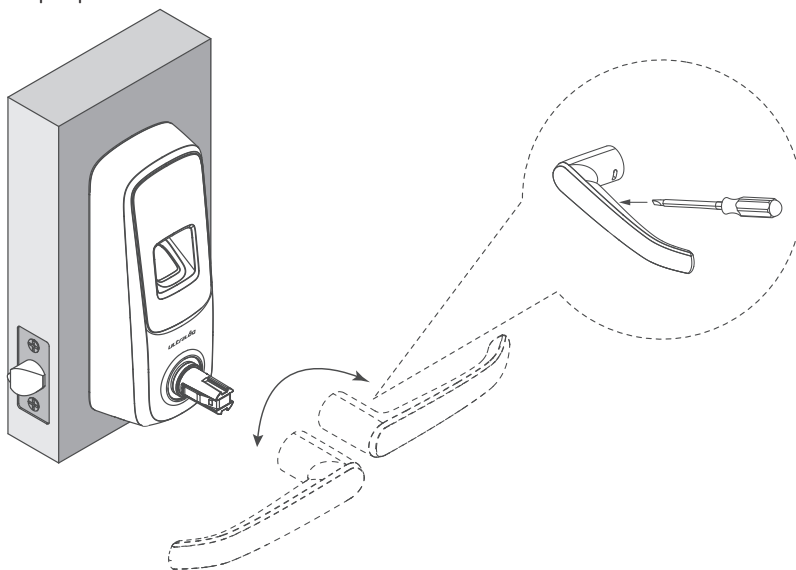


Si las manijas fueron instaladas en la dirección incorrecta, deberá sacarlas e instalarlas correctamente.

Para retirarla, introduzca el destornillador en la entrada que se encuentra en la parte interior, empuje y espere. Luego retire la manija.

Posición de la traba

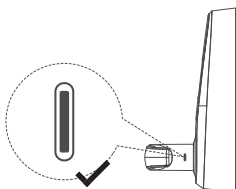

La manija está conectada correctamente

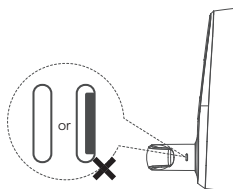

La manija no está bien conectada

Conserve sus registros

Nota: se recomienda registrar el administrador con varias huellas y códigos de PIN.

[illegible]

Ejemplo

Conserve sus registros

Nota: se recomienda registrar el administrador con varias huellas y códigos de PIN.

[illegible]

Ejemplo

Notas



ultral8q

© 2017 U-tec Group Inc.

Las marcas y los productos de U-tec y Ultraloq están registradas y protegidas bajo la ley en los Estados Unidos.
Queda explícitamente prohibido todo uso no autorizado. Ultraloq es submarca de U-tec Group Inc.