


Half Overlay Soft Closing Hinge


1. Installing Hinge to Door

- Drill hole 12 mm (15/32") deep for hinge cup per template using 35mm boring bit. Do not drill through door face.
- Drill pilot holes for screws per template. Do not drill through door face.
- Insert hinge into door and fasten with screws. Do not overtighten.

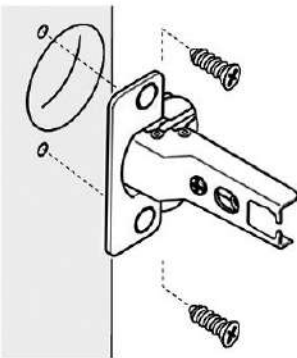

2. Installing Mounting Plate to Cabinet

- Drill pilot holes for screws. Do not drill through cabinet.
- Align mounting plate to holes and fasten with screws. Do not overtighten.

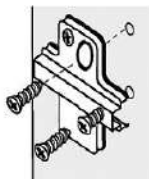

3. Installing Door to Cabinet

- Open hinge to full extension.
- Connect door to cabinet as shown below.

