

SIDE MIRROR SURFACE MOUNTING INSTALLATION INSTRUCTIONS

This surface mounting kit will allow installation of your new Jensen bath cabinet without cutting a hole in the wall. It is highly recommended that you locate at least one wall stud within the mounting area of your bath cabinet.

1. After you decide where you wish to mount your bath cabinet, locate at least one wall stud within the mounting area. The studs are usually 16" on center. As your bath cabinet is about 15" wide there should be at least one stud within the area you wish to mount the cabinet. Note: You may have to move the cabinet slightly left or right to be able to center one of the mounting holes over the wall stud.


2. Before attaching the mounting brackets to the top and bottom of the cabinet attach one mirror clip (Diagram A1)) to both ends of each bracket. Position the slot in the clip over the pre-drilled hole in the flat on the bracket end and loosely attach with one of the screws provided in the mirror clip accessory bag. The bent end of the clip should be pointed down toward the bracket side (Diagram A2)).

3. Attach mounting brackets to top and bottom of cabinet as shown in Diagram (B) using the nuts and bolts screw cap base and screw covers (four sets provided) as shown in Diagram (B1). Adjust the position of the brackets so the distance between top and bottom edges with the mirror clips are spaced to the length of the side mirrors. Do not over tighten the mounting screws as the body side walls may bend and prevent proper shelf installation. Only tighten screws until they are flush with the body.

4. Place the bath cabinet with mounting brackets attached on the wall. You may have to adjust the location right or left to center one of the mounting holes over the stud. Carefully mark the hole over the wall stud for both top and bottom brackets. Then, mark one additional hole on the top and bottom as far away from the other hole as possible. If the wall stud is near the center of the cabinet it is recommended that you use four screws in wall anchors as far out to the edges of the cabinet as possible. See Diagram (C).

5. Take cabinet down off of the wall and drill the wall mounting holes. For the screws into the wall studs drill a 1/8" pilot hole. The other screw holes should be made to the recommended size for the wall anchor you are using. If you use the drywall anchors provided (four included) with your bath cabinet a 5/16" hole is required. See Diagram (D).

6. Insert the included drywall anchors as shown in Diagram (E). If you use another type anchor it should be installed per the manufacturer's instructions. Proceed in hanging cabinet using previously drilled holes and the screws provided. Then, snap screw covers over screw heads within cabinet. Diagram (G).

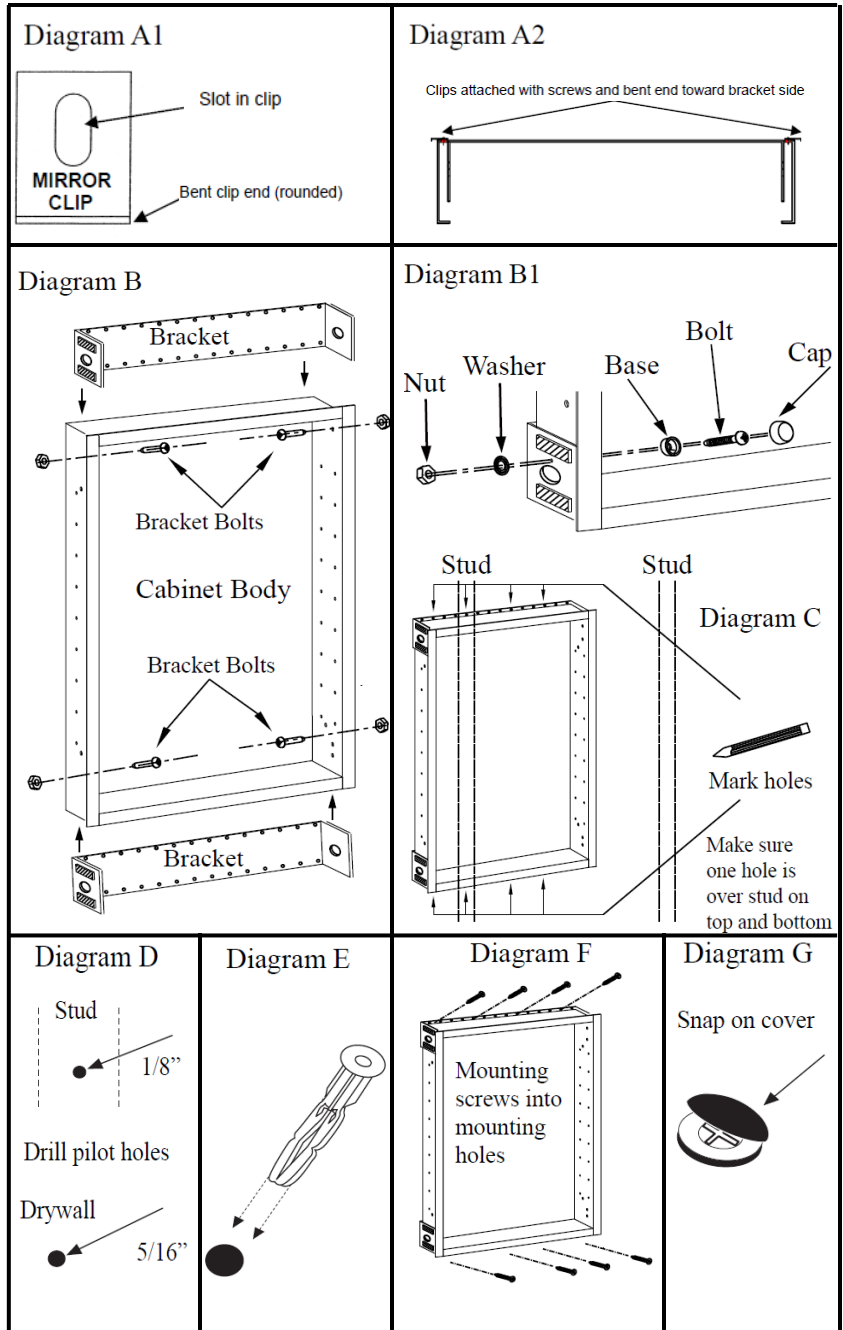

7. Before proceeding to the next step, test the fit of the side mirrors. Carefully, place one side mirror between the body and the wall, making sure that enough space is allocated for the mirror. Remove the mirror and test the other side with the other mirror.

8. With the bath cabinet mounted securely on the wall, attach the side mirrors. First, mount the Styrofoam blocks included in your kit. Place the block on each side of the cabinet as shown in Diagram (H1). Note: for 34" cabinets you will mount two Styrofoam blocks on each side of your cabinet as shown in diagram (H2). Remove the protective strip from one side of the block and place the tacky side to the body. Press firmly to ensure proper adhesion. Once the blocks are attached, remove the protective strip from all the tape pieces located on the blocks and the bracket and mount the mirrors on each side. Be sure the mirror is aligned to the top and bottom of the cabinet and the wall before pressing in place. Press firmly on the mirror to be sure that it is securely attached to the mounting brackets.

9. After the cabinet is mounted and the side mirrors attached position the loosely attached mirror clips one at a time so the bent edge of the clip rests against the front of the side mirror and tighten the screw to hold the clip securely in place.

10. Install hinges. Mount hinge unit on door as shown in Diagram (I1 & I2) with screws provided.

11. Install the door by inserting door side of the hinge into the bracket on the body as shown:
a) 170 degree Hinge: Insert door side of clip hinge as shown in Diagram (I3).
b) 125 degree Hinge: Slide hinge arm on to the bracket and tighten mounting screws as shown in Diagram (I4).

12. Check door for proper alignment. If the door needs to be adjusted please refer to the adjustment procedures in Diagram (J1 & J2). Door edges should be aligned with the edges of the body and should fit evenly to the face of the body. Optional: To allow the door to open to 170 degrees, remove the limit clip shown in Diagram (J1). This option only applies to units with 170 degree hinges.

13. Install shelves as directed below:
a) Select where you want the shelves to be placed.
b) Insert two shelf brackets for each end of the shelf at the desired locations.
c) Set shelves in place on the shelf brackets. Diagram (K).

The mirror clips provide additional side mirror attachment support and should be used in addition to and NOT AS A REPLACEMENT for the mirror attachment method with tape per the current mirror mounting instructions.

Diagram H1

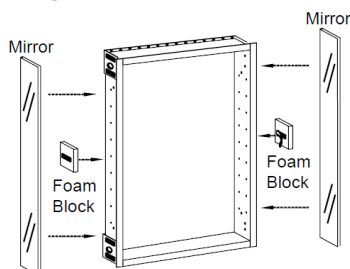


Diagram H2

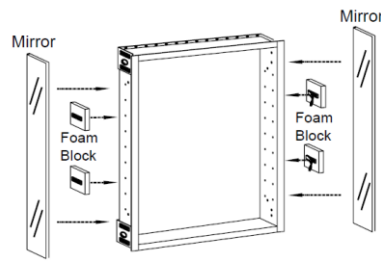


Diagram I1

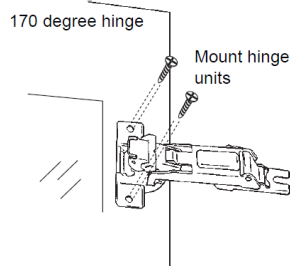


Diagram I2

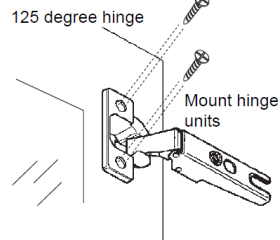


Diagram I3

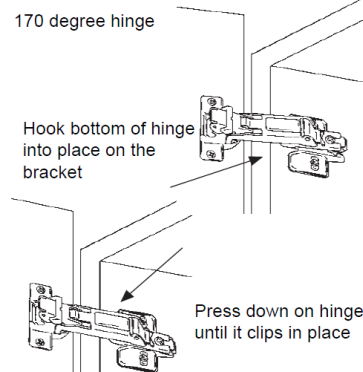


Diagram I4

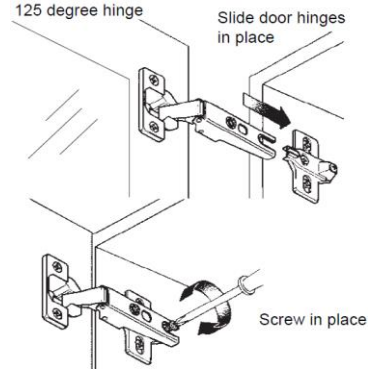


Diagram J1

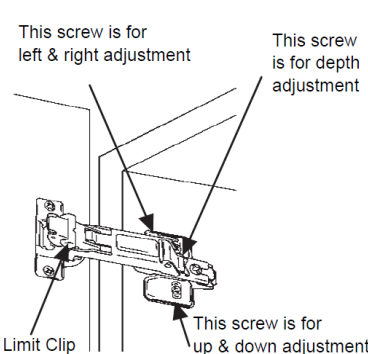


Diagram J2

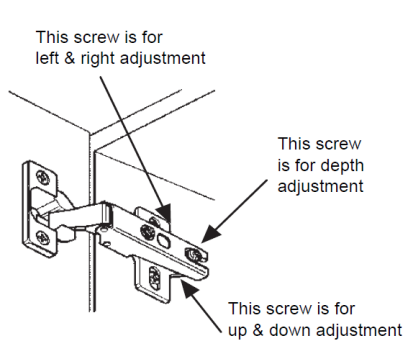


Diagram K

Press in shelf brackets:
2 each side for each shelf

