


Shelf /Mantle installation using Angle Brackets

- 1) Pre-drill angle brackets with holes slightly larger than screws. Screws must be long enough to penetrate through drywall into the stud. For screws not inserting into studs, anchors are recommended.
- 2) Find appropriate stud and attach angle bracket by installing screw.




- 3) Place level on top of angle bracket, level and install second screw.

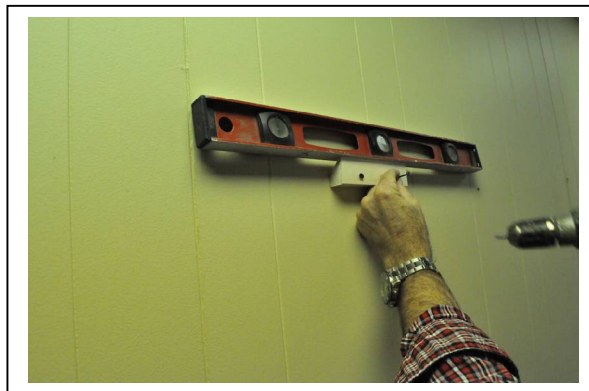

- 4) Measure 16" (if studs are on 16" center) to the next stud and install angle bracket. Use Level across top of brackets to insure that shelf/mantle will be level to wall.



5) At least (1) screw in each angle bracket must be screwed into a wall stud.

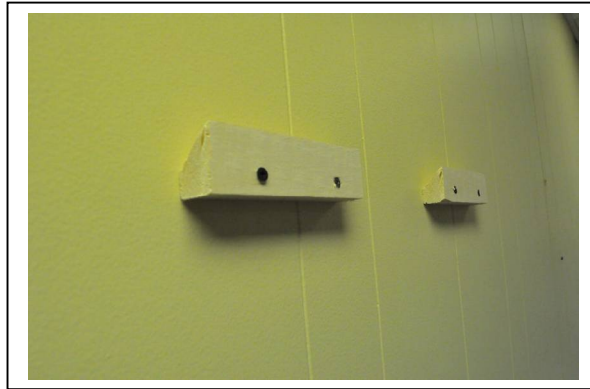

6) Last step is to install shelf/mantle onto the angle brackets.



Slide unit onto the angle brackets



Insure it is fully seated

7) Installation complete!

