



ASSEMBLY INSTRUCTIONS

FULL HOUSE BED WITH TRUNDLE











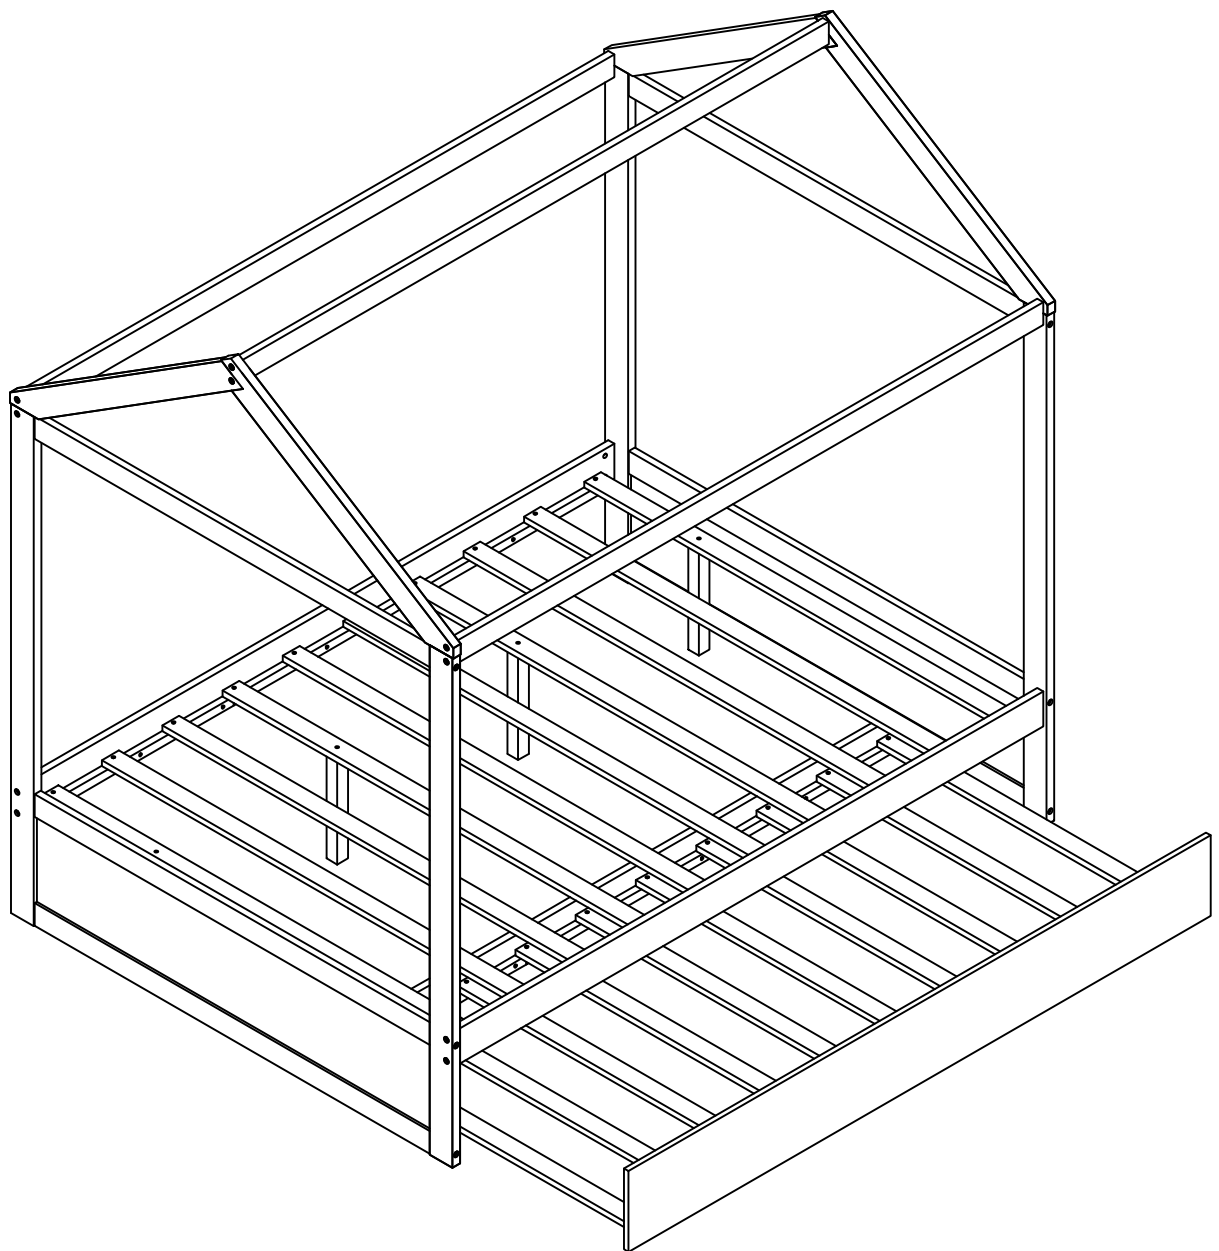


WF294015





DETAIL VIEW

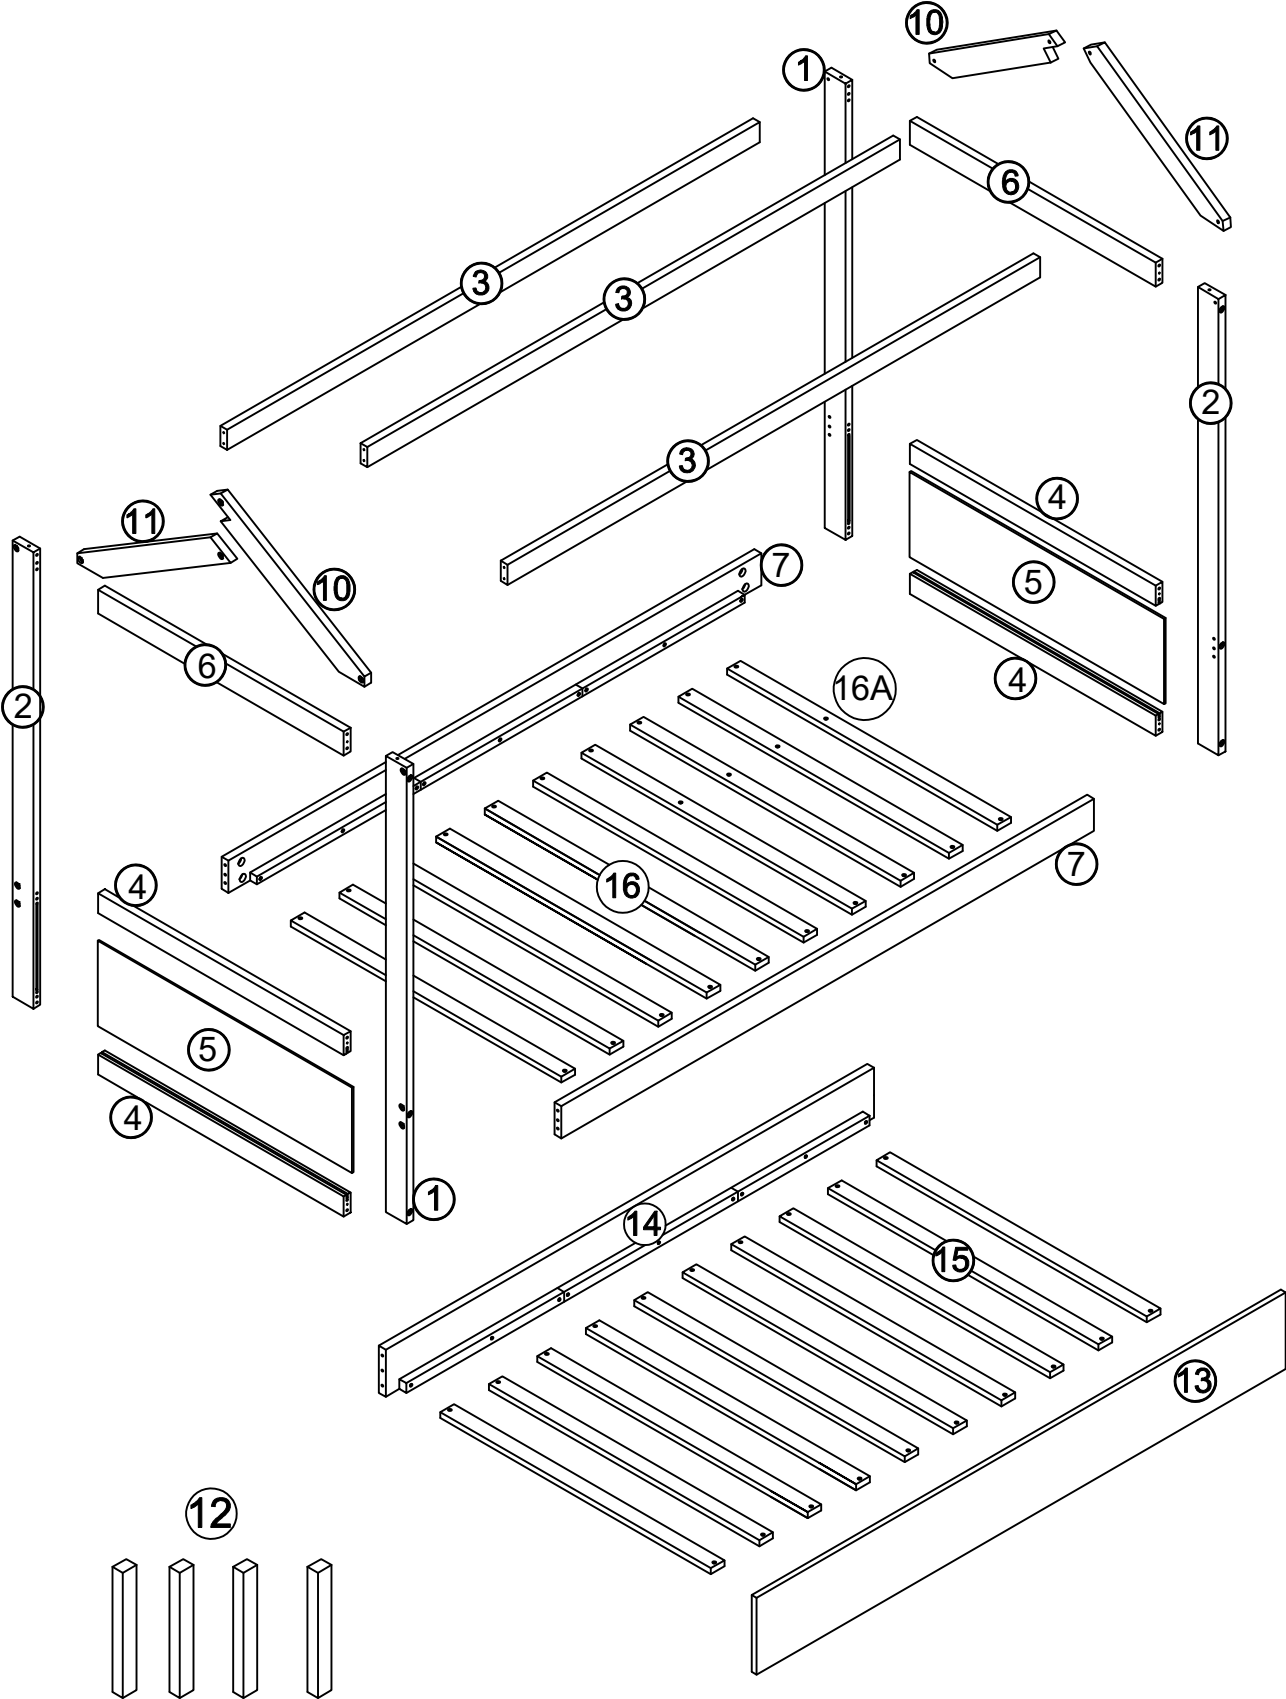


PART LISTS - WF294015

5		3		7	
Side panel - 2pcs		Guard rail top 3pcs		Side rail upper -2pcs	
16		13		14	
Upper slat - 6pcs		Drawer front - 1pc		Drawer back - 1pc	
11		10		1	
Cap for lower HB&FB-2pcs		Cap for upper HB&FB-2pcs		Upper leg HB&FB -2pcs	
2		6		4	
Upper leg HB&FB -2pcs		Horizontal bar HB&FB-2pcs		Horizontal bar HB&FB-4pcs	
16A		12		15	
Upper slat - 4pcs		Extra leg - 4pcs		Bottom slat - 10pcs	

HARDWARE LISTS - WF294015


A  Ø10 x 30 mm Wood dower 32pcs	B  Ø1/4" x 65 mm Hex-Head bolts (8pcs)	C  Ø6" x 110 mm Wood Screws (12pcs)
D  Ø6" x 70 mm Hex-Head bolts (12pcs)	E  Ø1/4" x 15 mm(9.5mm) Horizontal-Hole bolts (8pcs)	F  # 4 x 30mm Wood Screws (40pcs)
G  # 4 x 15mm Wood Screws (20pcs)	H  Wheels Ø32 (4pcs)	K  (1/4")4.5*58mm Allen Key (1pc)
L  Ø1/4"*30mm Hex-Head bolt (4pcs)	J  60*20*2mm Pass L (3pcs)	

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




**PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE
POSITION WHEN YOU USE POWER TOOLS !**

STEP 1:

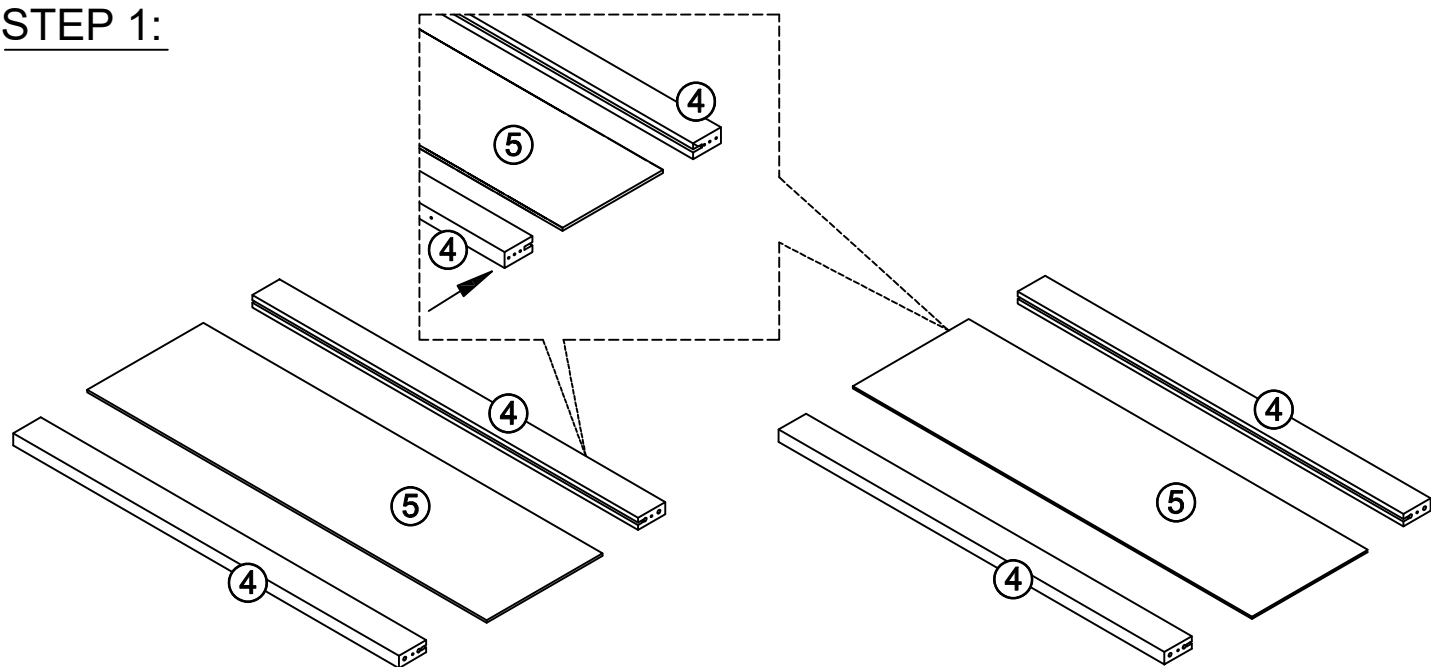


STEP 2:

A		C	
24PCS		12PCS	

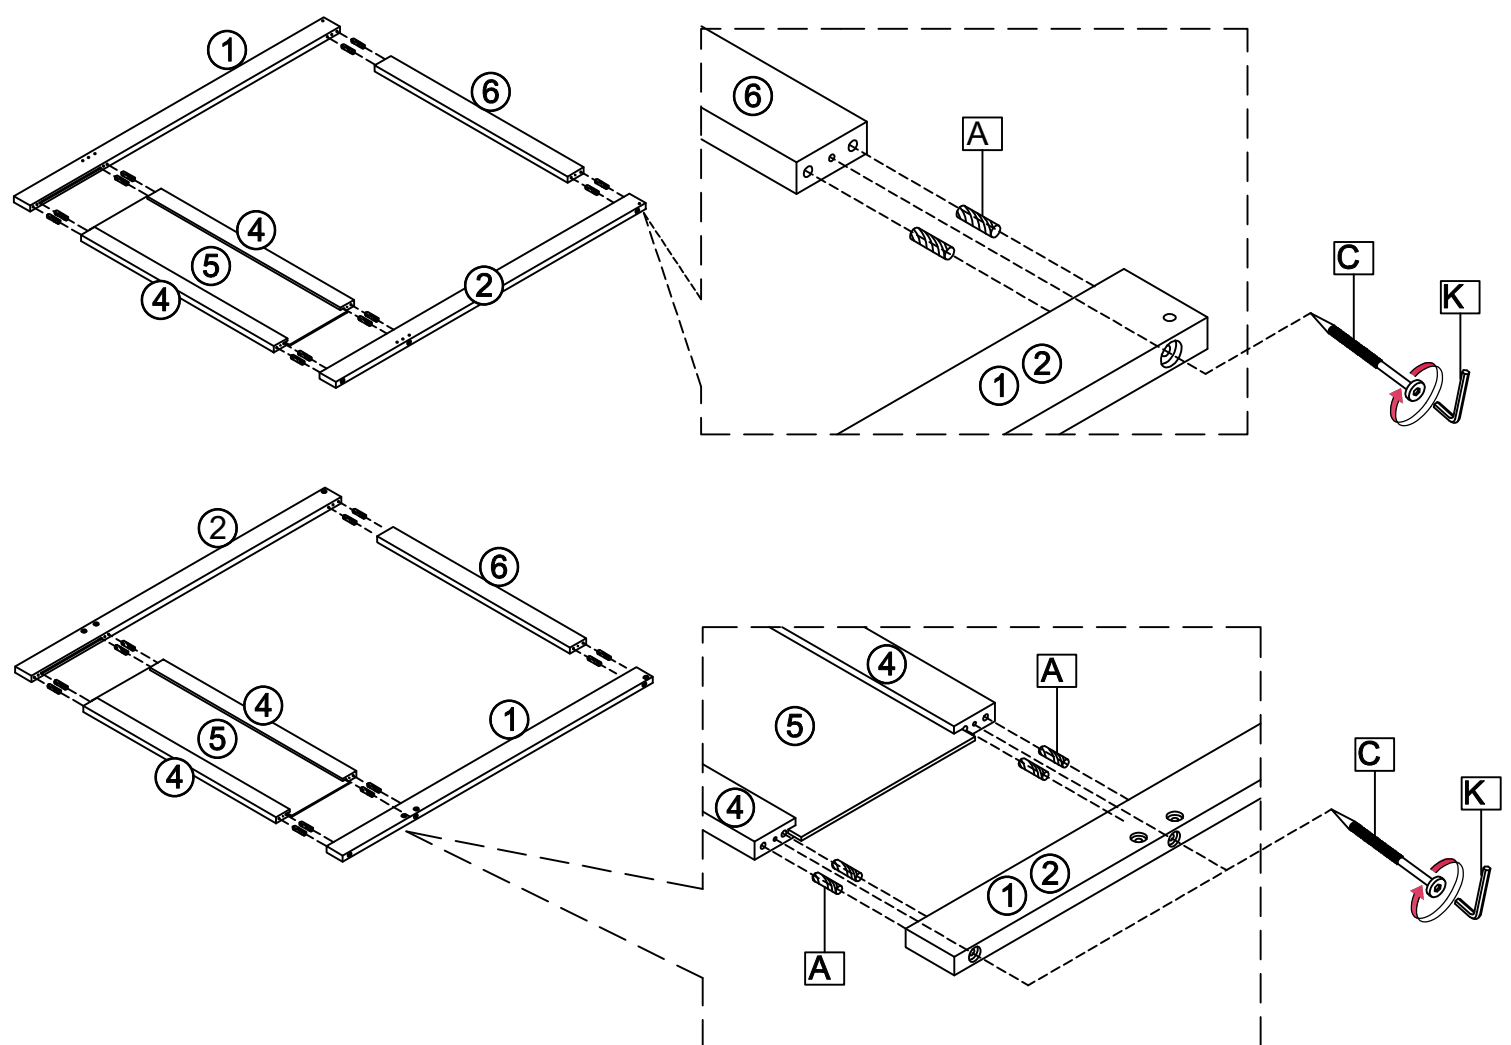

STEP 3:

E	A	B
		
8PCS	4PCS	8PCS

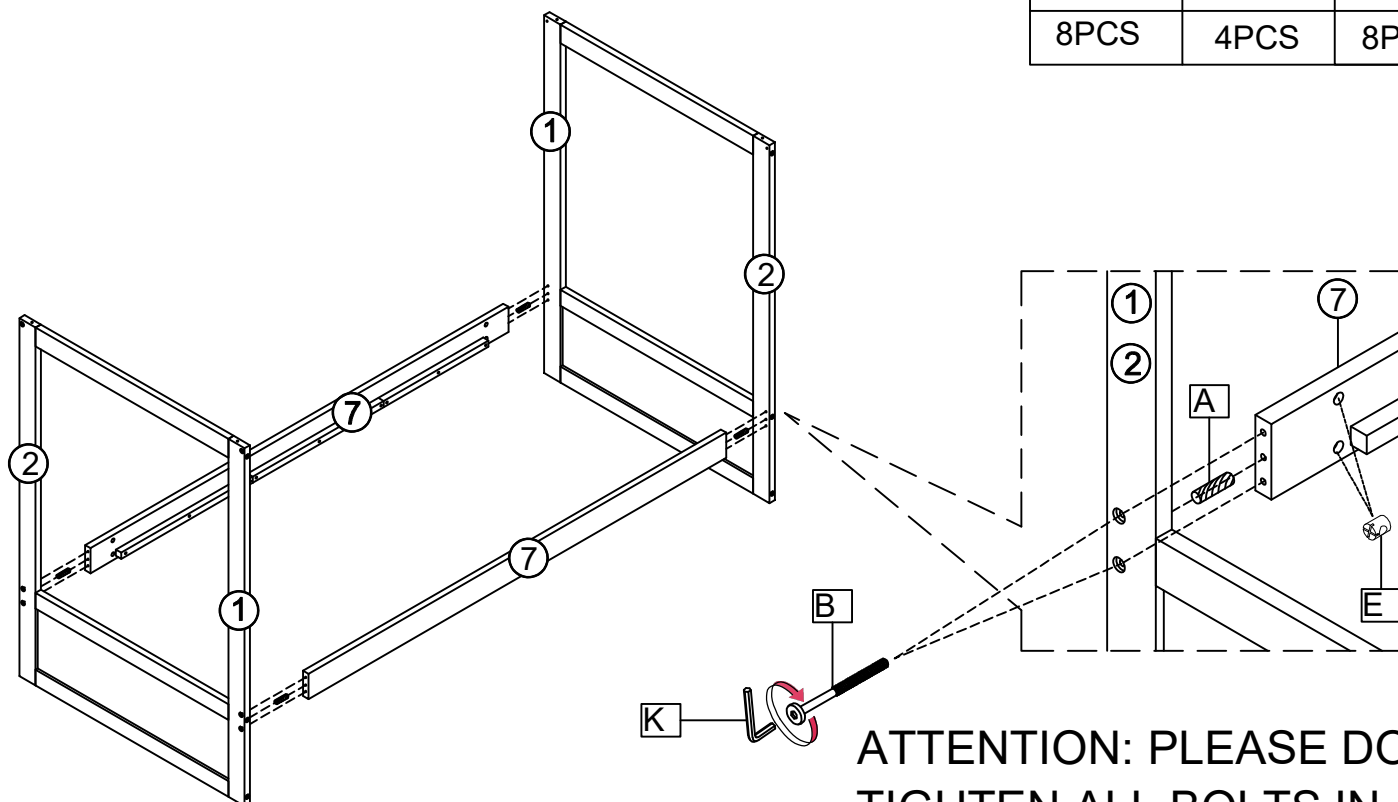


ATTENTION: PLEASE DON'T
TIGHTEN ALL BOLTS IN
THIS STEP, JUST TIGHTEN
80%



STEP 4:

D



8PCS

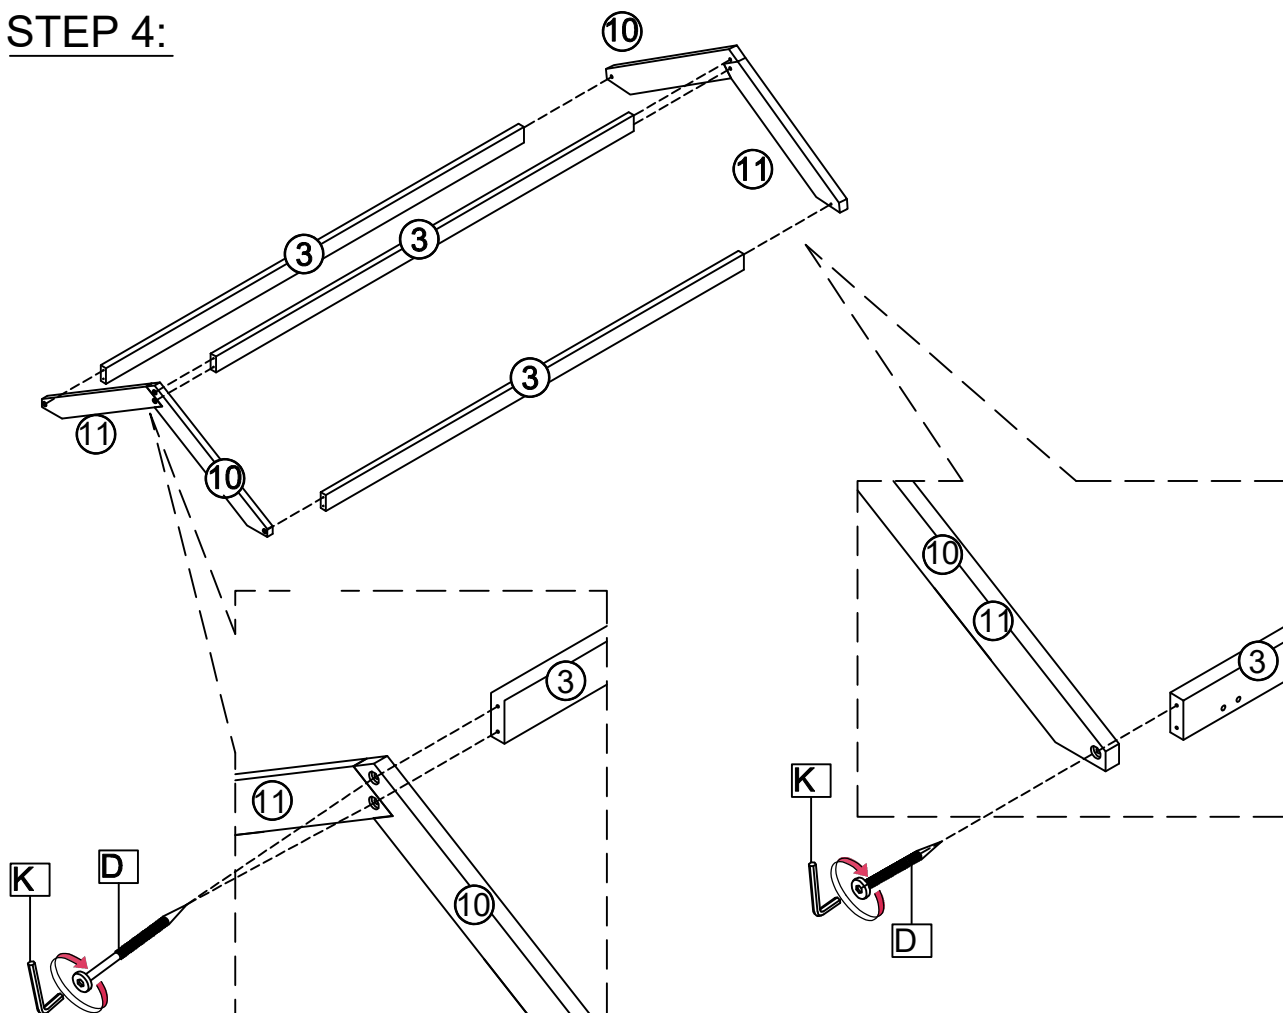

STEP 5:

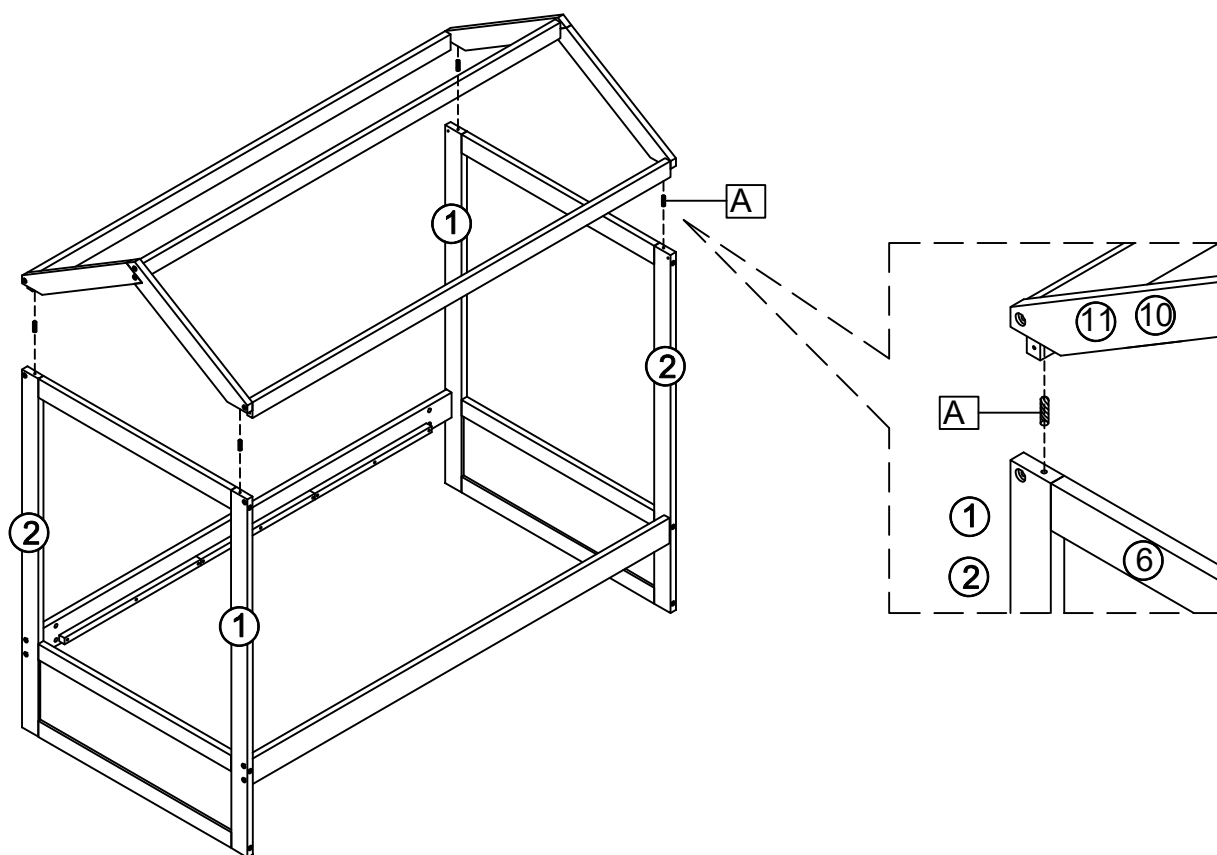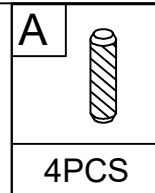

STEP 6:

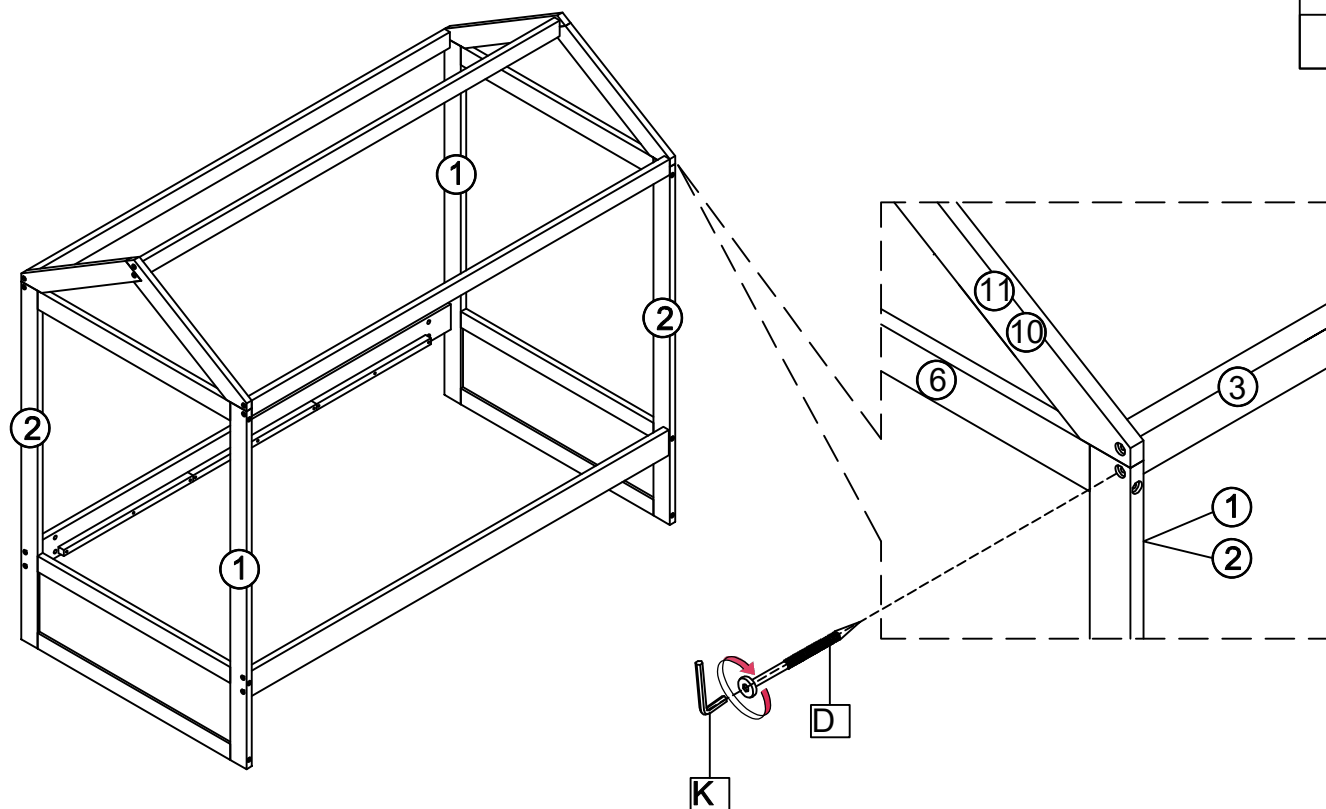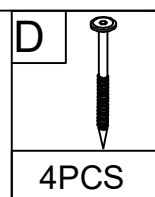


STEP 7:

STEP 2: SCREW
ALL SLATS

L		F	
4PCS		20PCS	


STEP 3: TIGHTEN
100% ALL
HEXAGON BOLTS

STEP 1: PULL SIDE
RAIL CLOSE
TOGETHER
ENOUGH TO FIT
THE SLATS

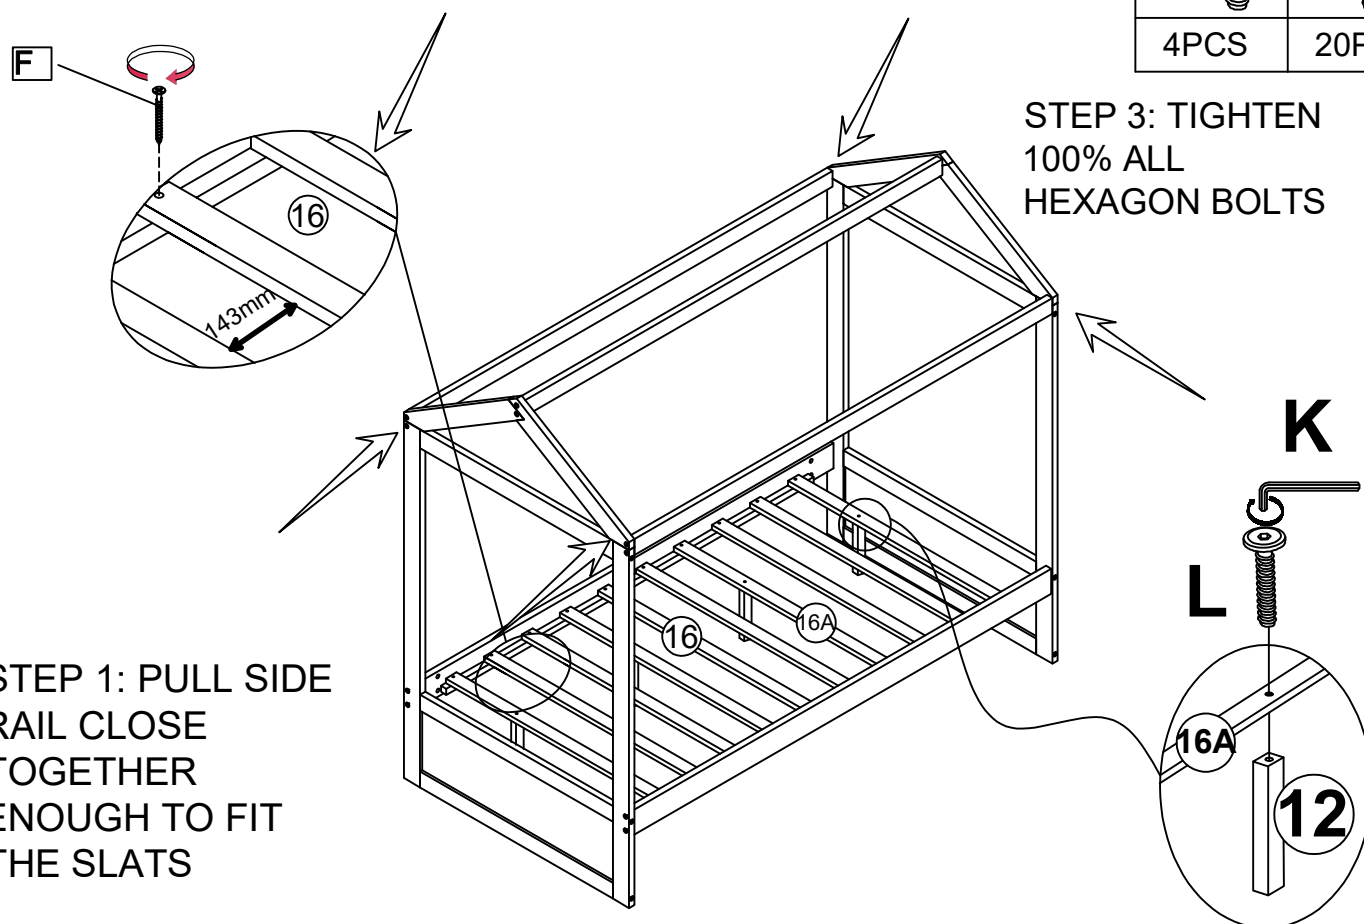


STEP 8:

F	
20PCS	

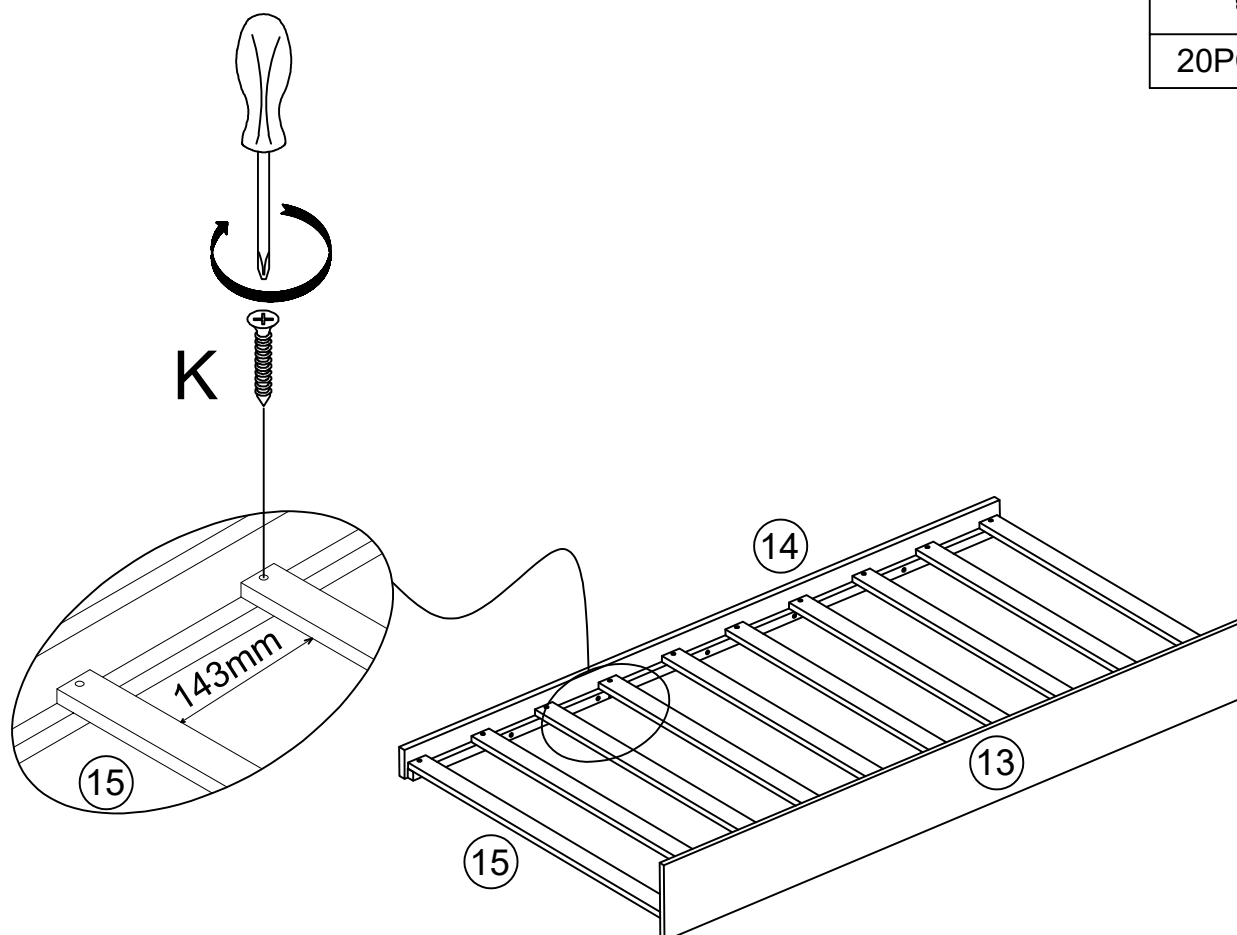


STEP 9:

J	G	H
		
3PCS	20PCS	4PCS

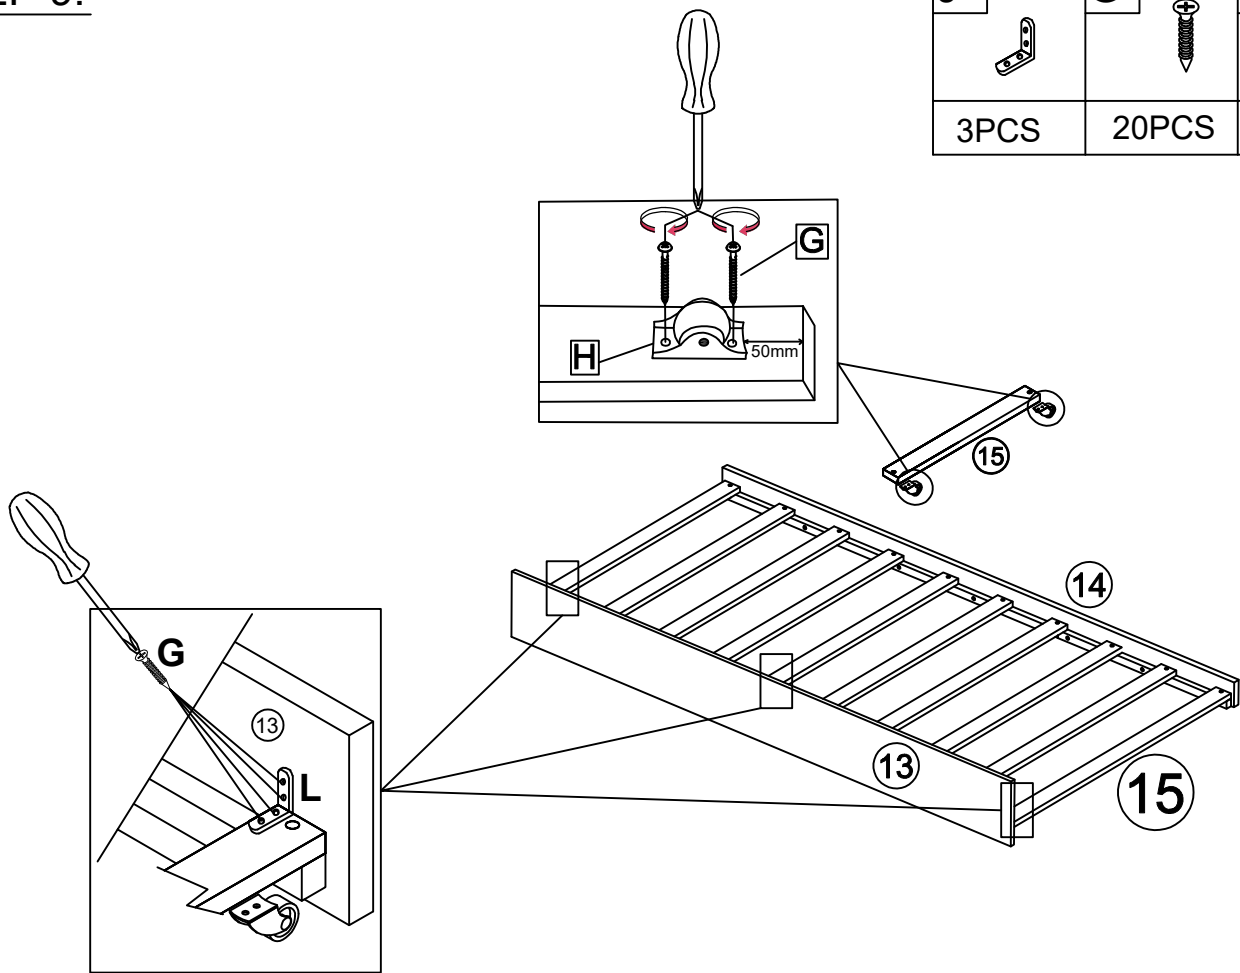

STEP 10:

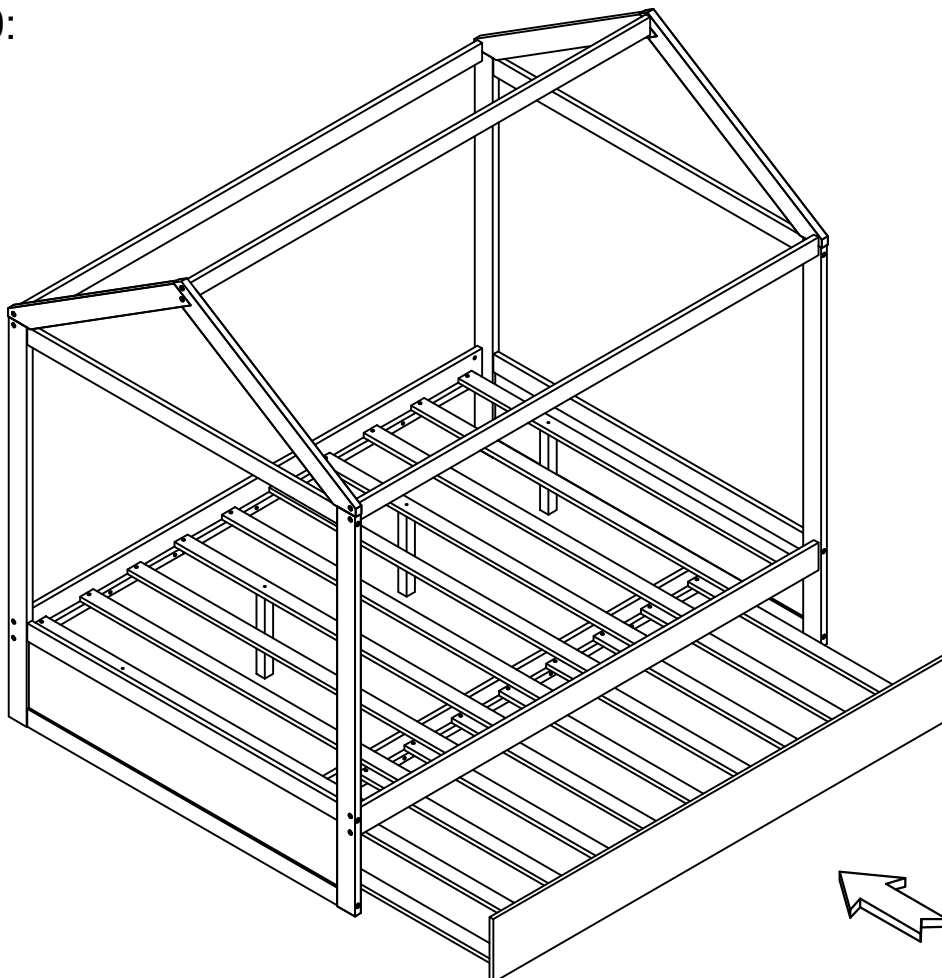

Completed

