

OUTDOOR FOLDING POLY ADIRONDACK CHAIR



Assembly Consideration

- Do not overtighten screws (Insert All screws before tighten screws)
- Follow Assembly Instructions Step by Step
- Do not discard original packaging if your received items damaged or with missing parts
- Count all Hardware parts before starting assembly
- Assemble items in a clear area and away from clutter to avoid misplacing assembly items

Safety Precautions

- Be very careful when folding chair to avoid smashing your hands or fingers.
- Avoid Using strong power tools to help prevent wood from cracking when assembly

A Perfect Match!



UPC#: 792057865885



















UPC#: 704129160125




UPC#: 792057866004


Assembly Instructions

Model: 2001


A		1pc	1	 M6X80	2pcs
B		1pc	2	 M6X60	4pcs
C		1pc	3	 M6X50	4pcs
D		1pc	4	 M6X40	2pcs
E		1pc	5	 M4.2X40	2pcs
F		1pc	6	 M6	10pcs
G		1pc	7		10pcs
H		1pc	8	Wrench	1set
I		2pcs			

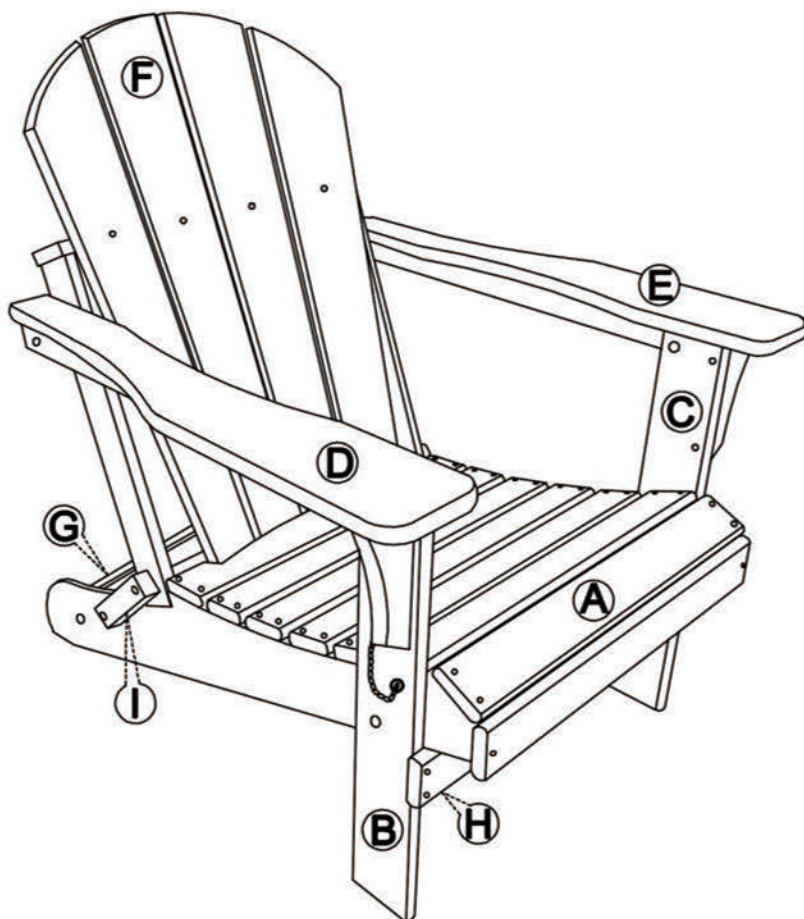

STEP 1

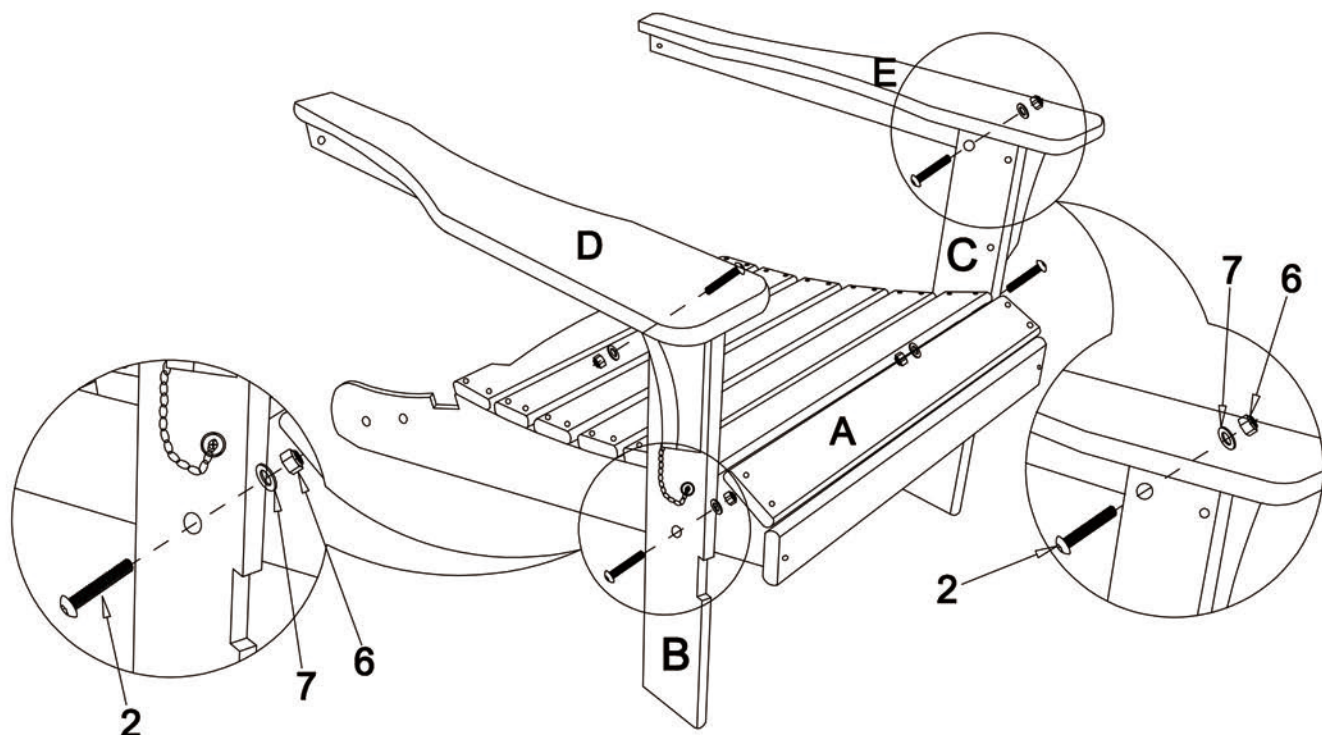

STEP 2

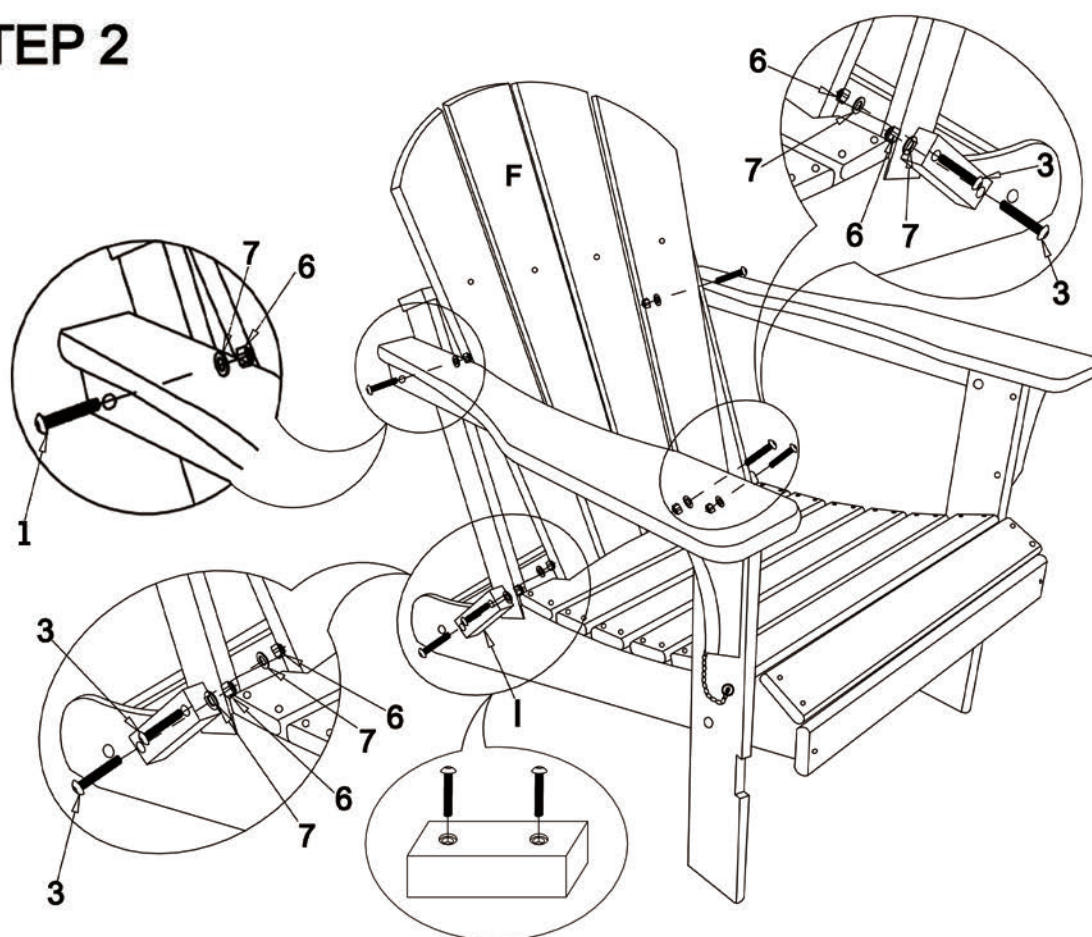

STEP 3

