


Window Treatments by Ricardo Trading LLC

Installation:

Install curtain rod (sold separately). We recommend curtain rod to be thin enough to slide through curtain opening and if grommet style to match rod finish. Remove Ricardo panel from package. Use iron on low heat or steamer to remove wrinkles prior to hanging curtain panels.


Determining Style:

Style (1)

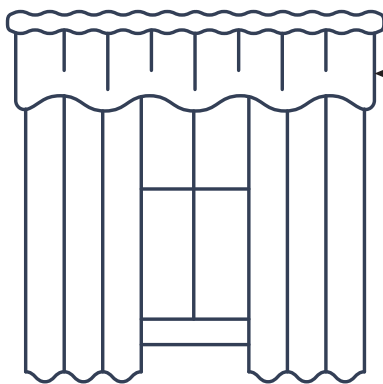


VALANCE (A) OVER PANELS

Style (2)

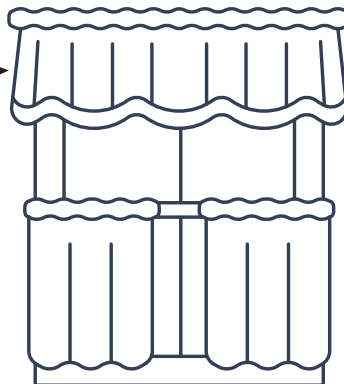

VALANCE WITH TIER PAIR (B)

Style (3)

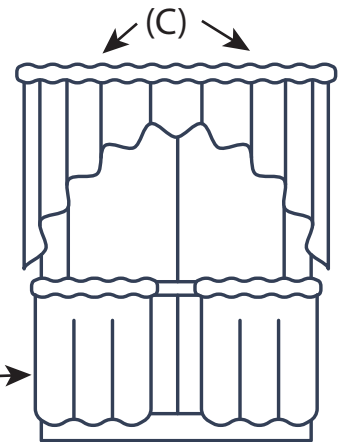

SWAG PAIR (C) WITH TIER PAIR

Style Tip:

Fullness is subjective, so here is a guide, use approximately 2 times your window width in fabric. For thinner fabrics use more fullness as much 3 1/2 times your window width, for thicker fabrics use less fullness. If you want to see more pattern use less fullness, if you want more fold use more for fullness.

Determining Width:

Plan to allow 4" to 5" inches top of window sill for mounting rod and hardware. Valance (A) should also be at least 4" wider than drapery panels as shown in Style (1). Valance (A) and Swag Pair (C) width, should be hung about 2" - 4" outside window frame as shown in Style (2) and (3). Tier Pair (B) width measures frame to frame as shown in style (2) and (3)

Determining Length:

(A) Valance - (Style 1) As a rule of thumb, a straight valance has a drop measuring 1/6 the curtain drop. Match a 12-inch valance drop with up to a 72-inch curtain drop; a 15-inch valance with a 72- to 90-inch curtain drop; and an 18-inch valance with a 90-inch and longer curtain drop. (B) Tiers - Tier curtains, which are shorter and generally don't cover an entire window, are usually either 24, 30, and 36 inches long. Curtains are measured from the top of the rod pocket to the end, not tip to tip. Tiers should sit just above the window sill as shown in style (2) and (3). (C) Swags - Generally don't cover an entire window, much like valance (style 2), and comes in standard sizes. Swags, like tiers can be alone on window or placed above tiers as shown in style (3).