




## Installation Steps

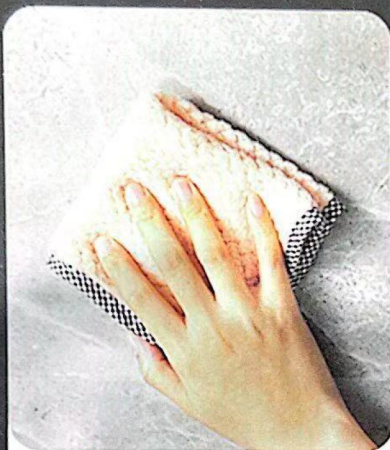

1 Clean the wall



2 Mark the mounting holes with colored pen.



3 Use a 6mm drill to make holes.



4 Nail the expansion pellets into the hole.



5 Screw on the screw to complete the installation.



6 Complete and use

