



SETTING UP YOUR INDUSTRIAL CONCRETE S103E SPRAYER 190448



1. Assemble Hose To Tank

IMPORTANT: Do not attempt to heat or alter hose or hose nut.

1. Align hose and sciew on to tank. (See Figure A).
2. Tighten with a 5/8" wrench. (See Figure B).



Figure A



Figure B

2. Assemble 24" Brass Wand

Place 176332 check valve inside of 182566 brass wand. Then place brass teejet nozzle and cap on top and screw into place (See Figure C)

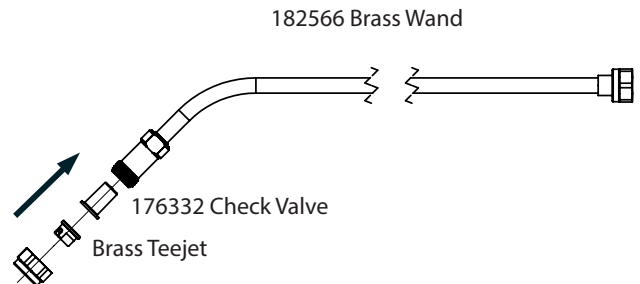


Figure C

3. Assemble XL Valve to Hose

Screw on XL Valve to end of hose from sprayer. Using a 9/16" wrench for sprayer hose and a 3/4" wrench for the XL Valve tighten securely. (See Figure D)

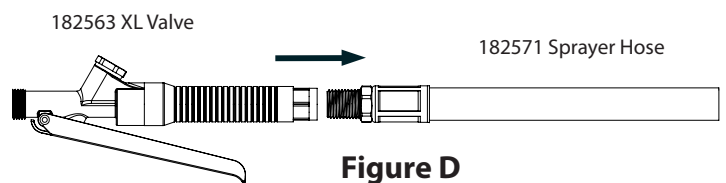


Figure D

4. Assemble Wand to XR Valve

Screw on Wand Assembly to XL Valve using a 13/16" wrench. (See Figure E)


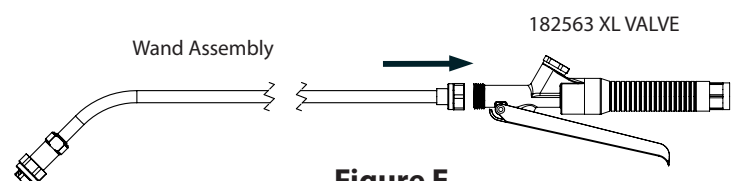


Figure E


PARTS INCLUDED WITH YOUR
INDUSTRIAL CONCRETE
S103E SPRAYER
190448



176332
CHECK VALVE
POLY PRO BLACK

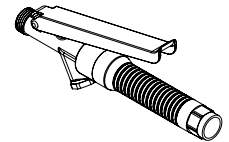


182563
XL VALVE (VITON)




182566
ASSEMBLY 24"
BRASS WAND



182576
TIP, TEEJET BRASS
TP11010



182644
SEAL KIT S103E

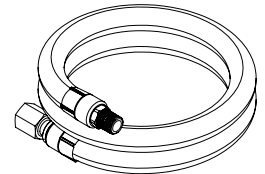

182571
HOSE 50"




182577
TIP, TEEJET BRASS
TP9505



182618
WARRANTY CARD



182617
MANUAL



182677
CARRYING STRAP