


## How to Measure for Inside Mount Blinds/Shades

Inside mount window treatments are installed inside the window frame or casing - they provide a sleek, clean look which can highlight your window size and moldings.

1. Measure the width of your window at the top, middle and bottom of your window opening and use the narrowest measurement of the three. This will be the width for blinds /shades.
2. Measure the depth of your window frame to ensure the window recess meets minimum depth requirement of the product for inside mount.
3. Our product's minimum depth requirement includes the mounting hardware and head rail. The shade measurement is exactly as advertised including mounting hardware.
4. For length, our blinds and shades come in 2 lengths: 64" or 72". The length is measured from the top of the head rail. Make sure your window is not longer than our product.

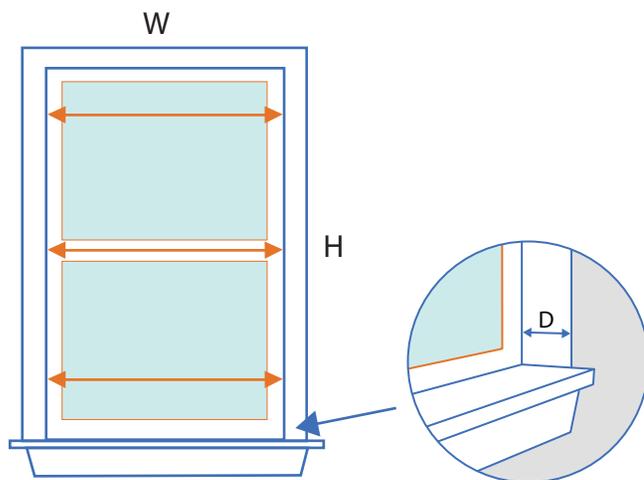

## How to Measure for Outside Mount Blinds/Shades

Outside mount window treatments are mounted on the window molding, wall, or ceiling. Your windows will have better light control and privacy; and appear wider and longer

1. Make sure you have at least 2" of flat space above the molding or window frame.
2. Next, measure the width you want covered. We recommend at least 1.5" of overlap on each side of the window for blinds and shades, 2" or more of overlap on each side for solar or roller shades. Extra width provides more privacy and light blockage.
3. Determine the location of the head rail or top of the window treatment. This can be installed on the window molding (if there is enough flat surface) or on the wall.
4. Measure the height of each window from the location of the top of the window treatment to where you want the bottom of your shade to rest.
5. Make sure your desired product's length does not exceed the product's advertised length. Our products are manufactured at 64" or 72" total product length.

