


D214 Installation Instructions

INSTRUCTIONS:

1. Thoroughly clean around drain opening in sink.
2. Apply 1/8" bead of silicone around drain opening approx. 1/2" from edge of opening.
3. Remove nuts and washers and place sink strainer body through opening.
4. From the underside of the sink, first place the rubber washer and then the thin metal over large threads. Then screw large metal or plastic nut tightly against the washers.
5. Complete the installation by further tightening large nut with nut wrench or using a screw driver and hammer (see illustration) until strainer is water-tight.

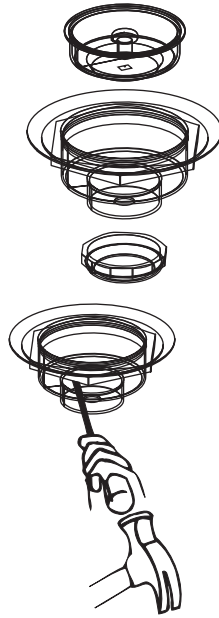

INSTRUCCIONES:

1. Limpie alrededor de la abertura del caño del lavabo.
2. Aplique un cordón de silicona alrededor del caño aproximadamente 1/2 pulgada del borde.
3. Retire la tuercas y arandelas y coloque el cesto del filtro a través de la abertura.
4. Desde abajo del fregadero, coloque primero la arandela de goma y luego la metálica en las roscas grandes. Luego atornille la tuerca grande ajustando contra las arandelas.
5. Complete la instalación ajustando la tuerca grande con una llave inglesa o usando un destornillador y un martillo (vea la ilustración) hasta que el filtro selle herméticamente.