

ZEAFIVE®


ASSEMBLY INSTRUCTIONS

BATHROOM VANITY TOP

MODEL.
FO-48W



PRODUCT
INSTRUCTION
VIDEO

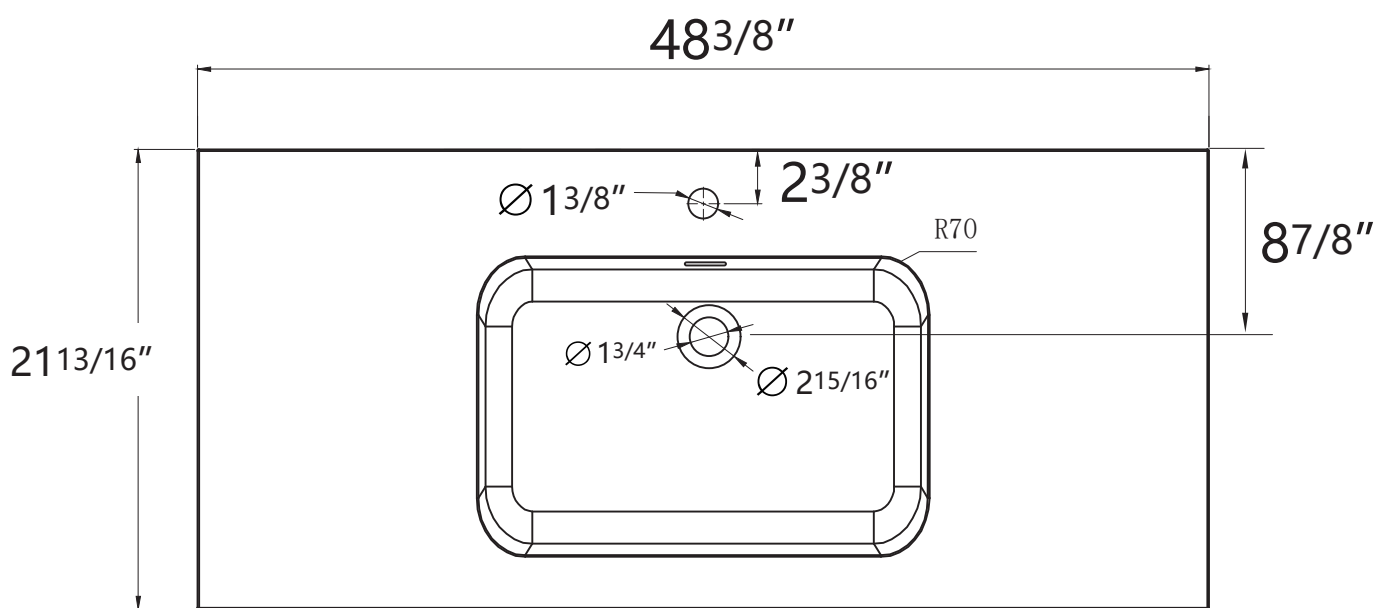




NOTE: Any size of the vanity's intallation steps are the same.

INSTALLATION STEPS


1.Prepare the Vanity: Make sure the vanity is in place and securely attached to the wall.

2.Seal the Edges: To prevent water damage and ensure a clean finish, apply a bead of silicone caulk along the edges where the countertop meets the vanity.

(For Example)

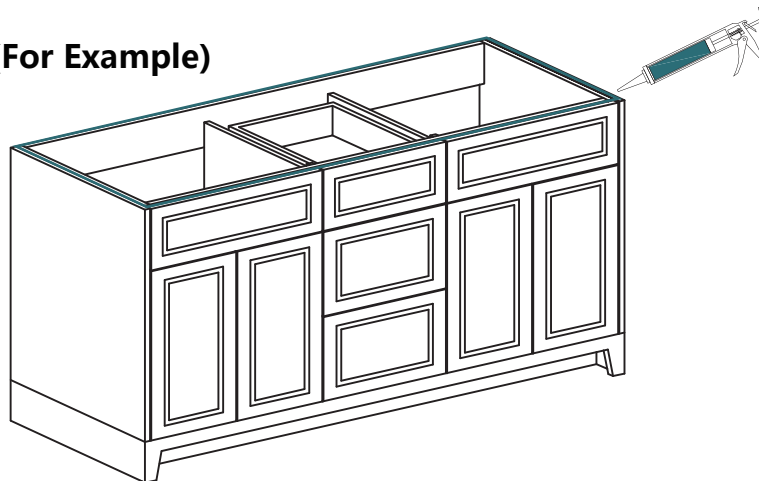

3.Attach the Countertop: Secure the solid surface countertop on the vanity.

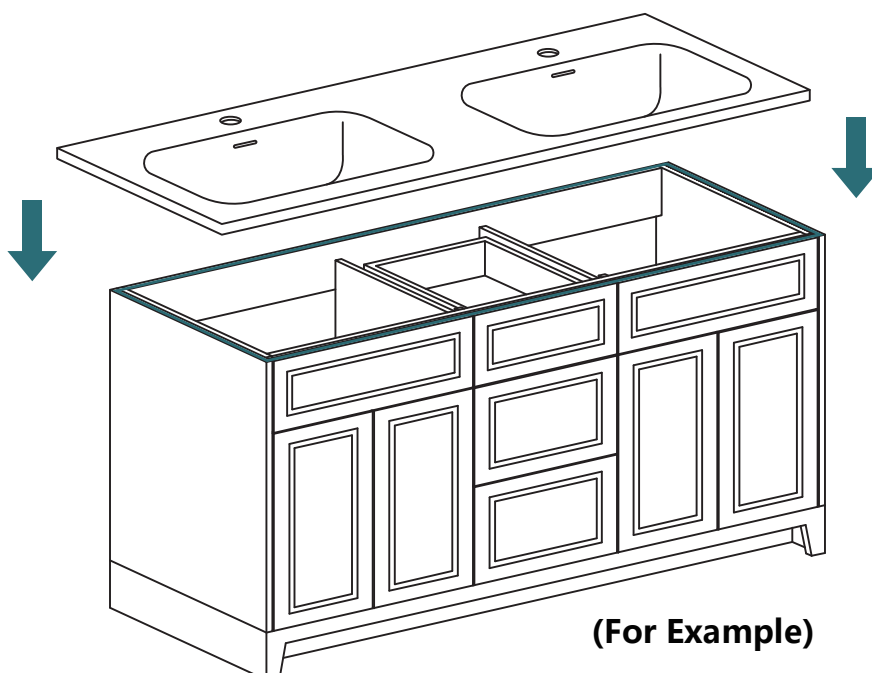

(For Example)



Email: service@bestgosupplychaininc.com



HOME SERVICES



INSTALLATION VIDEO

Missing Part or Defective?

Please Contact the Customer Service Team

 service@bestgosupplychaininc.com