

Natural Roller Shade Installation Instructions

Dear Customer:


Designed for an easy installation, your newly purchased roller shade has been engineered and made from the finest material available under the highest quality standards.

Please read the instructions carefully before setting up your new roller shade.

Your roller shade includes the following:

Description	Quantity
Bracket	2
Mounting Screw	4
Bottom Slat	1

tools needed

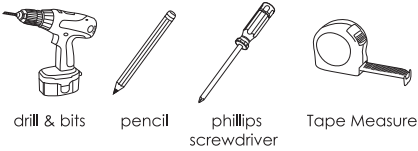

Mounting Options:

Inside mount : If the shade is mounted inside the window frame either to the top of the frame or to the sides, allow 1/4" inch clearance between top of frame and fully rolled-up shade. This will allow the shade to be lifted and inserted into the brackets.



Outside mount : If the shade is mounted either on or outside the window frame, hold the shade to desired position (making sure it is level) and place pencil marks.

Note:


For wallboard or plaster: Use hollow wall anchors for additional support (not included).

For concrete, stone, brick or tile: Use drill bit and anchors before fastening the screws (not included).

For metal surfaces: Pre-drill holes before fastening the screws.

Step 1: Mounting Brackets

Using the pencil mark as a guide, mount the bracket with 2 screws. Ensure there is 1/8" space between the roller shade ends and the brackets for optimum performance.

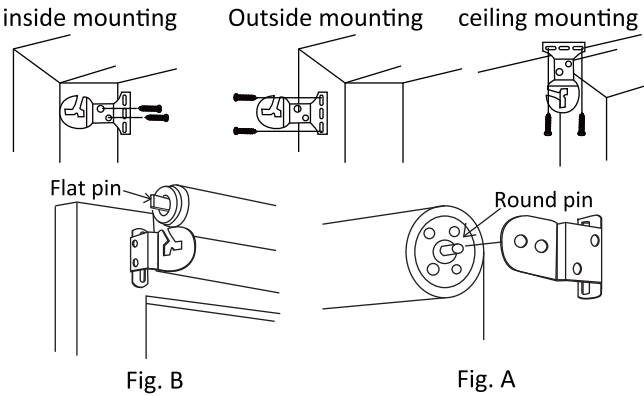


Step 2: Fitting the shade into the Brackets

After mounting brackets are mounted. First insert pin-side of shade into hole of right bracket. See Fig A. Then slot in flat-pin end, spring side into the notch of the left side mounting brackets. See Fig. B.

Step 3: Bottom Slat

Slide the bottom slat into the sleeve at the bottom of the shade to add stability when operating the shade.

Troubleshooting, tension too loose

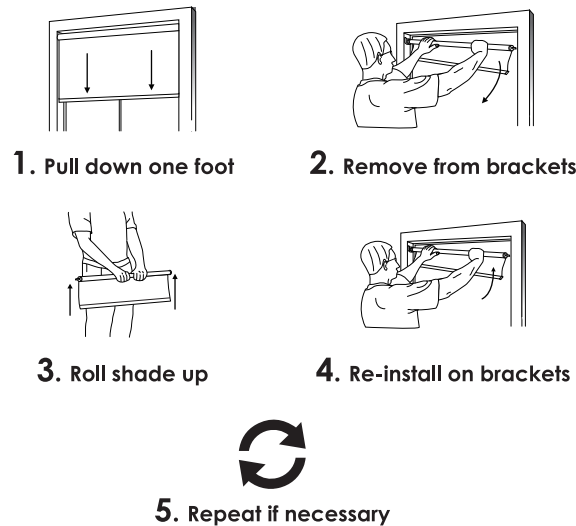

Troubleshooting, tension too tight

