




Installation Manual



Package list

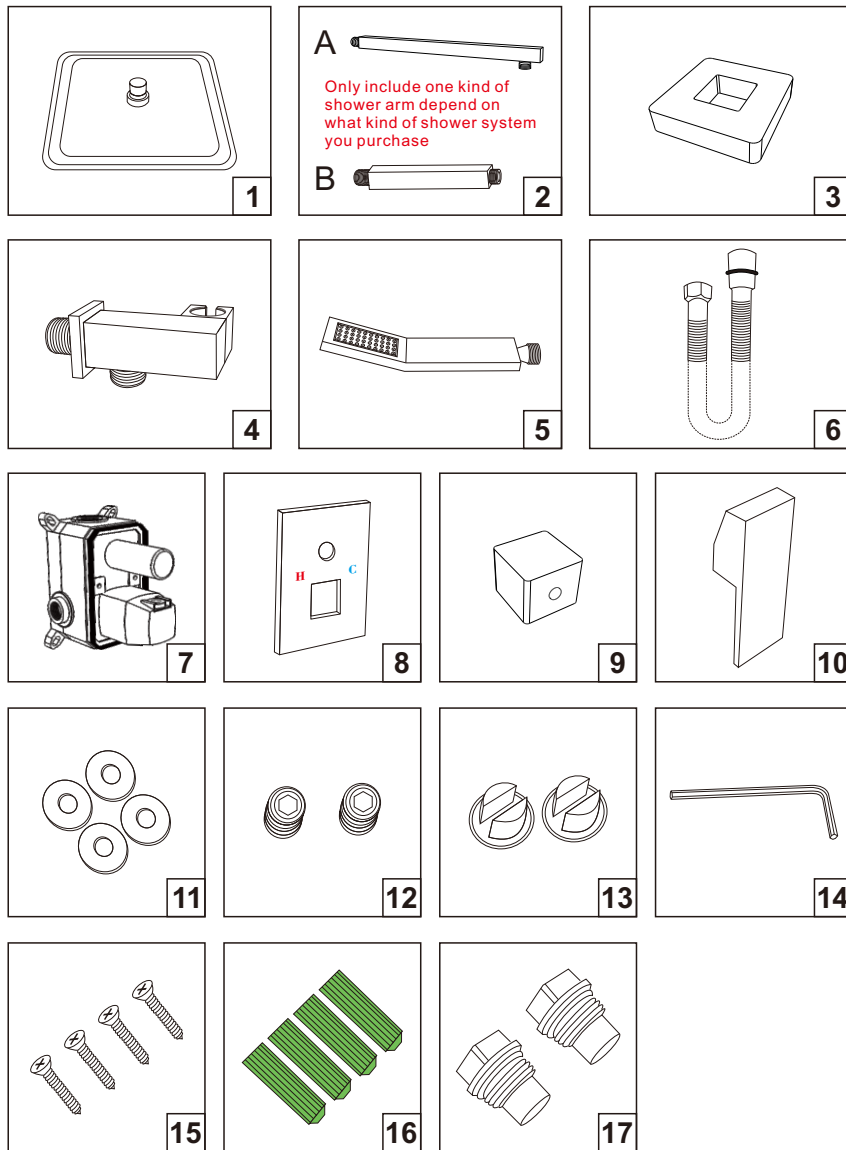


WARNING: Choking hazard. Please keep all small parts and plastic bags out of the reach of children.

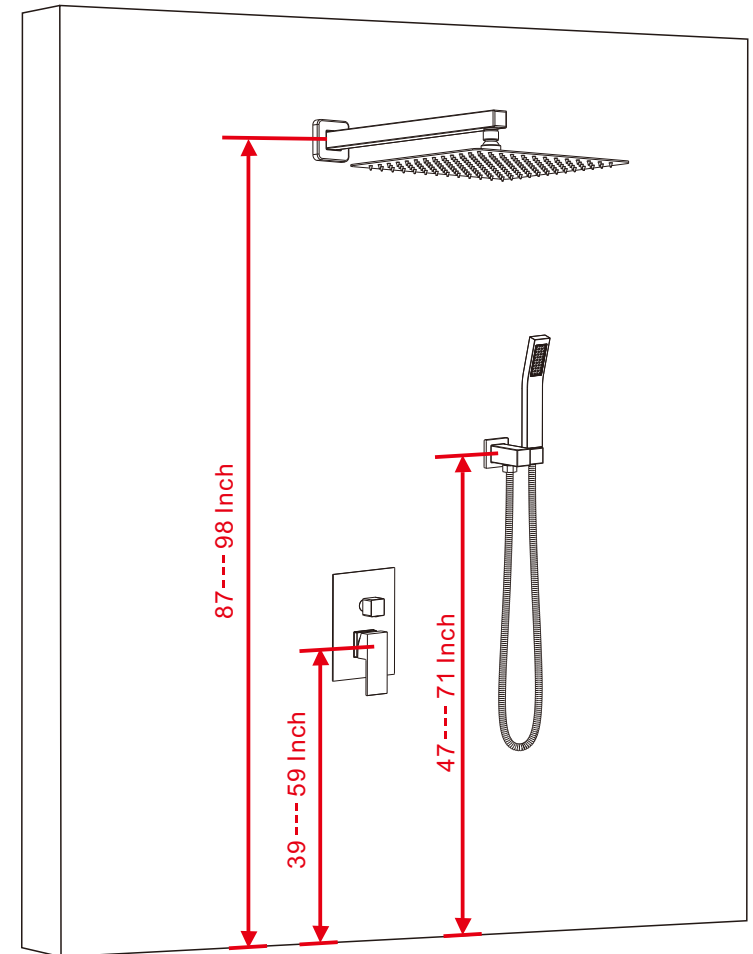


Suggested installation height,
can be adjusted according to personal habits

1.INSTALL SHOWER VALVE

Step 1 : Measure valve installation dimensions.

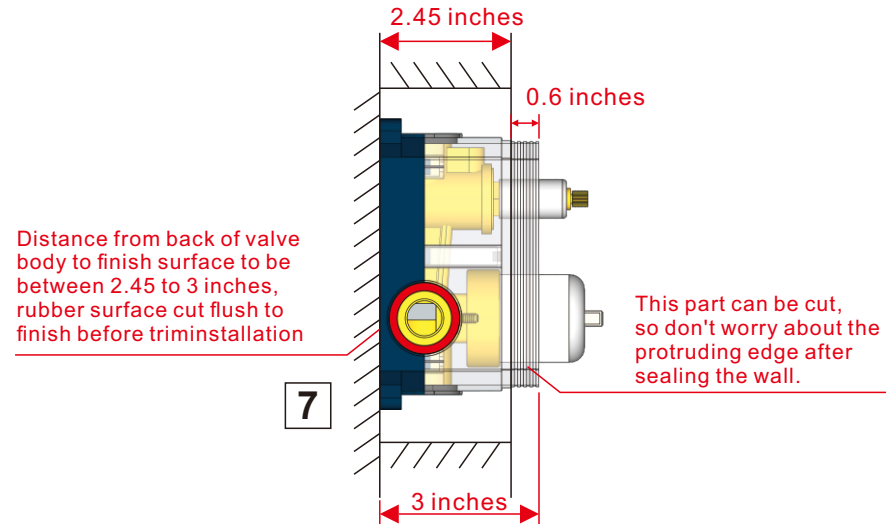

Step 2: Determine the position of the valve.

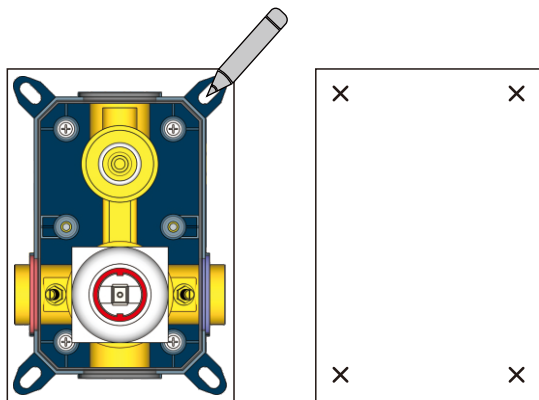

Step 3: Drill, hammer in anchors, fasten valve body to wall
(This step is for masonry application.)

4X

11



4X

15





4X


16





Drill size: 6MM

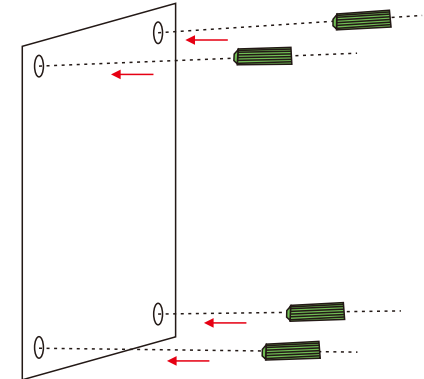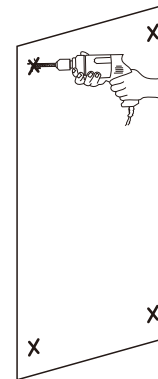

Step 4: Check for level on valve body

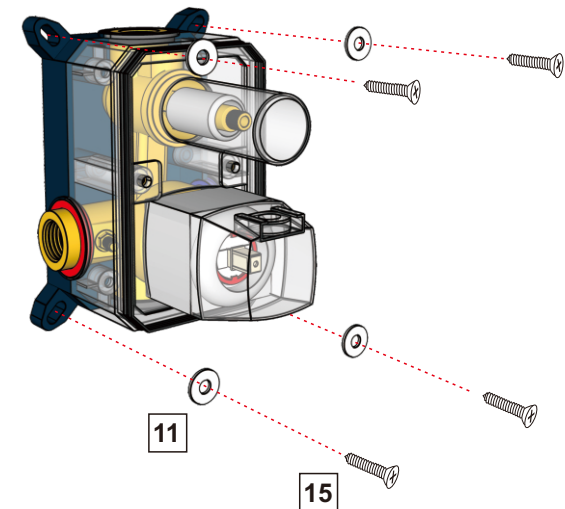

Step 5: Connect the water pipe. (Pipe clean and free of impurities)
Be suitable for Pex pipe, Copper pipe and PVC pipe

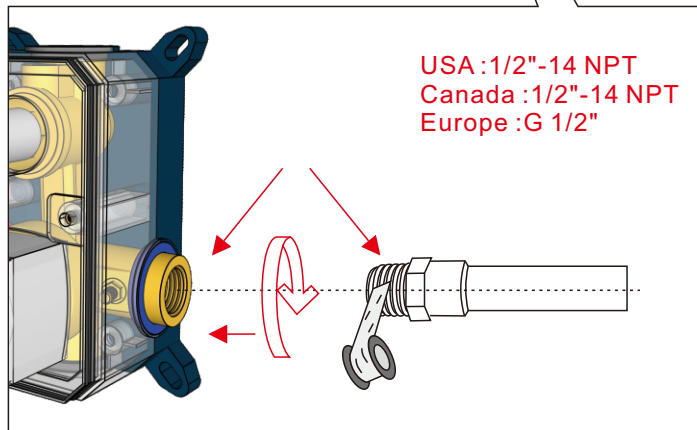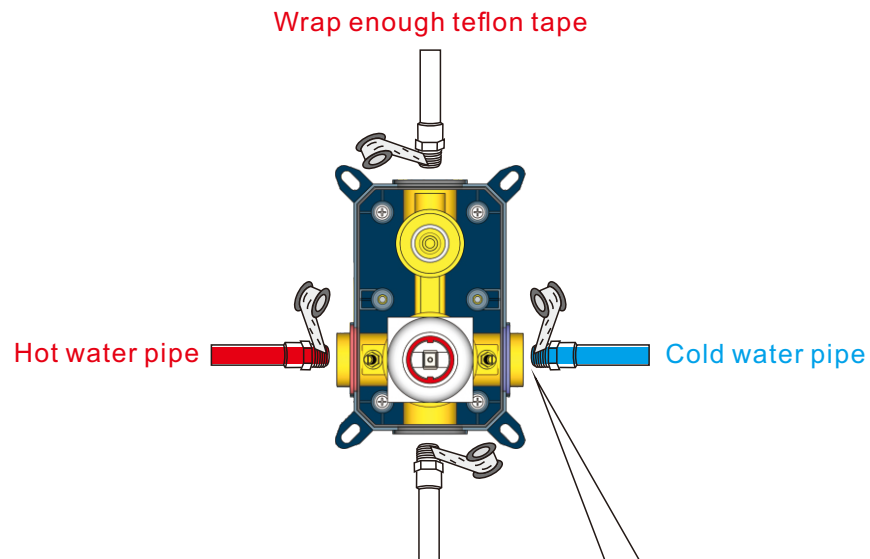



Do not solder within 12 inches

1/2 inch male NPT fitting connection to be made with pipe thread sealant, do not over tighten


Step 6: Test for Leaks Before Installing Wall Board

1. Check the valve connector for leaks;
2. Open the valve and test the hot and cold water left and right;
3. Checking the Water diverter knob can correctly switch between the showerhead and handheld.




A style :

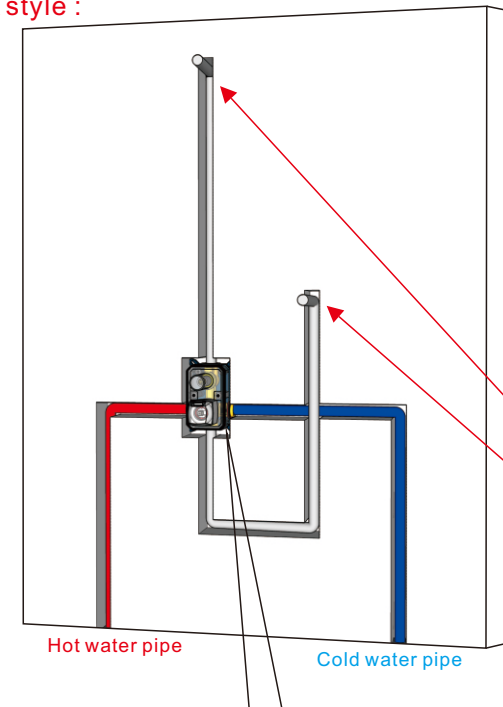


B style :

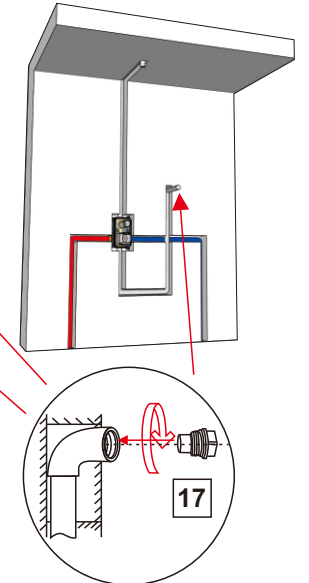

Both hot and cold water pipes must be open

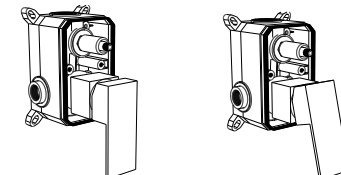
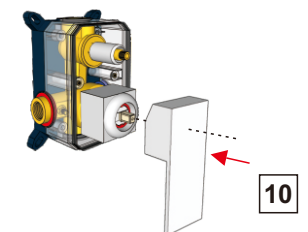
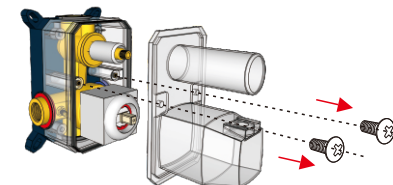


Pull forward

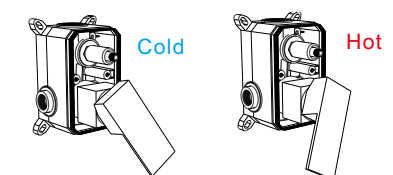


Rotating R or L controls temp



Step 7: Tile

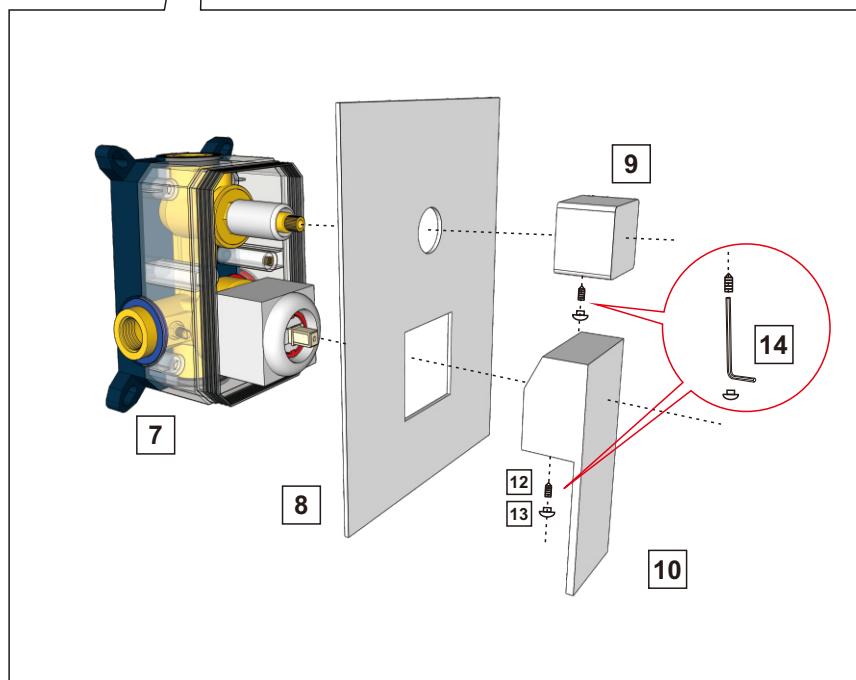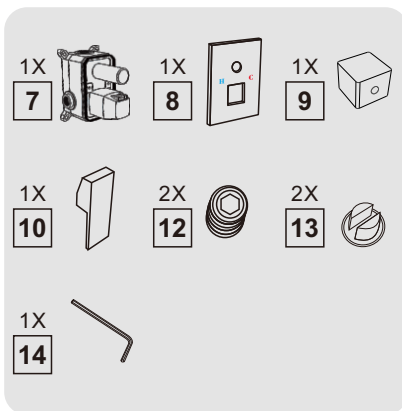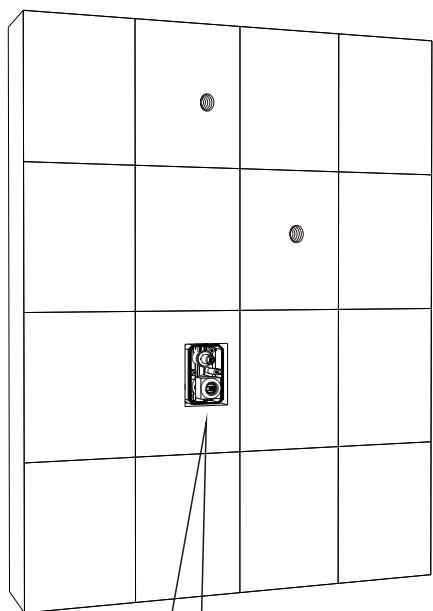



Important Note

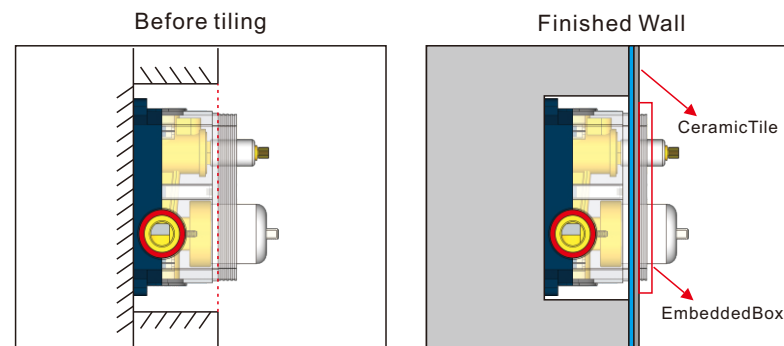


Adjust the red collar to limit the water flow and temperature.

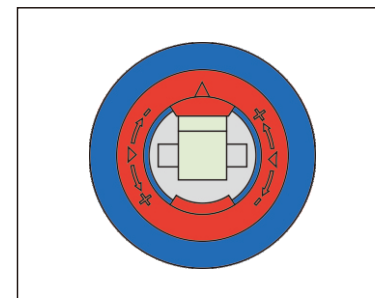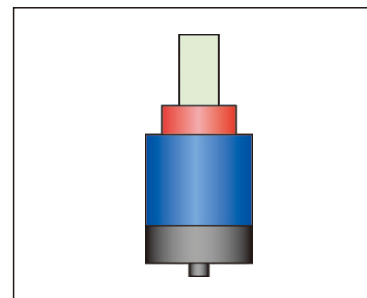


Turn clockwise to reduce water pressure until it closes.
Unscrew the water pressure will increase

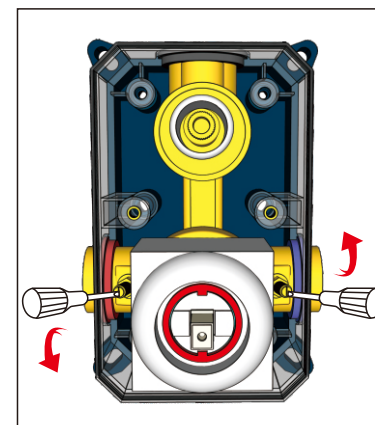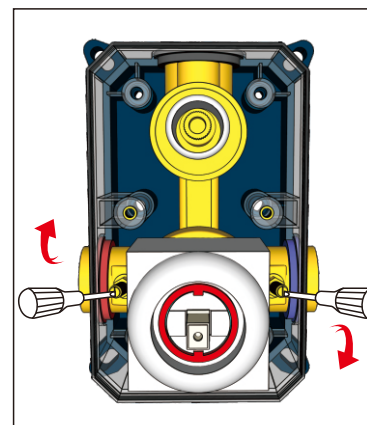


Wall Mounted /Ceiling Mounted installation Before Tiling

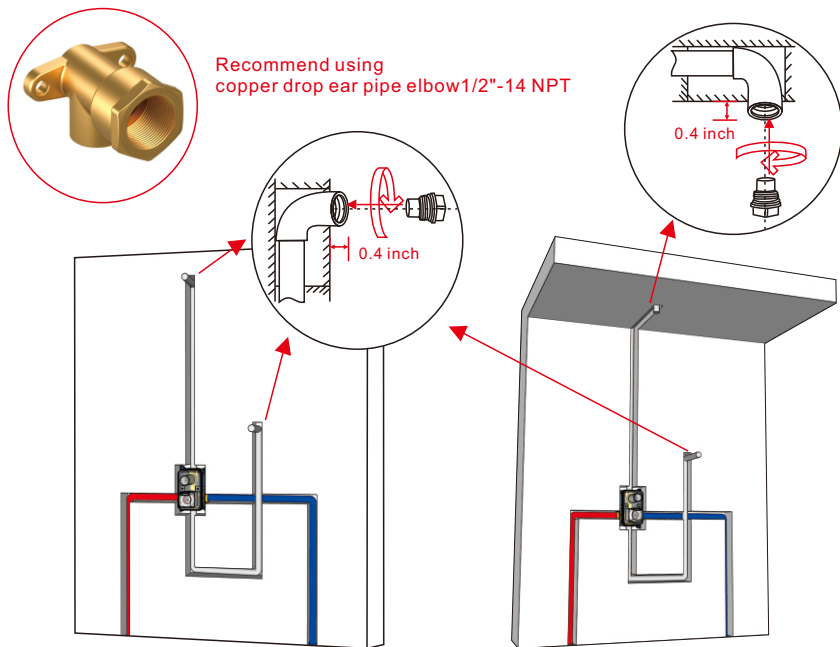


After tiling, the distance from the tile surface to the brass fittings (recessed the wall) is: 1: The shower bracket is 0.4 inch.
2: The shower arm is 0.4 inch.

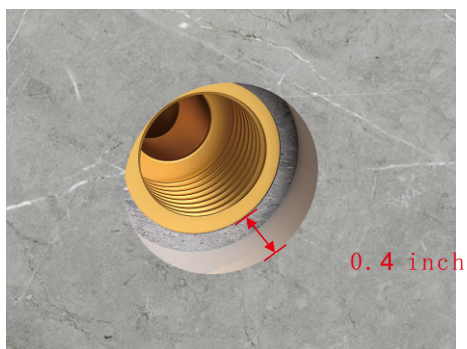

2.INSTALL SHOWERBRACKET





1.Wall mounted installation(Fits to A Style and C Style)


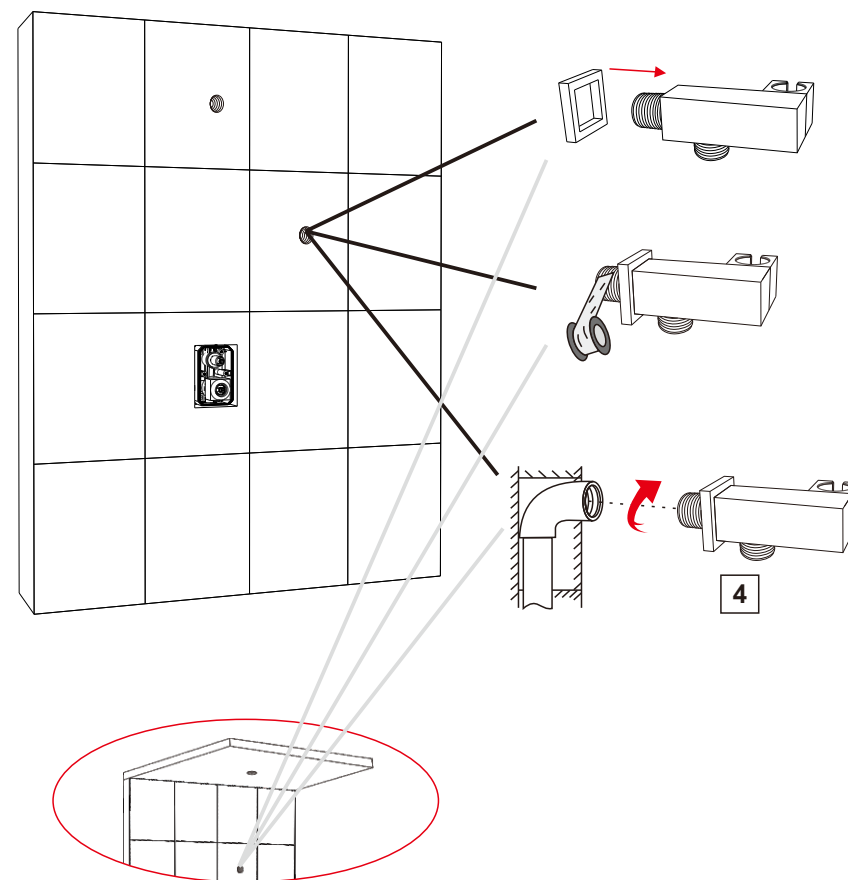


2.Ceiling Mounted installation(Fits to B Style)



3. INSTALL HANDHELD SHOWER HEAD AND SHOWER HOSE

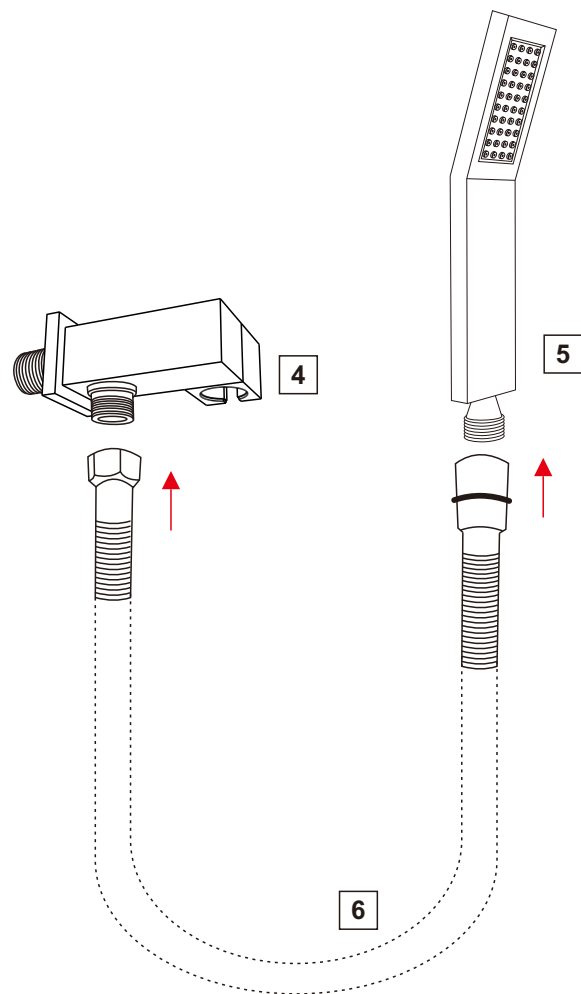

4. INSTALL SHOWER ARM (A STYLE) AND RAIN SHOWER HEAD

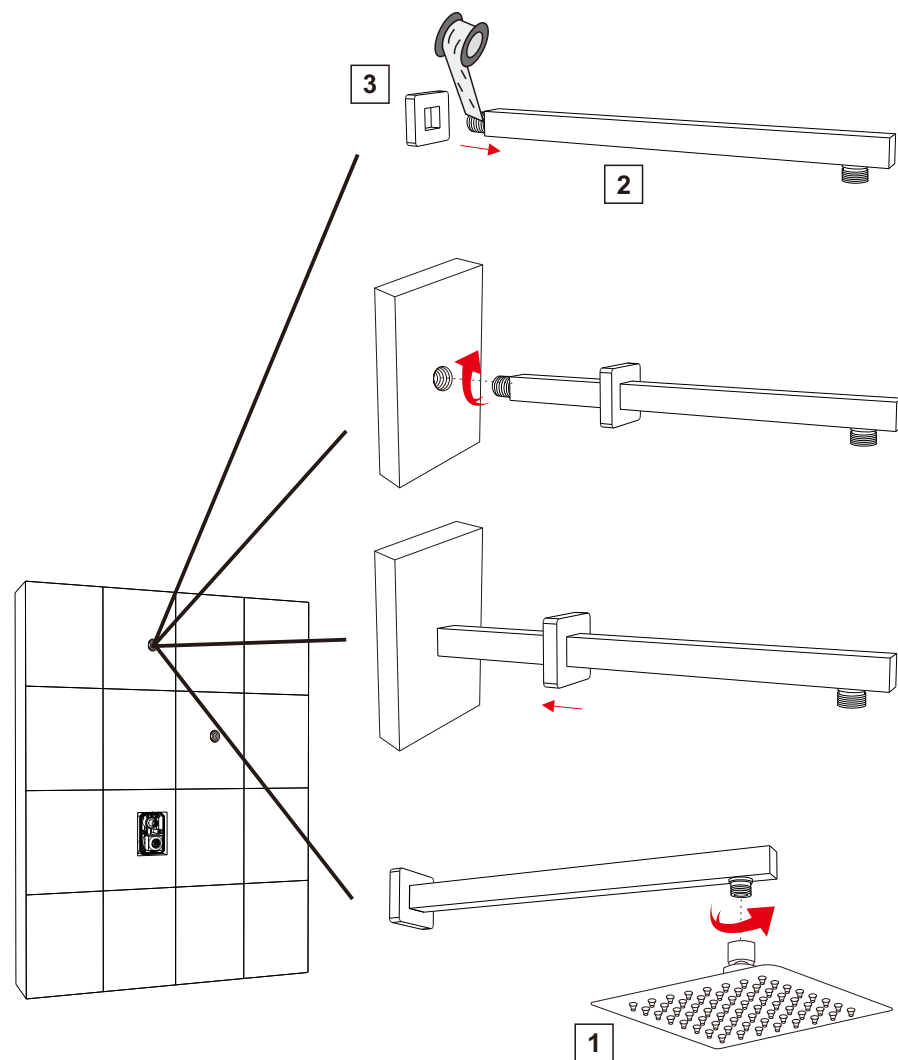

4.INSTALL SHOWER ARM (B STYLE)
AND RAIN SHOWER HEAD

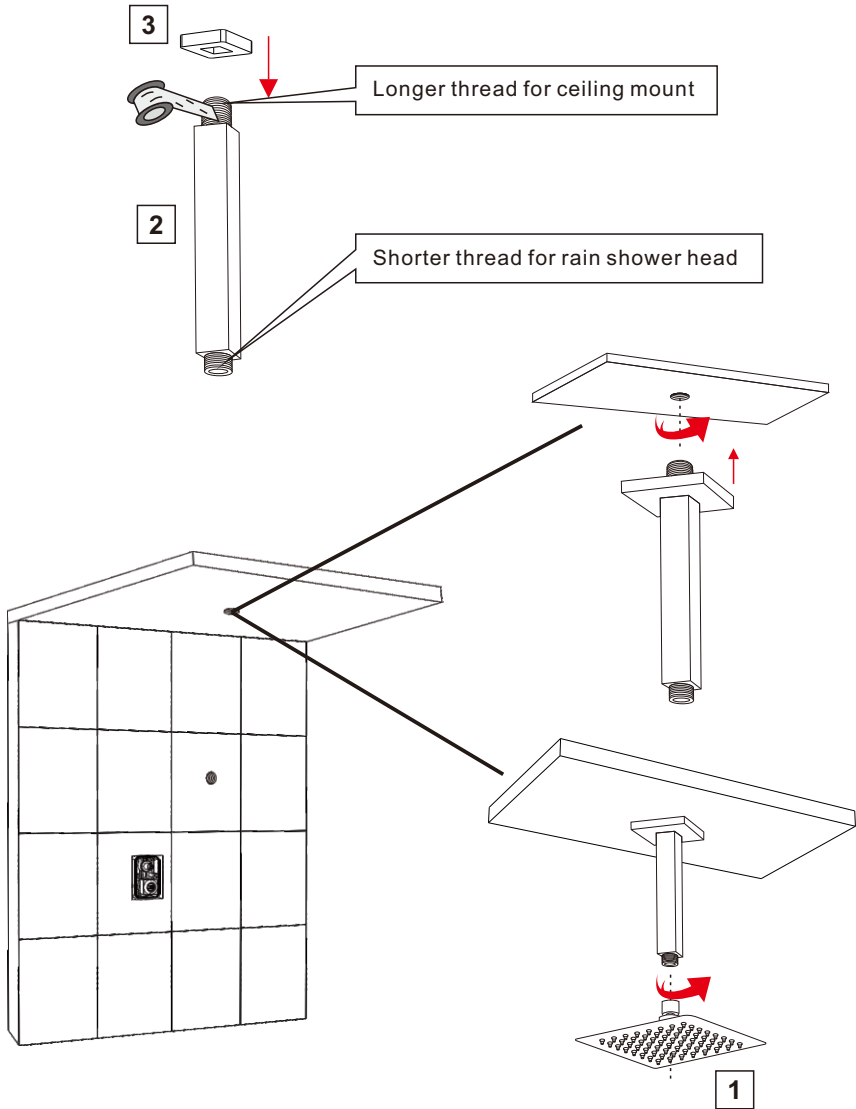

Customer Name	
Retailer /Assembly Fitter	
Purchase Date	
Warranty Duration	5 years as of purchase date

1.If the above contents are not complete, the warranty will be considered void, please confirm the above contents when you purchase.

2The complimentary repairs are limited to instances mentioned on the warranty card only.

3.Within warranty period, if any technical faults occur, customer should present this warranty card along with the invoice to the retailer / assembly fitter.

Guarantee Repairs Claims

1. Within warranty period, FORIOUS SANITARY is responsible for repairing any defective product free of charge.

2. Please contact seller via email with this warranty card and invoice if repairs are needed during the warranty period.

3. ANDROME SANITARY will not be responsible for any claims listed below.

3.1 The damage and/or malfunction caused by improper use an/or repairs; or any unauthorized reconstruction; including any damage caused by abuse (i.e. fall, throw... etc.)

3.2 Please engage the services of a professional plumber. ANDROME SANITARY will not be responsible for any damage and/malfunction caused by wrongful installation.

3.3 The damage and/malfunction caused by removing after installation or other factors.

3.4 The damage and/malfunction caused by application beyond the scope of usage.

3.5 The damage and/malfunction caused by sand, dirt and other impurities.

3.6 The damage and/malfunction caused by improper/insufficient maintenance; rust on finishing etc...

3.7 The damage and/malfunction caused by fir, earthquakes, flood, lightning and other natural disasters, pollution, harmful gas, salts, abnormal voltage and other factors.

3.8 On occasions when the warrantee card or invoice is not presented.

4. The recommended water temperature of hand shower and rain shower is <42°C; water pressure 0.1-0.3 Mpa, The highest temperature should not reach beyond 70°C and water pressure should not exceed the limits of 0.05-0.5 Mpa, Please keep any shower products away from the heating devices to avoid potential risks.

5. This limited warranty applies only to the original end-user or business. It expressly excludes labor charges, removal charges, installation, or other incidental or consequential costs, Any inappropriate application will void the warranty.

6. This warranty cannot be replaced if missed, please keep safe.

Clean and maintain product

How to clean shower head nozzles

1. Just rub the nozzles with your finger or a toothbrush to loosen any deposits, and then run hot water for a few minutes.
2. Put the showerhead into a pot. Consider using a smaller container that just about fits the showerhead; this way, you will use less vinegar. You can also use a small bucket or plastic bin.

Fill the pot with enough white vinegar to cover the showerhead
The acids in the vinegar will help dissolve the white mineral deposits on the showerhead.

Let the showerhead soak in the vinegar for 30 minutes. The more soiled the showerhead is, the longer you will have to leave it in the vinegar.

Maintain Chrome and Brushed nickel finished product

1. To clean the products all you need is a high quality microfiber cloth.
2. Apply a high quality chrome cleaner to a clean cotton cloth and wipe over the chrome. Leave as per product instructions and then rinse with warm water. Gently remove any product residue using a dry chamois or paper towel.
3. How to Clean Chrome: Homemade Solutions In addition to professional products, homespun solutions also have their place when breathing new life into dull chrome. Try this shortcut to achieving chrome cleaning nirvana:

Detergent and warm water! Submerge chrome-plated objects including pots and pans in a sink full of warm water. Add a half-cup of a high quality washing up detergent (Persil washing up liquid is good) and rub gently with a soft cotton cloth to avoid scratching the chrome. Use a scented detergent to leave kitchenware smelling fresh, as well as spotless.