


INSTRUCTION MANUAL

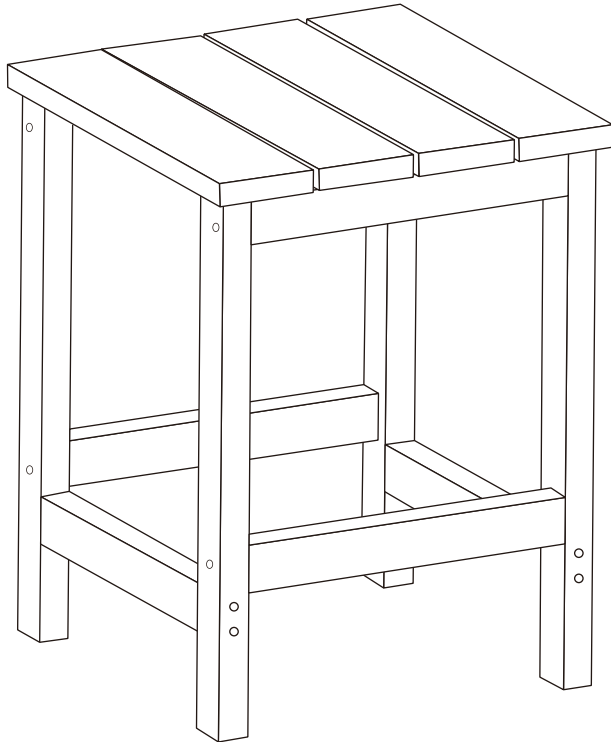

Outdoor Poly Adirondack Side Table
SKU: 2001-CS

! NOTICE

Do not overtighten screws or bolts. (Insert all screws before tighten screws.)

- Please do not exceed the weight limitations of this item.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws and nuts before use.
- Reconfirm that all bolts, screws, and nuts are secure every 90 days.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Avoid using strong power tool for avoiding to crack the PE board when assembling.

NO TOOLS REQUIRED



TABLE
180 LBS
CAPACITY



1 PERSON
ASSEMBLY




UP TO 20 MIN.
ASSEMBLY

HARDWARE

1

M6x45mm
BOLT



8 PCS

2

ALLEN
WRENCH




1 PC

PARTS

A


TABLE TOP



1 PC

B


TABLE LEG



2 PCS

C

WOODEN BRACE

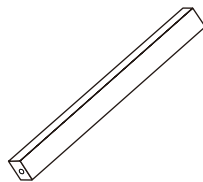


2 PCS

PRODUCT ASSEMBLY

1


Attach part B Table Leg to part A Table Top with 2 PCS of part 1 bolt using an allen wrench

Do not tighten screws too much at this stage.

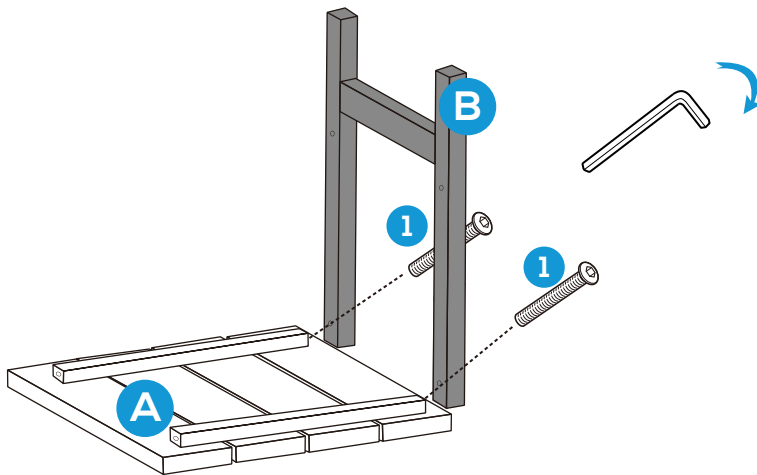

2

Attach part C Table Wooden Braces to part B Chair Leg with 2 PCS of part 1 bolt.

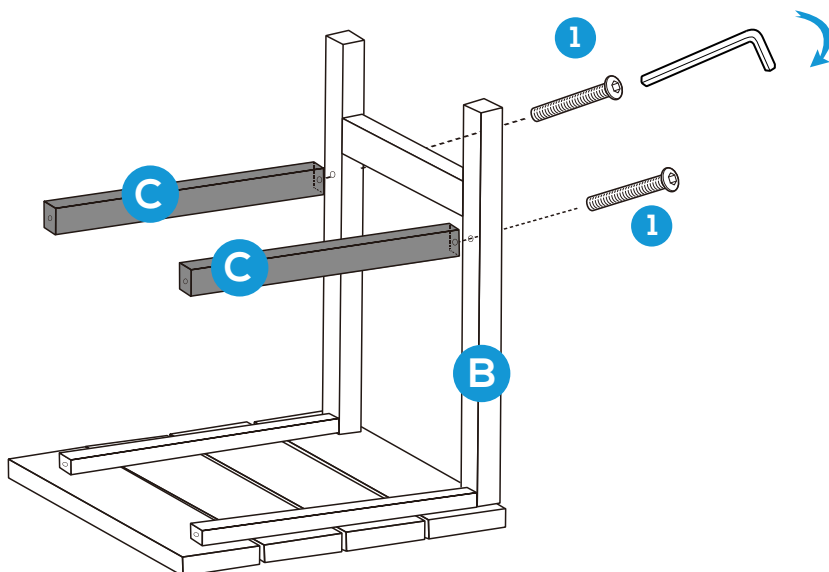

PRODUCT ASSEMBLY

3

Attach part B Table Leg to part A Table Top and part C Wooden brace with 2 PCS of part 1 bolt using an Allen wrench.

