

Use and Care Guide

Cordless Natural Roman Shade

HOME
DECORATORS
COLLECTION

TOOLS REQUIRED



Pencil




1/16 in.



Drill & 1/16" bit




Tape Measure




Phillips Head Screwdriver

PACKAGE CONTENTS


A

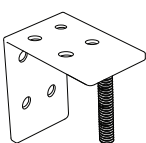

B



C

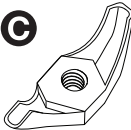

D



Part	Description	Quantity
A	Mounting Brackets	2 (18.5"-52") / 3 (60"-72")
B	Washers	2 (18.5"-52") / 3 (60"-72")
C	Wing Nuts	2 (18.5"-52") / 3 (60"-72")
D	Bracket Screws	8 (18.5"-52") / 12 (60"-72")

Installation

1 POSITION SHADE

- Measure Bracket Placement to desired mounting location, mark holes for each bracket with a pencil. Pre-Drill Mounting Holes with a Drill and 1/16in Drill Bit.
- Outside Mounting (Fig. A).
- Top Mounting (Fig. B).
- Inside Mounting (Fig. C).

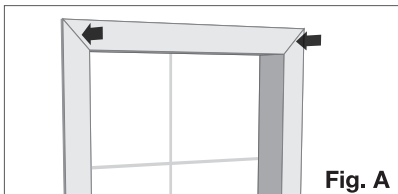


Fig. A

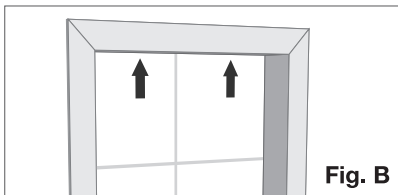


Fig. B

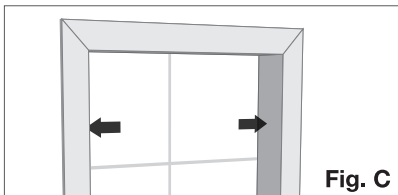


Fig. C

2 INSTALL BRACKETS

- Secure Mounting Brackets (A) with Phillips Head Screw Driver using Bracket Screws (D).
- Outside Mounting (Fig. D).
- Top Mounting (Fig. E).
- Inside Mounting (Fig. F).

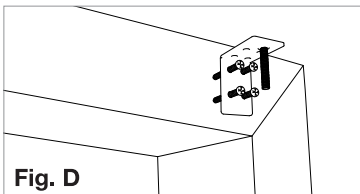


Fig. D

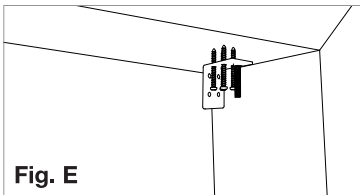


Fig. E

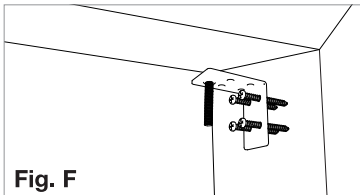


Fig. F

3 BRACKET ORIENTATION

- Outside Mounting (Fig. G).
- Top Mounting (Fig. H).
- Inside Mounting (Fig. I).

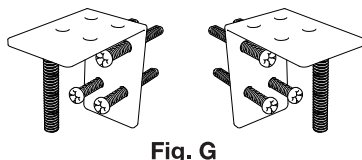


Fig. G

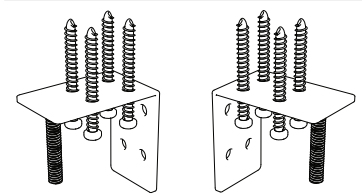


Fig. H



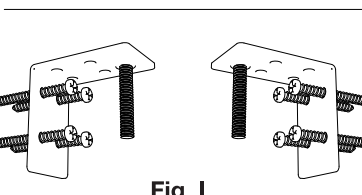


Fig. I


4 INSTALLING HEADRAIL

- Line the Shades with the Mounting Brackets (A). Secure the Shades with the Washers (B), and Wing Nuts (C) to Finish the Installation.

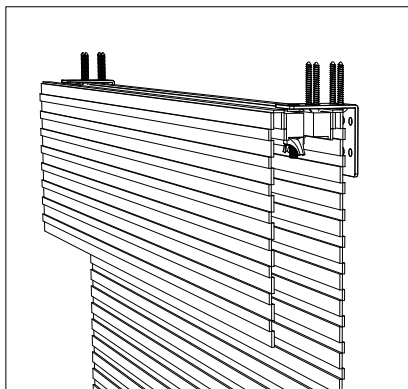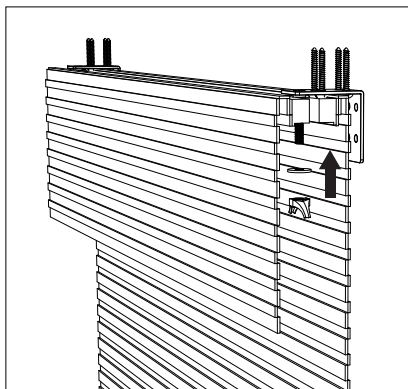

5 OPERATING THE SHADE

- To Lower the Shade: Pull down from the center of the Bottom Rail and release at desired Shade height
- To Raise the Shade: Push up from the center of the Bottom Rail and release at desired Shade height

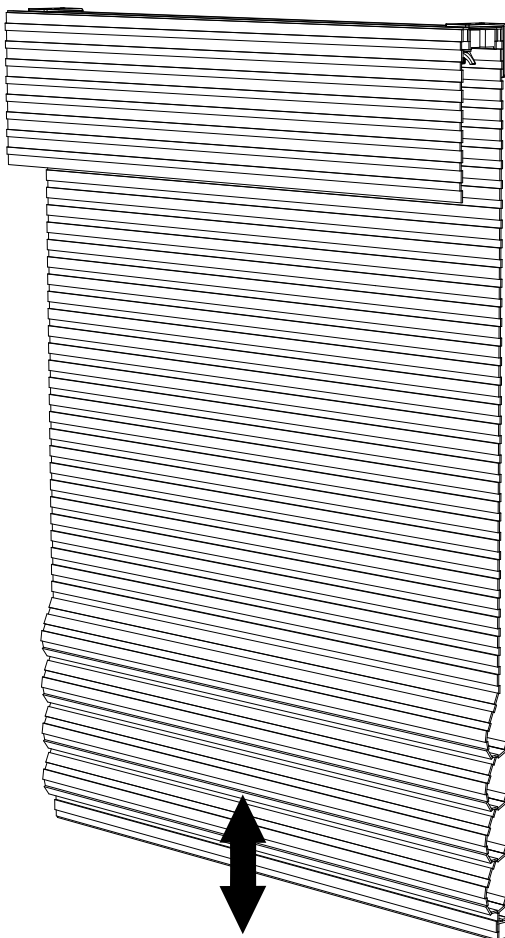

Cleaning

- May be cleaned with vacuum attachment or duster.

