300
SQUARE FOOT
1.4MM THICKNESS

QUIETWALK LV®

MULTI-PURPOSE UNDERLAYMENT



Less Noise
More Comfort
Better Floor

ENHANCED PERFORMANCE FOR
PAD ATTACHED FLOORING

For use under vinyl plank, laminate,
solid and engineered hardwood flooring.


Enhanced performance for attached pad flooring.

CAN BE USED OVER CONCRETE
& WOOD SUBFLOORS

Recycled Materials
NO VOCs

Made in the U.S.A.


SOUND CONTROL

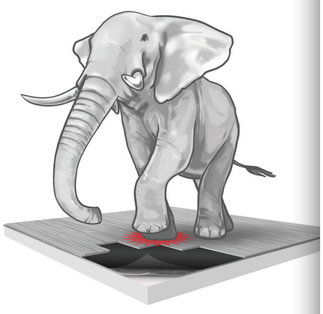

SOUND REDUCTION
Recycled fibers absorb sound and keep it from traveling to other rooms.

MOISTURE PROTECTION

FEATURING EXCLUSIVE
DRI-WICK™ TECHNOLOGY

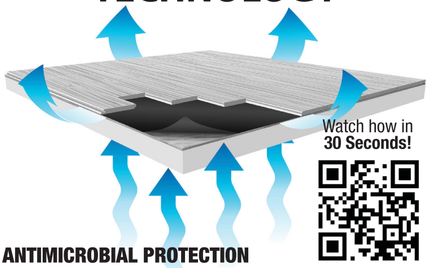


Watch how in
30 Seconds!

quietwalk.com/driwick

ANTIMICROBIAL PROTECTION
Wicks moisture and keeps floors dry

DURABILITY

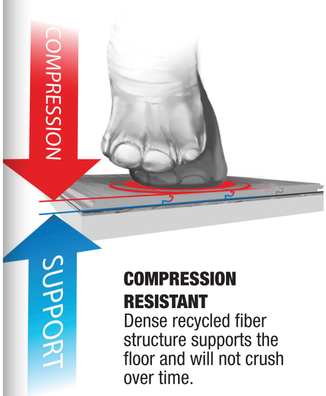

COMPRESSION RESISTANT
Dense recycled fiber structure supports the floor and will not crush over time.

AVAILABLE ONLINE & IN SELECT STORES

Bulk Rolls = Less Work, Less Seams & More Coverage!





300 sq. ft. room uses 1 roll of 300 sq. ft.

300 sq. ft. room uses 3 rolls of 100 sq. ft.



QUIETwarmth
In-Floor Heating System

PRODUCT DETAILS

- DIMENSIONS
  1.4 mm thick x 3 ft wide x 100 ft long
- SOUND INSULATION
  IIC 70 STC 62 Delta IIC 28
- MOISTURE EMISSIONS PROTECTION
  6 LBS / 1000 SQ FT² / 24 HOURS
- THERMAL INSULATION
  R-Value 0.528
- COMPRESSION STRENGTH
  64.58 PSI

Installation Friendly - Built in Seam Seal!



MPglobal
2500 Old Hadar Road | Norfolk, NE USA

SAFETY & ENVIRONMENT

- Odorless, no VOCs
- Antimicrobial protection
- Approved for use with radiant heat systems
- Made from 94% recycled materials
- LEED compliant

GREENGUARD GOLD

6 96087 10627 0

300 sq. ft Roll (3' x 100')
QW300LV

QUIETWALK LV®
MULTIPURPOSE UNDERLAYMENT

Scan to view installation videos, warranty and tips!
¡Escanee para ver videos de instalación, garantía y otros consejos!

INSTALLATION INSTRUCTIONS

General Information:
Please ensure you have fully read and understand the following installation instructions before proceeding.

Approved Floor Coverings:
- The product is suitable for use under Rigid Core Vinyl, WPC/SPC, LVT/LVP, Laminate and Hardwood, including attached pad flooring. Ensure the floor covering is a minimum of 4mm in overall thickness for all installation methods.

Site Conditions:
- The product be installed over industry approved substrates including plywood, concrete, OSB, gypsum, etc.
- Ensure the substrate is smooth, clean, structurally stable, and meets all requirements established by the floor covering manufacturer.
- Ensure the substrate is flat within 1/8" over a 6' span or 3/16" over a 10' span
- All leveling and prep work is to be completed prior to the installation of the underlayment
- Ensure the site is temperature controlled and is maintained between 60°F-80°F

Moisture Limitations for Concrete Substrates:
- All cementitious substrates must be tested for moisture prior to installation.
- All readings must be documented, or warranty will be invalidated.
- A Calcium Chloride test (ASTM F1869) must be performed prior to installation.
- Emissions cannot exceed 6lbs/1000ft2/24hrs.
- If emissions exceed the above limit, additional moisture mitigation measures are required.

FLOATING APPLICATION:
The following section is to be followed when installing an approved floating floor covering (including attached pad floors) 4mm or greater in overall thickness.

- Roll out the underlayment and ensure that the film side is facing up and the fiber side is facing down.
- When installing the underlayment, ensure the direction of the underlayment is either perpendicular or on a 45° angle relative to the direction of the floor covering.
- Trim the underlayment to fit your space.
- Be sure to leave ¼" gap between the underlayment and any fixed vertical surface. (IE: Walls, cabinets, fixed structures, etc.)
- When addressing the seams, ensure to but the runs of underlayment tightly and utilize the attached lip and tape system to fix each run together. If butting two cut edges together, use a good quality 2" or more wide tape to attach the seams. (Example: duct tape is a cost-effective solution)
- Install the finish floor covering according to the manufacturer's instructions.

DOUBLE GLUE APPLICATION:
The following section is to be followed when installing an approved glue down floor covering 4mm or greater in overall thickness. When installing in a double glue application, it is recommended to use a multipurpose flooring adhesive or a pressure sensitive flooring adhesive to adhere the underlayment to the substrate. Follow the adhesive manufacturer's recommendations for trowel size. Always follow the flooring manufacturer's recommendations for adhesive and trowel size to adhere the floor covering to the underlayment.

- Roll out the underlayment and ensure that the film side is facing up and the fiber side is facing down.
- When installing the underlayment, ensure the direction of the underlayment is either perpendicular or on a 45° angle relative to the direction of the floor covering.
- Trim the underlayment to fit your space.
- Be sure to leave ¼" gap between the underlayment and any fixed vertical surface. (IE: walls, cabinets, fixed structures, etc.)
- Trim off the excess film associated with the lip and tape system.
- Once the underlayment is trimmed and ready to install, set aside.
- Begin by troweling adhesive onto the substrate.
- Use the adhesive manufacturer's recommended trowel size.
- Do not allow the adhesive to "flash" or dry. The underlayment is to be set into the adhesive while still wet.
- After the underlayment is fully installed into the adhesive bed, roll the entirety of the floor with a 75lb-100lb three section roller.
- Begin troweling the adhesive for the floor covering and install the floor covering according to the flooring manufacturer's instructions.

MECHANICALLY FASTENED APPLICATION:
The following section is to be followed when installing an approved mechanically fastened floor covering 4mm or greater in overall thickness.

- Roll out the underlayment and ensure that the film side is facing up and the fiber side is facing down.
- When installing the underlayment, ensure the direction of the underlayment is either perpendicular or on a 45° angle relative to the direction of the floor covering.
- Trim the underlayment to fit your space.
- Be sure to leave ¼" gap between the underlayment and any fixed vertical surface. (IE: Walls, cabinets, fixed structures, etc.)
- When addressing the seams, ensure to but the runs of underlayment tightly and utilize the attached lip and tape system to fix each run together. If butting two cut edges together, use a good quality 2" or more wide tape to attach the seams. (Example: duct tape is a cost-effective solution)
- Install the finish floor covering according to the manufacturer's instructions.

*If installing a mechanically fastened floor with a glue assist method, there is no need to adhere the underlayment to the substrate. Follow the above instructions and follow the flooring manufacturer's instructions for a glue assist installation method.

Restrictions:
- The product is not to be installed in an outdoor setting.
- The product is not to be installed in areas subjected to heavy rolling loads.
- The product is not to be installed beneath any leveling compounds, mortar beds, or gypsum pours.
- The product is not installed in multiple layers or in conjunction with any other cushioned underlayment.

Radiant Heat:
- The product is approved for use in conjunction with radiant floor heating systems. Please ensure that the flooring manufacturer's recommendations are followed regarding radiant floor heating.

*Due to the nature of our manufacturing process and the use of recycled materials, the product thickness and weight may vary +/- 8%.
The color and texture of the fibers may vary from roll to roll. This will not affect the performance in any way.

INSTRUCCIONES DE INSTALACIÓN

General Information:
Asegúrese de haber leído y comprendido completamente las siguientes instrucciones de instalación antes de continuar.

Revestimientos de suelo aprobados:
- El producto es adecuado para su uso debajo de vinilo con núcleo rígido, WPC/SPC, LVT/LVP, laminado y madera dura, incluidos pisos con almohadillas adheridas. Asegúrese de que el revestimiento del piso tenga un espesor total mínimo de 4 mm para todos los métodos de instalación.

Condiciones del sitio:
- El producto debe instalarse sobre sustratos aprobados por la industria, incluidos madera contrachapada, hormigón, OSB, yeso, etc.
- Asegúrese de que el sustrato sea liso, limpio, estructuralmente estable y cumpla con todos los requisitos establecidos por el fabricante del revestimiento para pisos.
- Asegúrese de que el sustrato esté plano dentro de 1/8" en un tramo de 6' o 3/16" en un tramo de 10'
- Todo el trabajo de nivelación y preparación debe completarse antes de la instalación del contrapiso.
- Asegúrese de que la temperatura del sitio esté controlada y se mantenga entre 60°F y 80°F.

Limitaciones de humedad para sustratos de concreto:
- Se debe realizar una prueba de humedad en todos los sustratos cementosos antes de la instalación.
- Todas las lecturas deben documentarse o la garantía quedará invalidada.
- Se debe realizar una prueba de cloruro de calcio (ASTM F1869) antes de la instalación.
- Las emisiones no pueden exceder las 6 libras/1000 pies2/24 horas.
- Si las emisiones exceden el límite anterior, se requieren medidas adicionales de mitigación de la humedad.

APLICACIÓN FLOTANTE:
Se debe seguir la siguiente sección al instalar un revestimiento de piso flotante aprobado (incluidos los pisos de almohadilla adjuntos) de 4 mm o más de espesor total.

- Extienda el contrapiso y asegúrese de que el lado de la película quede hacia arriba y el lado de la fibra hacia abajo.
- Al instalar el contrapiso, asegúrese de que la dirección del contrapiso sea perpendicular o en un ángulo de 45° con respecto a la dirección del revestimiento del piso.
- Recorte el contrapiso para que se ajuste a su espacio.
- Asegúrese de dejar un espacio de ¼" entre el contrapiso y cualquier superficie vertical fija (es decir, paredes, gabinetes, estructuras fijas, etc.).
- Al abordar las uniones, asegúrese de cerrar bien los tramos de contrapiso y utilice el sistema de cinta y borde adjunto para unir cada tramo. Si une dos bordes cortados, use una cinta de buena calidad de 2" o más de ancho para unir las uniones. (Ejemplo: la cinta adhesiva es una solución rentable)
- Instale el acabado del revestimiento del piso según las instrucciones del fabricante.

APLICACIÓN DE DOBLE PEGAMENTO:
Se debe seguir la siguiente sección al instalar un revestimiento de piso adhesivo aprobado de 4 mm o más de espesor total. Al instalar con una aplicación de doble pegamento, se recomienda utilizar un adhesivo para pisos multiuso o un adhesivo para pisos sensible a la presión para adherir el contrapiso al sustrato. Siga las recomendaciones del fabricante del adhesivo en cuanto al tamaño de la llana. Siga siempre las recomendaciones del fabricante del piso en cuanto al adhesivo y el tamaño de la llana para adherir el revestimiento del piso al contrapiso.

- Extienda el contrapiso y asegúrese de que el lado de la película quede hacia arriba y el lado de la fibra hacia abajo.
- Al instalar el contrapiso, asegúrese de que la dirección del contrapiso sea perpendicular o en un ángulo de 45° con respecto a la dirección del revestimiento del piso.
- Recorte el contrapiso para que se ajuste a su espacio.
- Asegúrese de dejar un espacio de ¼" entre el contrapiso y cualquier superficie vertical fija (es decir, paredes, gabinetes, estructuras fijas, etc.).
- Recorte el exceso de película asociado con el sistema de labio y cinta.
- Una vez que el contrapiso esté recortado y listo para instalar, déjelo a un lado.
- Comience aplicando adhesivo con llana sobre el sustrato.
- Utilice el tamaño de llana recomendado por el fabricante del adhesivo.
- No permita que el adhesivo "se seque" o se seque. El contrapiso debe colocarse en el adhesivo mientras aún está húmedo.
- Después de que el contrapiso esté completamente instalado en la capa adhesiva, pase el rodillo por todo el piso con un rodillo de tres secciones de 75 a 100 libras.
- Comience a aplicar con llana el adhesivo para el revestimiento del piso e instale el revestimiento del piso de acuerdo con las instrucciones del fabricante del piso.

APLICACIÓN SUJETA MECÁNICAMENTE:
Se debe seguir la siguiente sección al instalar un revestimiento de piso aprobado mecánicamente fijado de 4 mm o más de espesor total.

- Extienda el contrapiso y asegúrese de que el lado de la película quede hacia arriba y el lado de la fibra hacia abajo.
- Al instalar el contrapiso, asegúrese de que la dirección del contrapiso sea perpendicular o en un ángulo de 45° con respecto a la dirección del revestimiento del piso.
- Recorte el contrapiso para que se ajuste a su espacio.
- Asegúrese de dejar un espacio de ¼" entre el contrapiso y cualquier superficie vertical fija (es decir, paredes, gabinetes, estructuras fijas, etc.).
- Al abordar las uniones, asegúrese de cerrar bien los tramos de contrapiso y utilice el sistema de cinta y borde adjunto para unir cada tramo. Si une dos bordes cortados, use una cinta de buena calidad de 2" o más de ancho para unir las uniones. (Ejemplo: la cinta adhesiva es una solución rentable)
- Instale el acabado del revestimiento del piso según las instrucciones del fabricante.

*Si se instala un piso fijado mecánicamente con un método asistido por pegamento, no es necesario adherir el contrapiso al sustrato. Siga las instrucciones anteriores y siga las instrucciones del fabricante del piso para obtener un método de instalación asistida con pegamento.

Restricciones:
- El producto no debe instalarse en un entorno exterior.
- El producto no debe instalarse en áreas sujetas a cargas rodantes pesadas.
- El producto no debe instalarse debajo de compuestos niveladores, lechos de mortero o vertidos de yeso.
- El producto no se instala en varias capas ni junto con ningún otro contrapiso acolchado.

Calor radiante:
- El producto está aprobado para su uso junto con sistemas de calefacción por suelo radiante. Asegúrese de seguir las recomendaciones del fabricante del piso con respecto a la calefacción por piso radiante.

*Debido a la naturaleza de nuestro proceso de fabricación y al uso de materiales reciclados, el espesor y peso del producto pueden variar +/- 8%.
El color y la textura de las fibras pueden variar de un rollo a otro. Esto no afectará el rendimiento de ninguna manera.

MPglobal™
P.O. Box 2283 | 2500 Old Hadar Road | Norfolk, NE 68702-2283
402.379.9695 | 888.379.9695 | Fax: 402.379.9737
mpglobalproducts.com

NALFA NORTH AMERICAN LAMINATE FLOORING ASSOCIATION

USGBC MEMBER

GREENGUARD GOLD
PRODUCT CERTIFIED FOR LOW CHEMICAL EMISSIONS UL.COM/GG UL 2818