




Fab Glass Frameless Oval Mirror Installation Manual



**FAB GLASS
AND MIRROR**

 www.fabglassandmirror.com  Call: +1 888-474-2221  Fax: (614)-334-4919

 Office Timing: 8:30 - 18:00 EST  info@fabglassandmirror.com

Thank you for your purchase! It is our desire to make your entire experience from purchase to installation as easy as possible. We ask that you read each step of this installation manual thoroughly to ensure proper installation of your new Mirror. Our installation techniques are very important. Installing your Mirror in any manner other than the steps outlined in this manual may lead to structural failure of your Mirror.

Safety Backing Mirror:

A single sided woven tape is laminated onto the back of the mirror for security reasons if ever the glass is broken, the adhesive film holds the shattered pieces together, which significantly decreases the risk of injury.




CAUTION

It is your responsibility to see that your Mirror is properly assembled, installed, and cared for. Failure to follow instructions in this manual could result in serious injury. Use this product with Mirror cautions.


Tools Needed




Drill/Driver

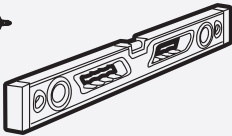

Level

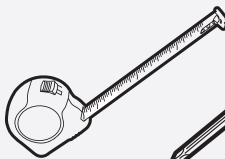

Tape Measure

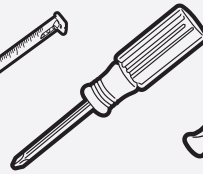

Screw Driver



Hammer



Lead Pencil

Hardware Included With This Order



Double Tape
(Qty - 2)




Anchor
(Qty - 2)




Screw
(Qty - 2)

1

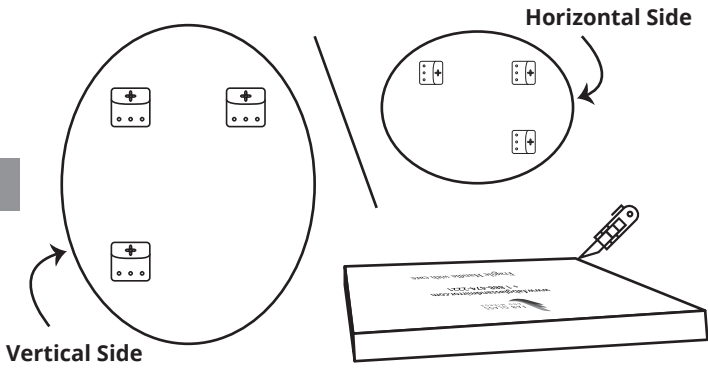


By using your cutting tool, carefully open the package and remove the mirror vertical or horizontal angle.

2

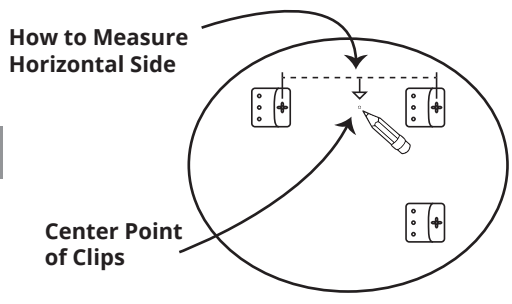


If you want to install horizontal angle then all calculations and measurements on horizontal side clip. On the back side of the mirror, use your pencil to mark the center point.

3

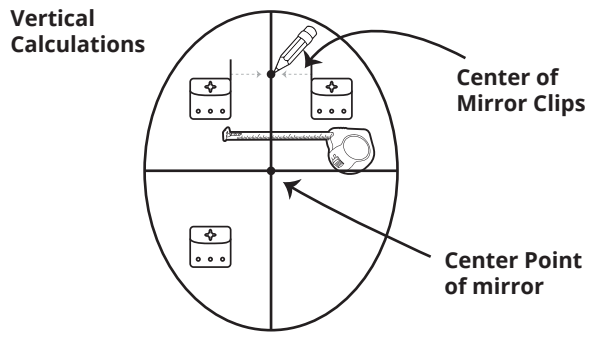


Measuring from the inner edge of the clips with your tape measure, mark the center point between them. here are vertical measurement & calculations in vertical installation you can follow the steps.

4

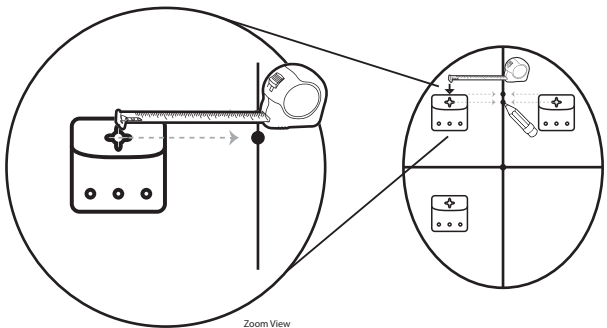


Measure the distance between the center point between the clips determined in Step 3 and the center of the clip body for each clip. Write down the result.

5

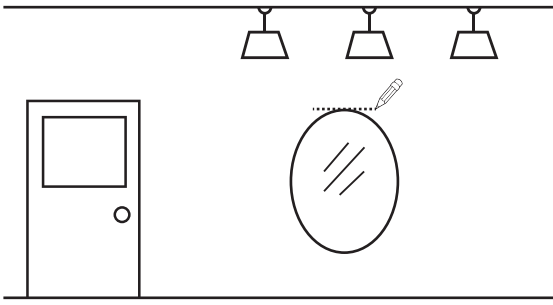


Hold the mirror against the wall where you want to install it, and mark the wall at the top edge of the mirror with your pencil.

6

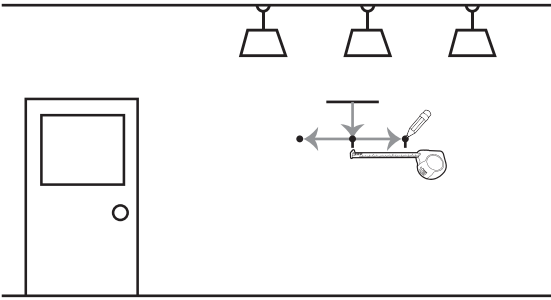


Using the results from the Steps 3 and 4, measure down from the top edge mark to the center point between the clips and place another mark, then from that mark measure out to the center of the clip body on each side and mark the wall in both spots.

7

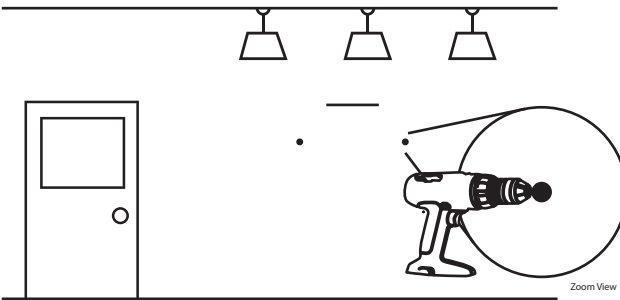


Drill two holes in the wall at the clip body center locations determined in Step 6.

8

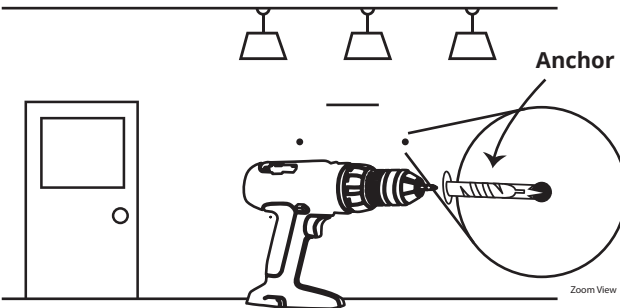


Using your drill, insert the anchor in the holes.

9

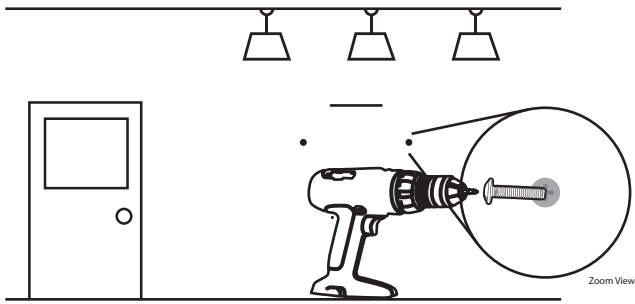


Now install the screw in the anchor with your drill.

10

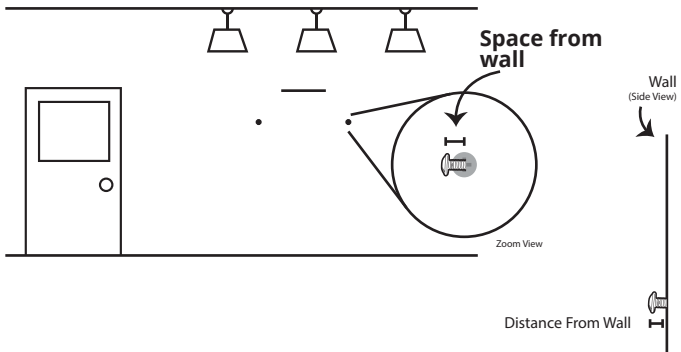


Leave ¼ " of space between the wall and the screw head.

11

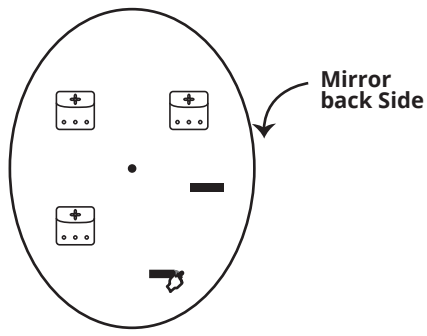


Attach the double-sided sticker pads on the bottom of the mirror.

12

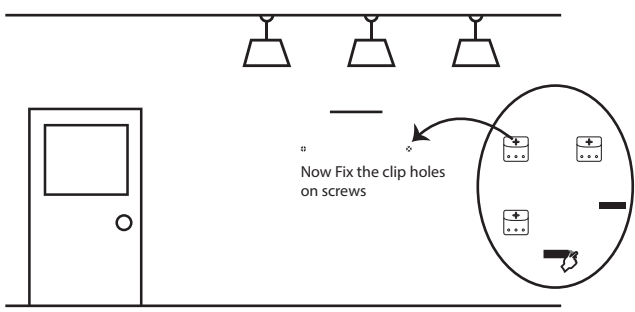

Hang the mirror on the wall by inserting the screw heads into the clips, and press gently against the bottom of the mirror to attach the sticky pads firmly to the wall.

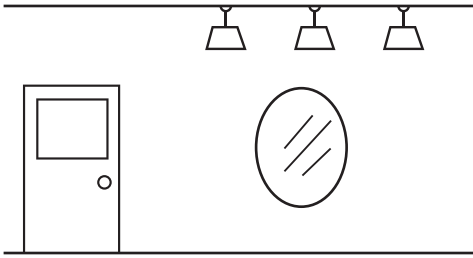

Congratulations!
You have successfully installed your
frameless Oval Mirror. Enjoy!
