


Assembly Instructions

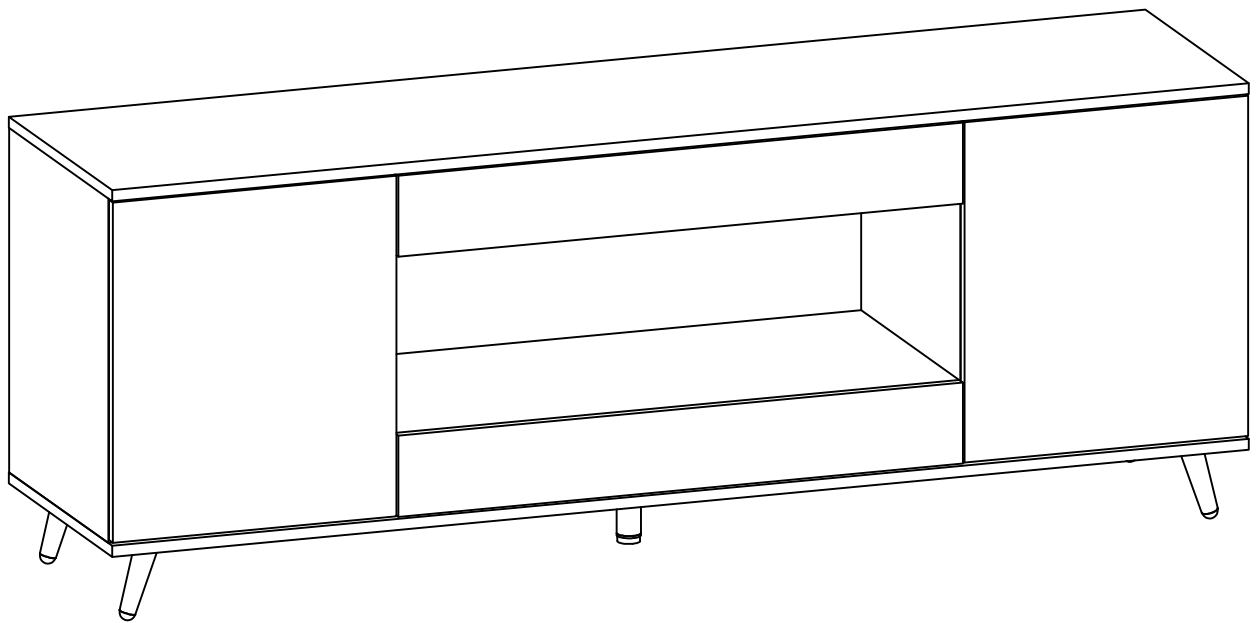


TV Stand

Model No.
HOGA-JW1133

Contact Us




We're here to help you.

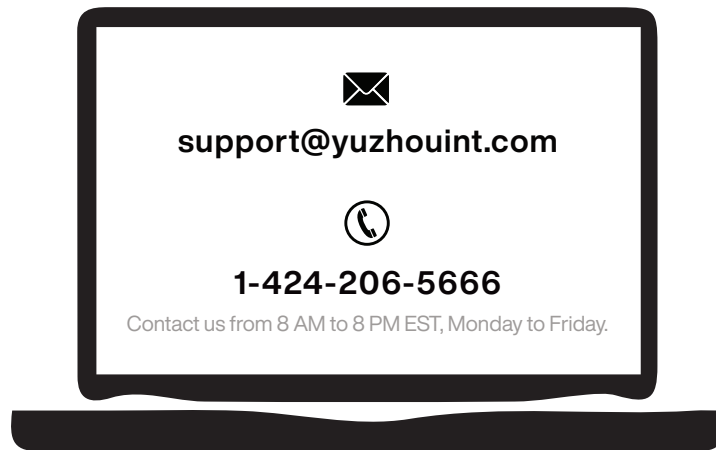

Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.


Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

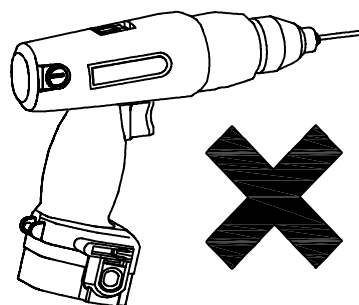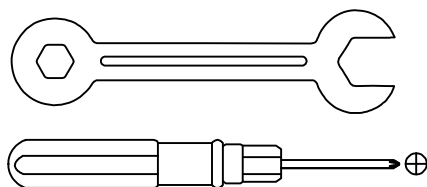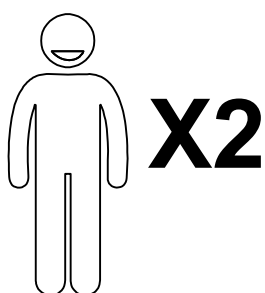



We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

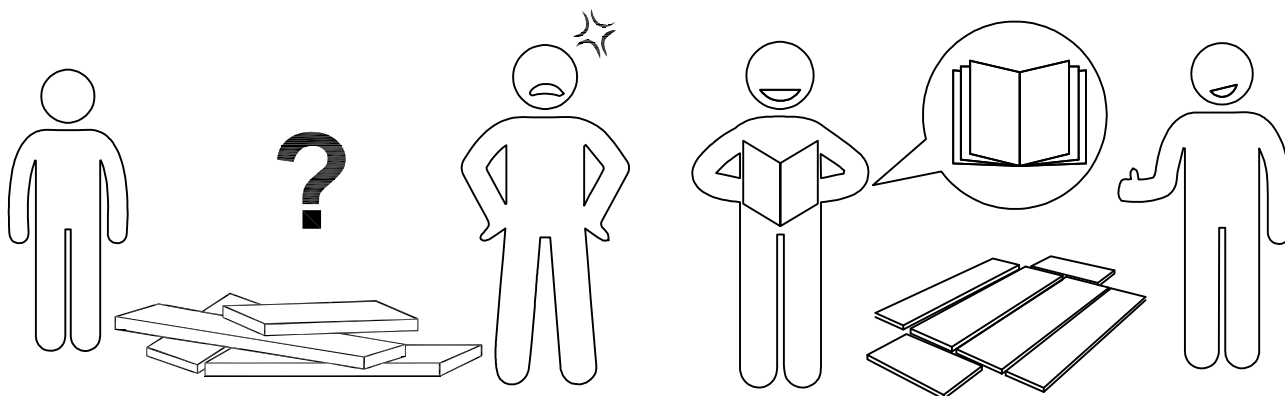

AVOID SCRATCHES

In order to avoid scratching, this furniture should be assembled on a soft surface, such as a rug.

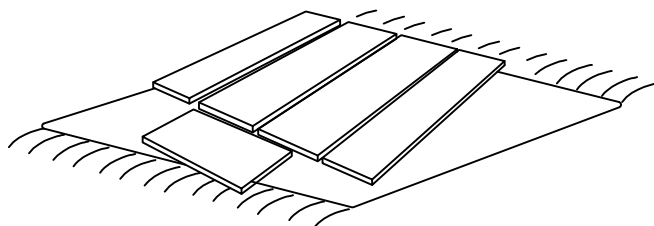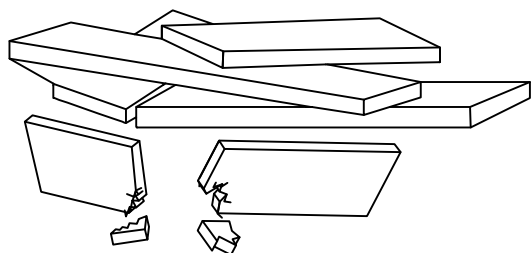




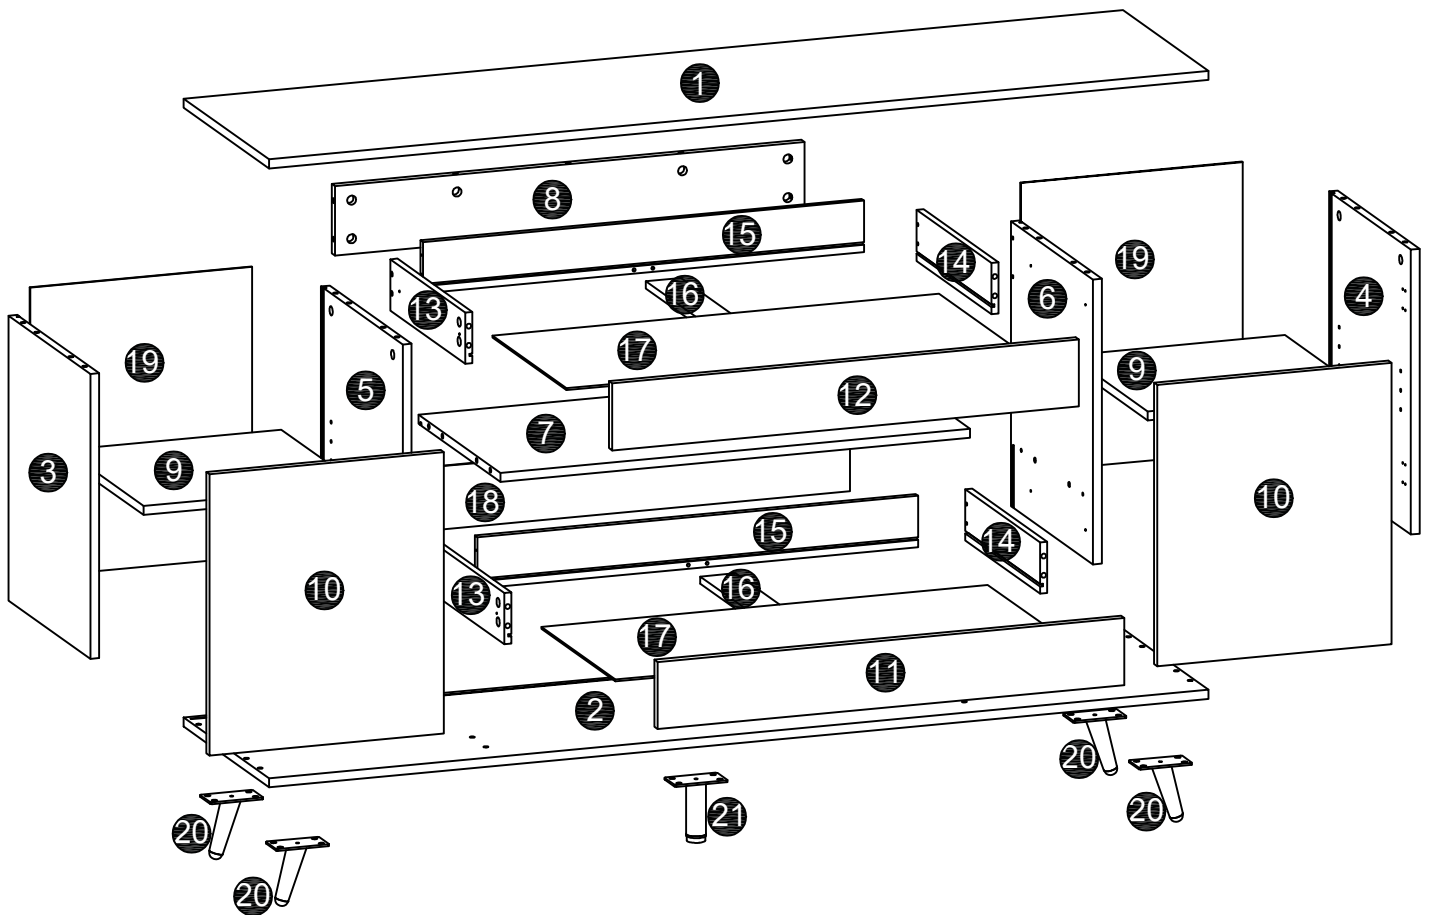



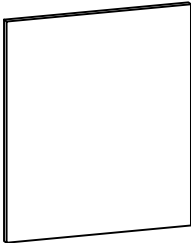





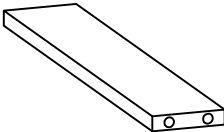









⚠ Caution

Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.

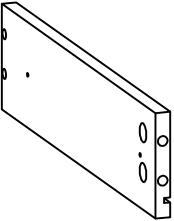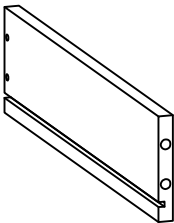





Parts List

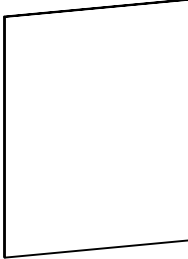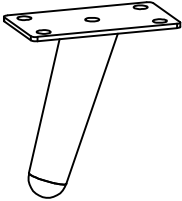
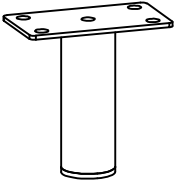




<div>1</div> <div></div> <div>1 pc</div>	<div>2</div> <div></div> <div>1 pc</div>	<div>3</div> <div></div> <div>1 pc</div>	<div>4</div> <div></div> <div>1 pc</div>
<div>5</div> <div></div> <div>1 pc</div>	<div>6</div> <div></div> <div>1 pc</div>	<div>7</div> <div></div> <div>1 pc</div>	<div>8</div> <div></div> <div>1 pc</div>
<div>9</div> <div></div> <div>2 pcs</div>	<div>10</div> <div></div> <div>2 pcs</div>	<div>11</div> <div></div> <div>1 pc</div>	<div>12</div> <div></div> <div>1 pc</div>
<div>13</div> <div></div> <div>2 pcs</div>	<div>14</div> <div></div> <div>2 pcs</div>	<div>15</div> <div></div> <div>2 pcs</div>	<div>16</div> <div></div> <div>2 pcs</div>





Parts List

<div>17</div> <div></div> <div>2 pcs</div>	<div>18</div> <div></div> <div>1 pc</div>	<div>19</div> <div></div> <div>2 pcs</div>	<div>20</div> <div></div> <div>4 pcs</div>
<div>21</div> <div></div> <div>1 pc</div>			

Hardware List

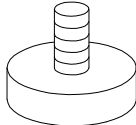

A	B	C	D	E	F
					
Ø6x35mm	Ø15x12mm	Ø15x10mm	Ø8x30mm		Ø5x13mm
30 pcs+1pc	18 pcs+1pc	12 pcs+1pc	21 pcs+1pc	4 pcs	8 pcs+1pc

G	H	I	J	K	L
					
4x35mm	3.5x14mm	Ø7x37mm	M6x12mm		14x14x9mm
12 pcs+1pc	62 pcs+1pc	8 pcs+1pc	20 pcs+1pc	1pc	22 pcs+1pc


M	N	O	P
			
L350mm	L350mm		M4
4 pcs	4 pcs	1 pc	1 pc

Installation of Cams and Pins

Read each step carefully before starting. Each step of instruction should be performed in the correct order. If these steps are not followed in sequence, assembly difficulties may occur.

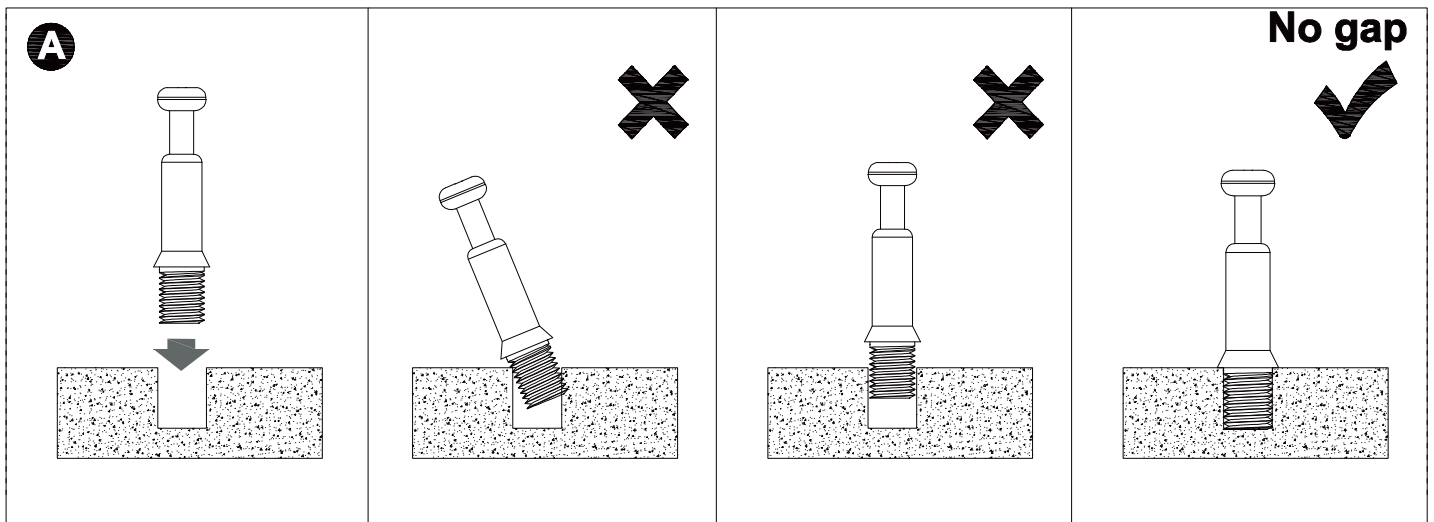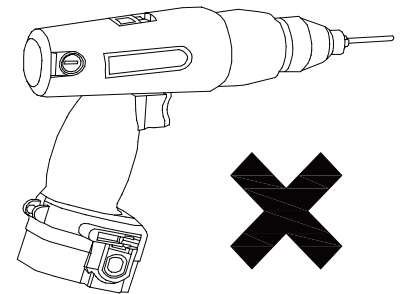


Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

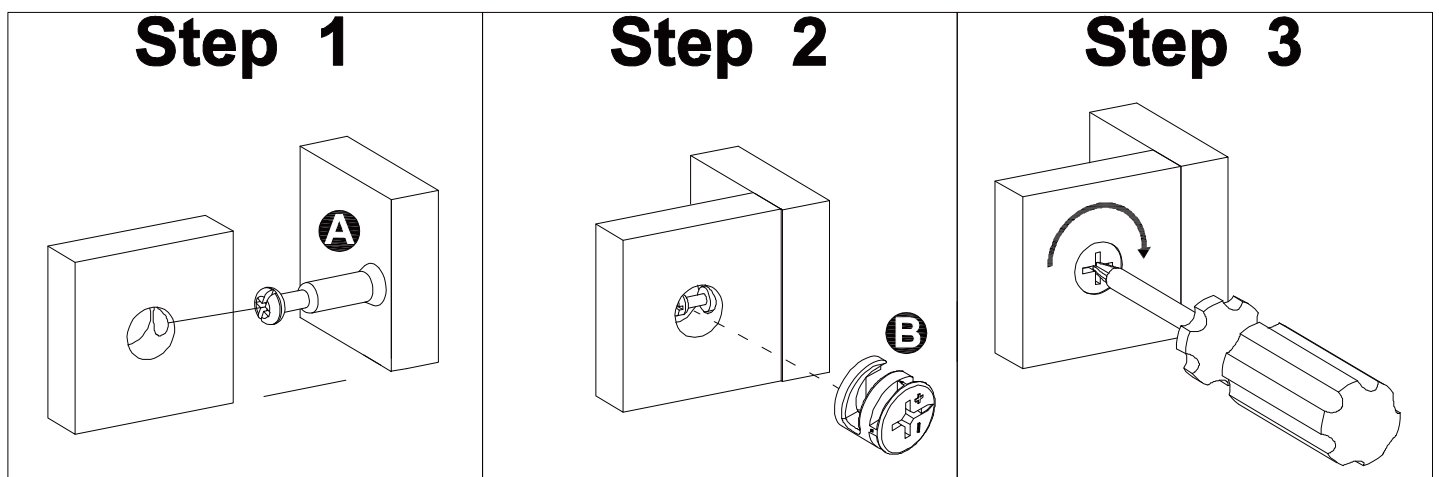


Please split component "(M/N)" into "M" and "N" before assembling the slide and then proceed to the next step of assembly

Step 1


Pull apart component "(M/N)" to each side, and then gently push up the lever of component "N"

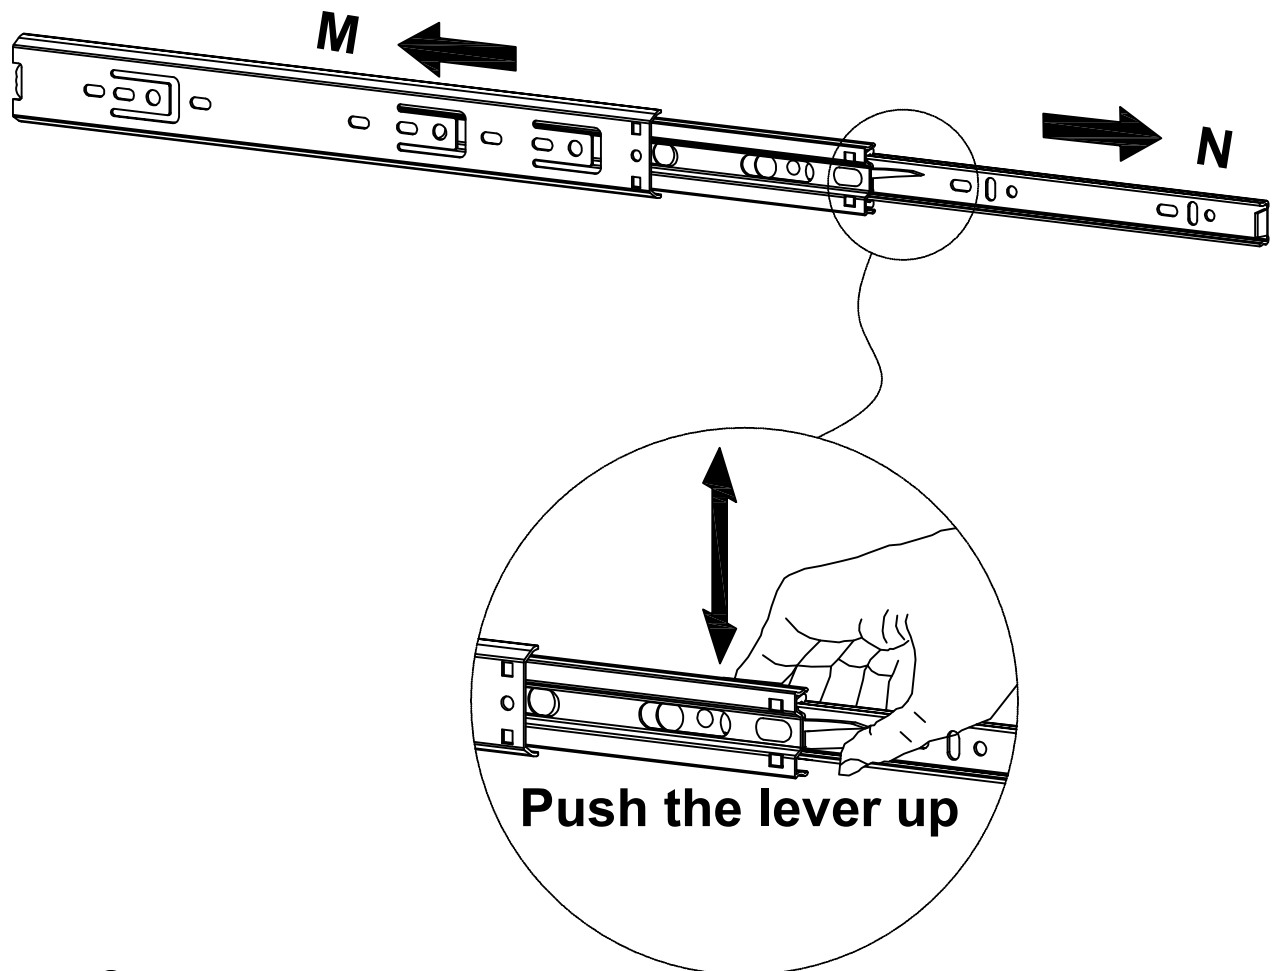


Step 2 Split component "M" and "N"



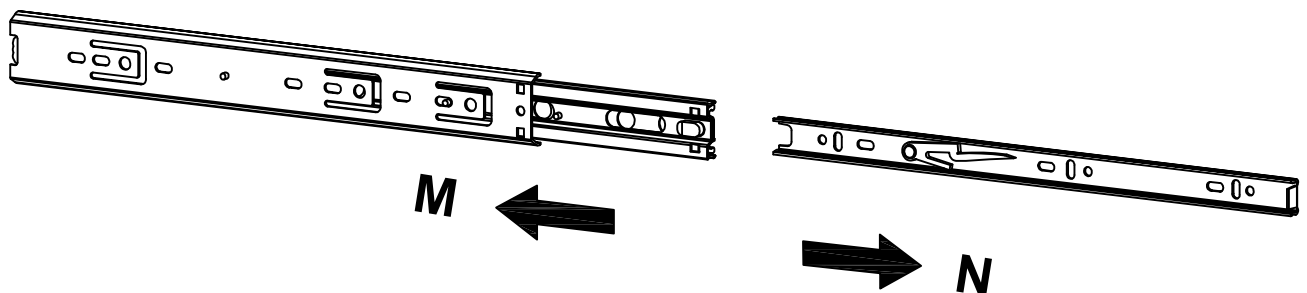


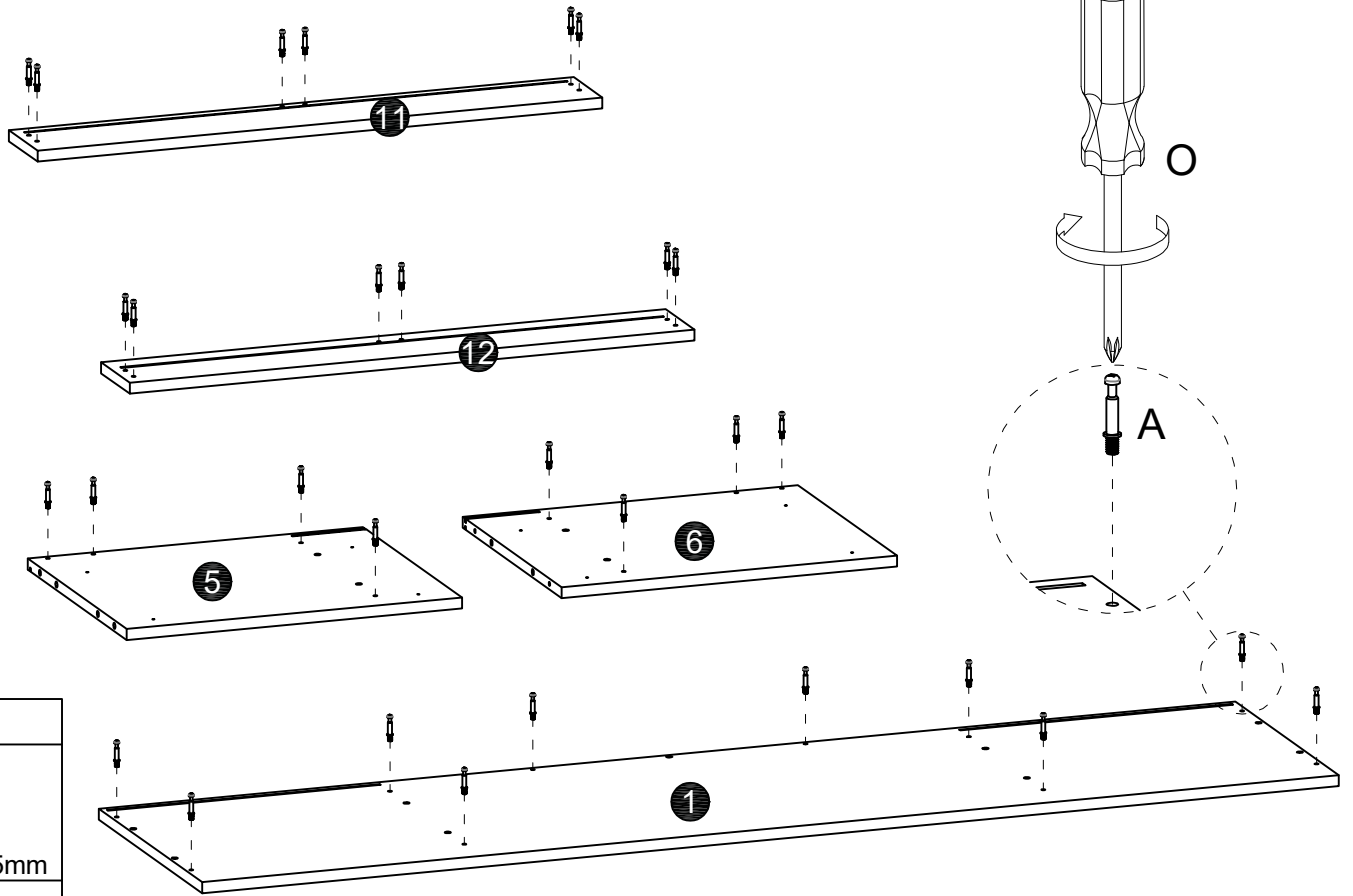

1




A

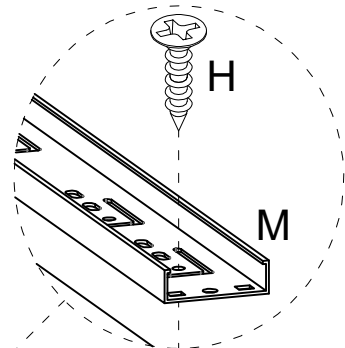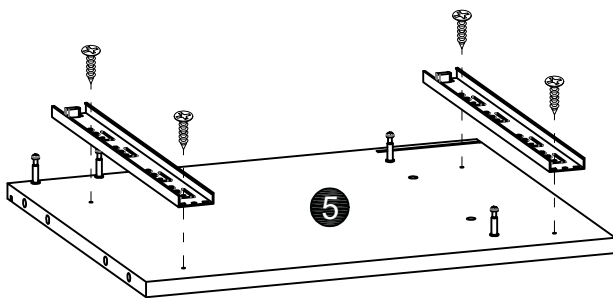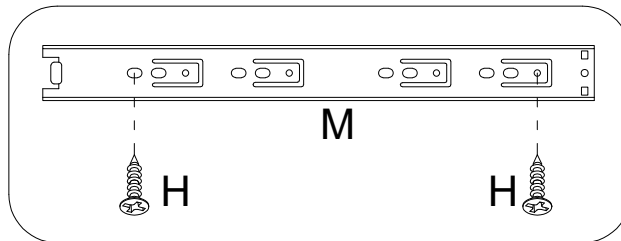Ø6x35mm
30 pcs


2



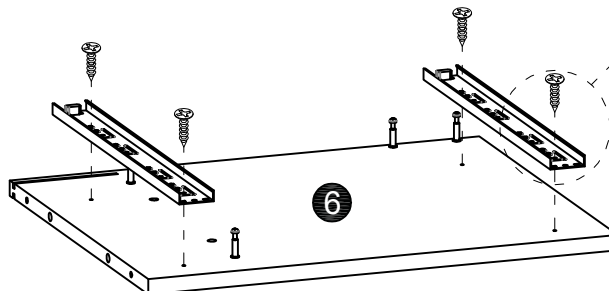


M	H
	
L350mm	3.5x14mm
2 pcs	8 pcs

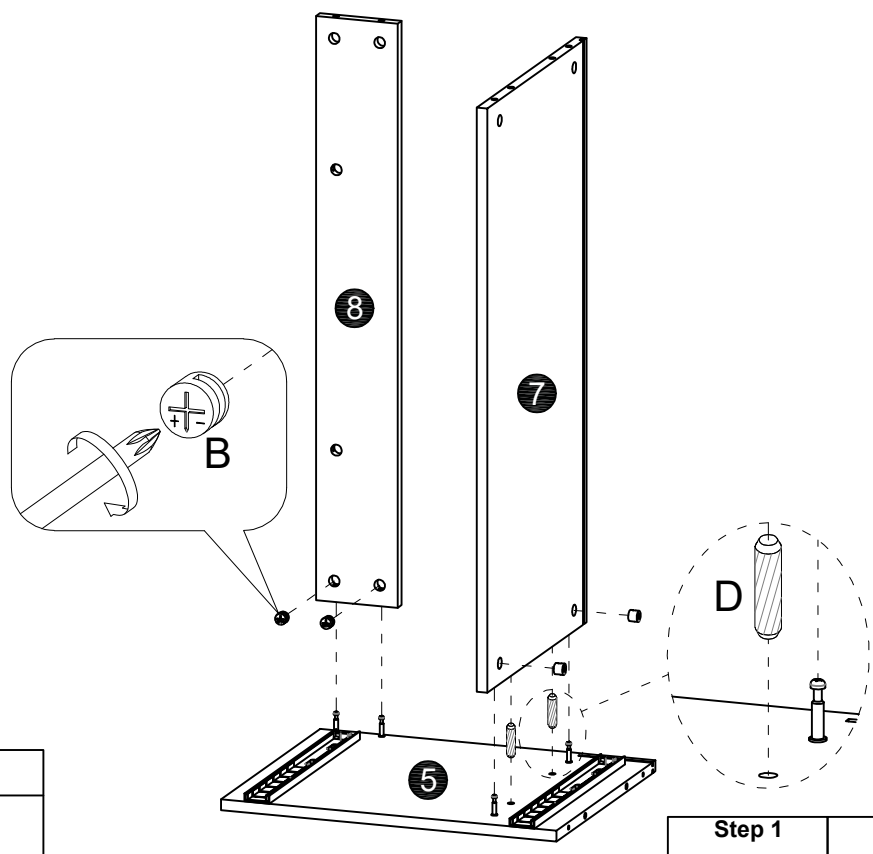


3



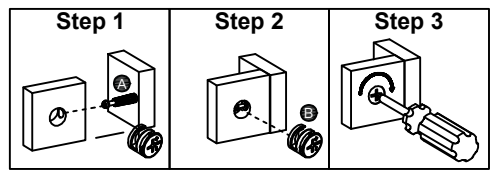


B	D
	
Ø15x12mm	Ø8x30mm
4 pcs	2 pcs

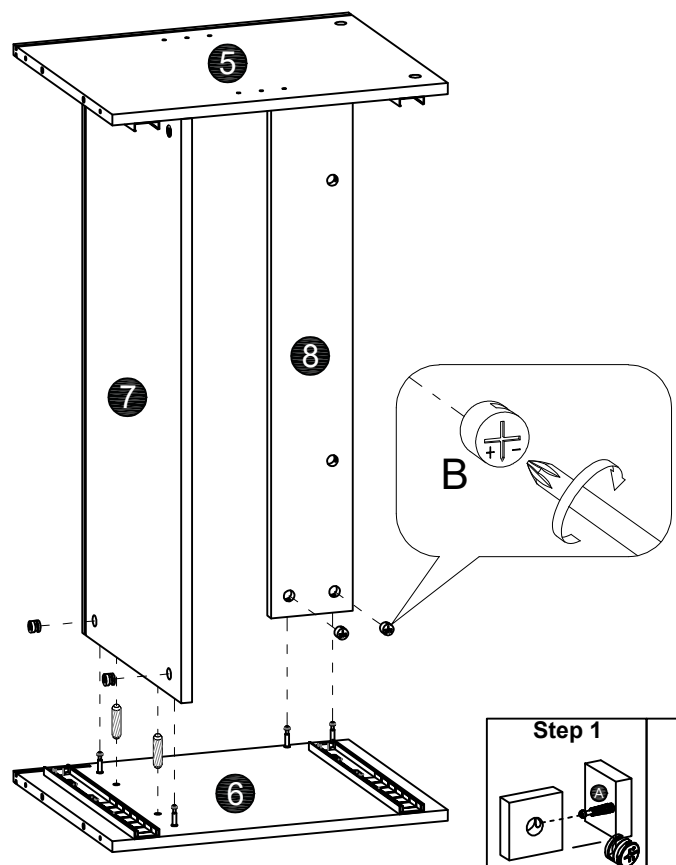


4



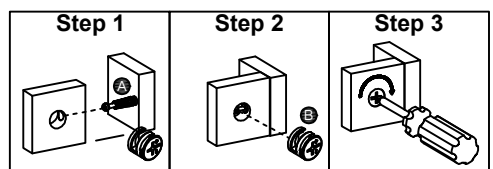


B	D
	
Ø15x12mm	Ø8x30mm
4 pcs	2 pcs

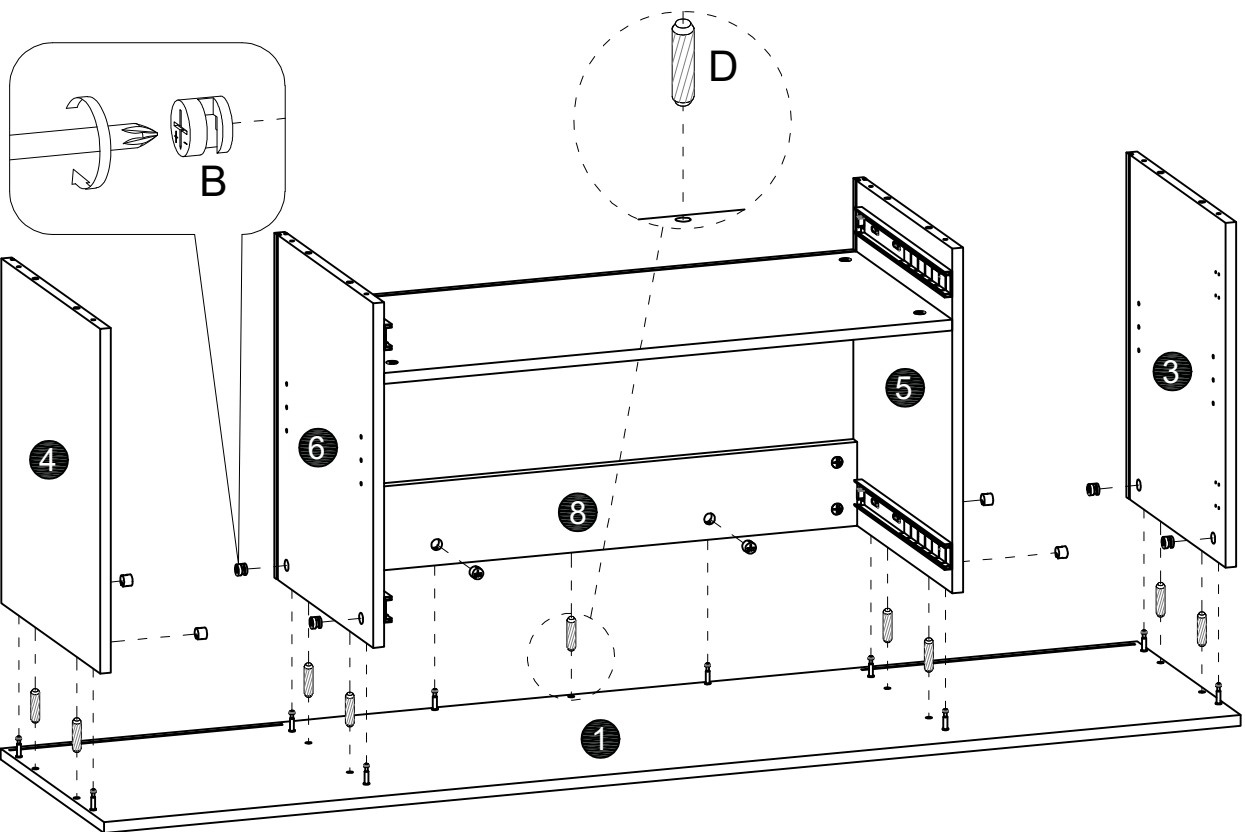


5




B	D
	
Ø15x12mm	Ø8x30mm
10 pcs	9 pcs

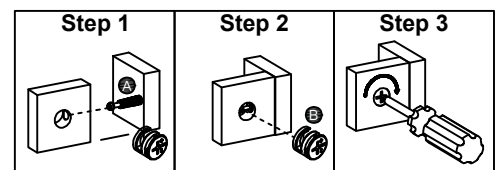



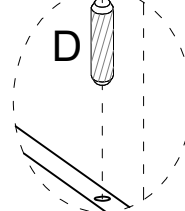
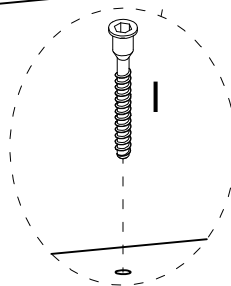
6

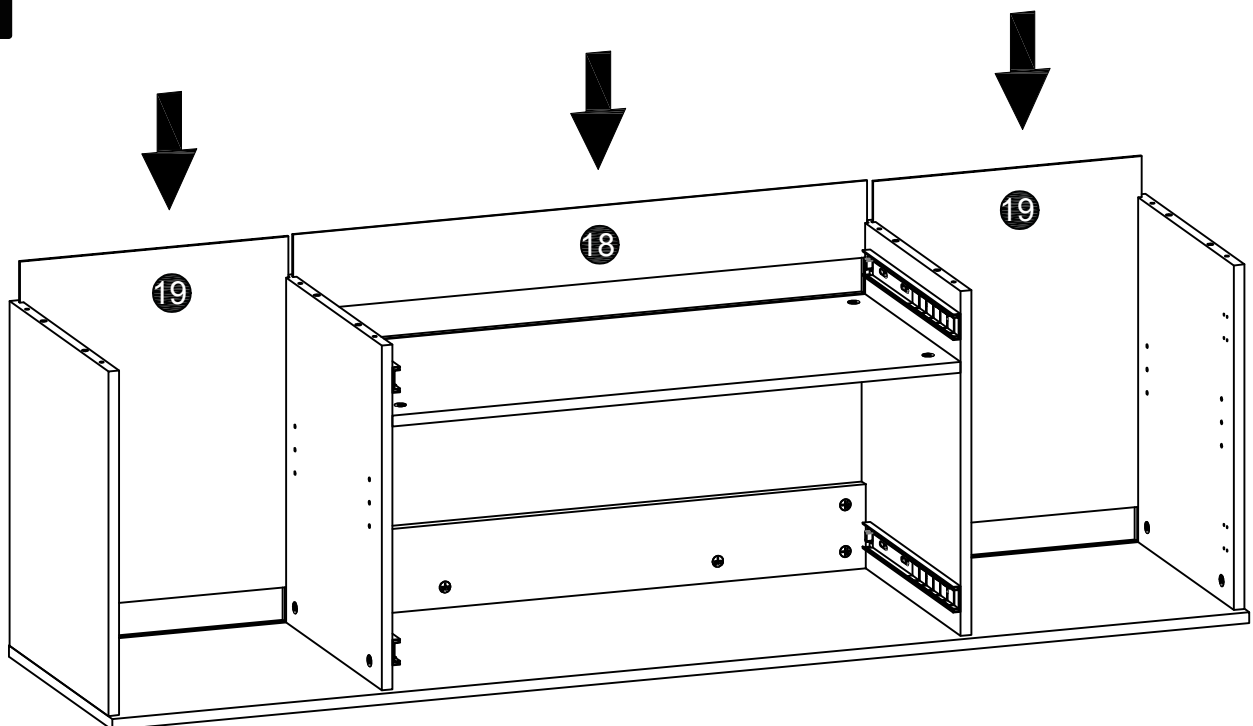


7

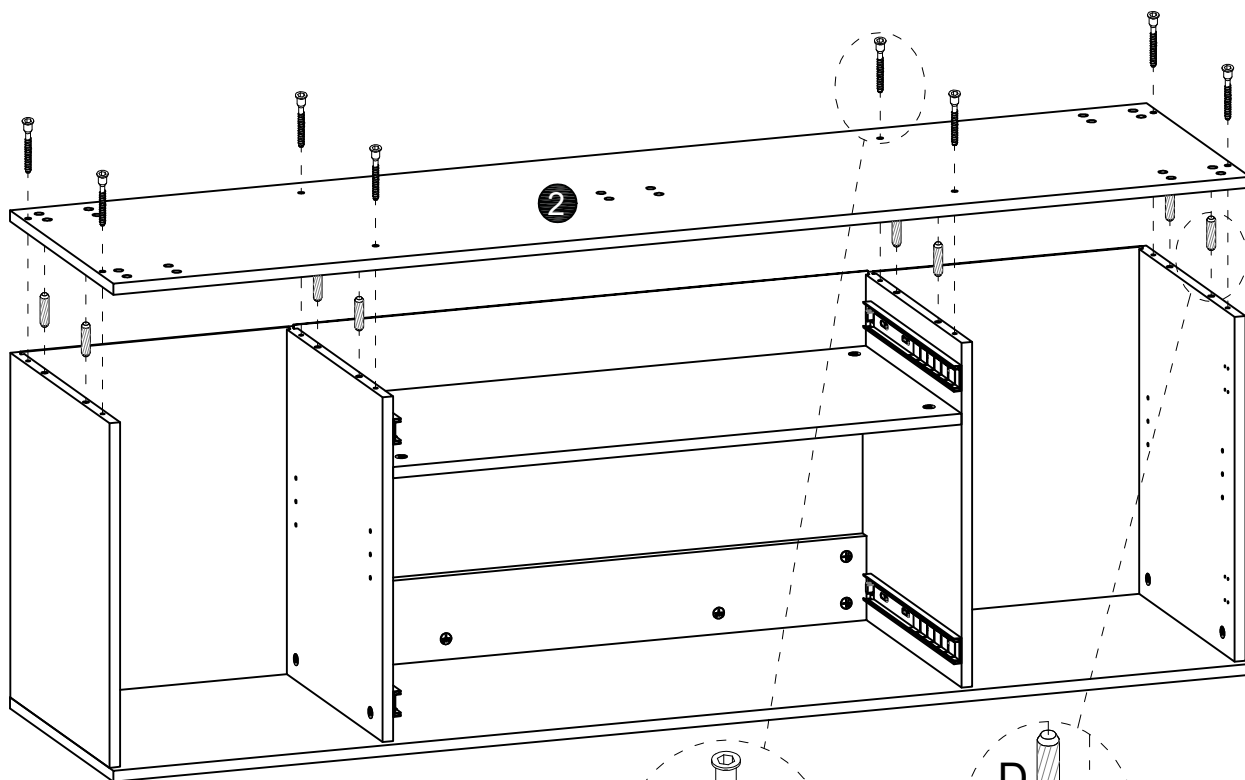


D	I
	
Ø8x30mm	Ø7x37mm
8 pcs	8 pcs





8

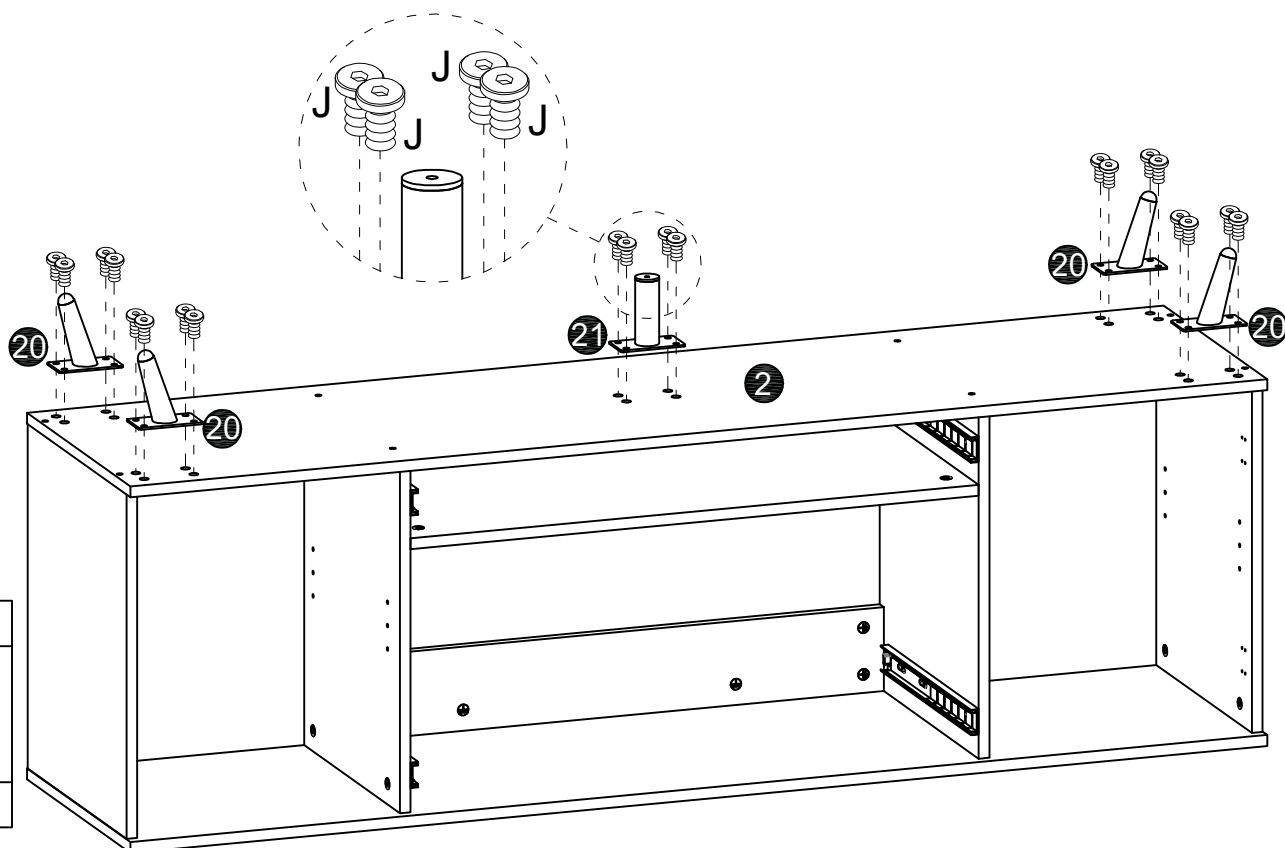


J

M6x12mm
20 pcs

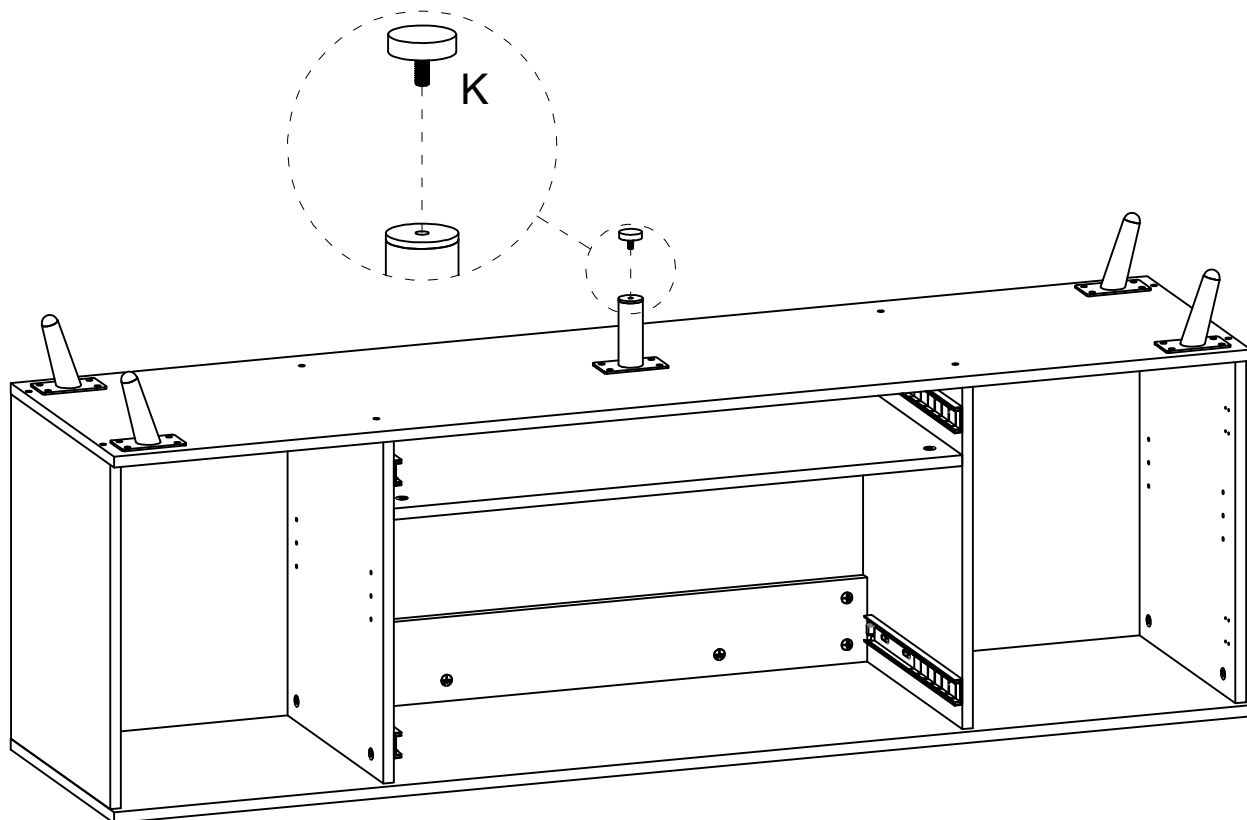

9

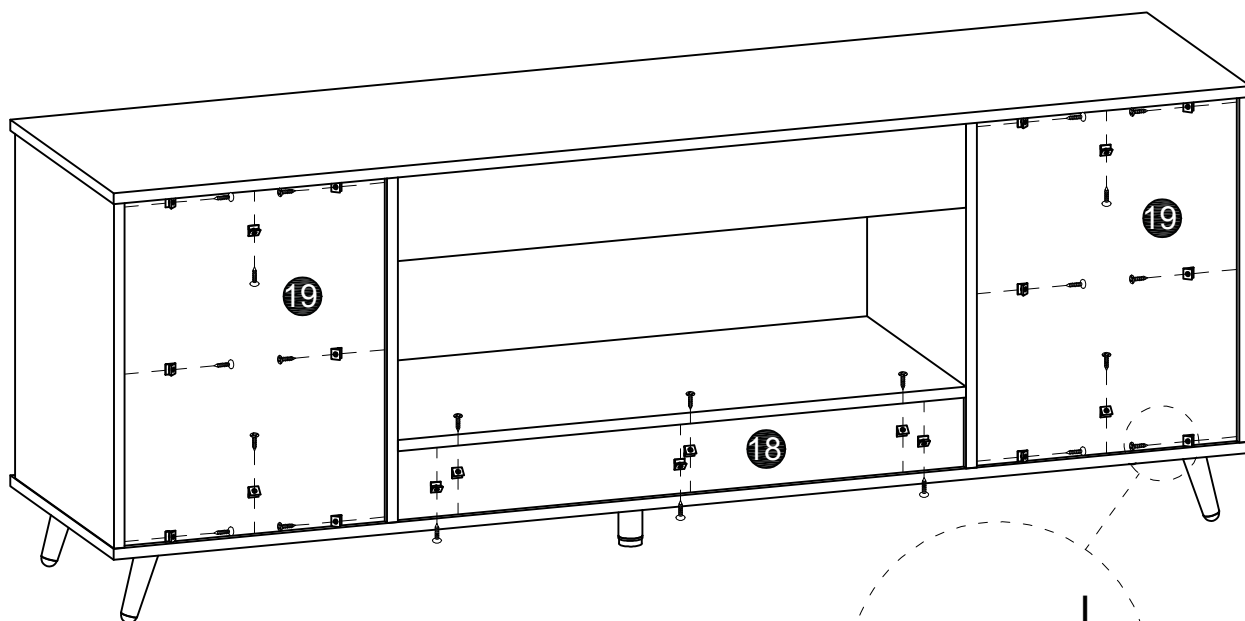


K

1 pc


10

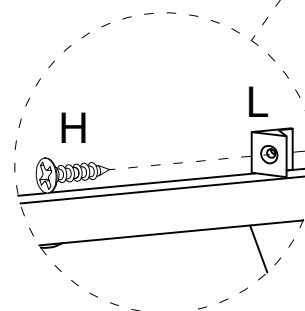



H	L
	
3.5x14mm	14x14x9mm
22 pcs	22 pcs





11

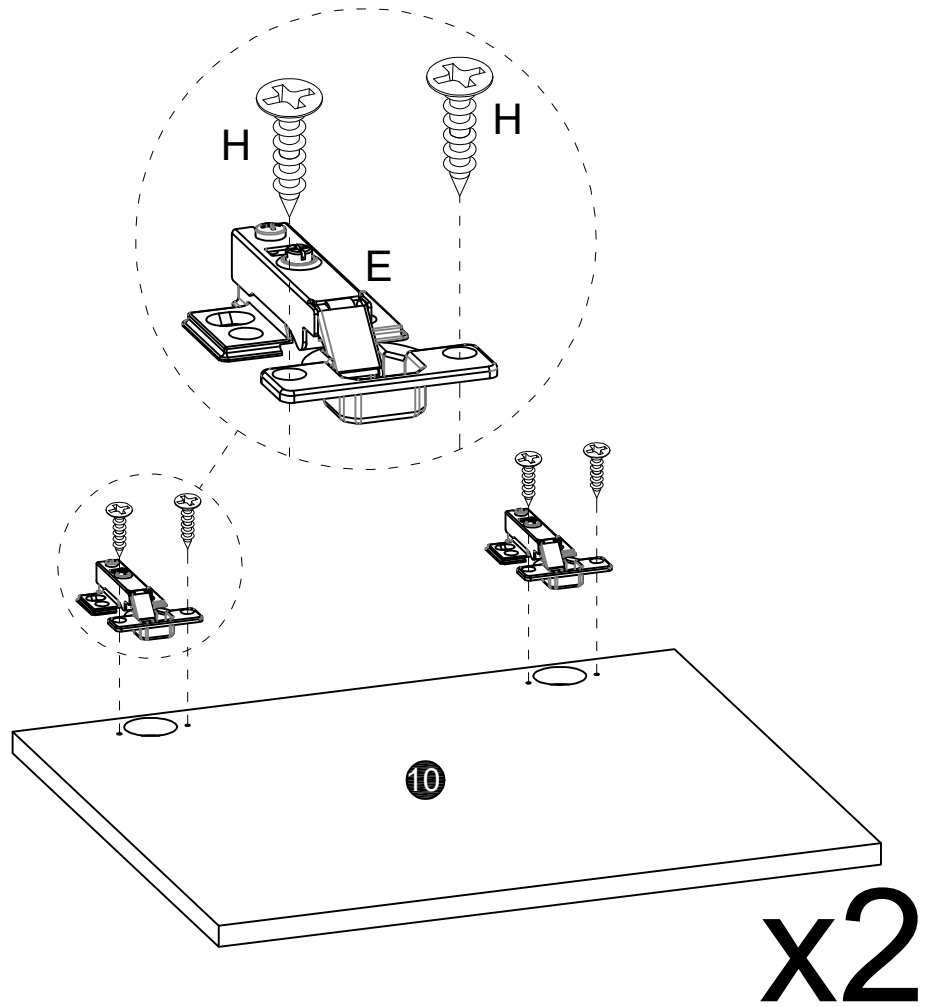


E	H
	
Ø6x35mm	3.5x14mm
4 pcs	8 pcs

12

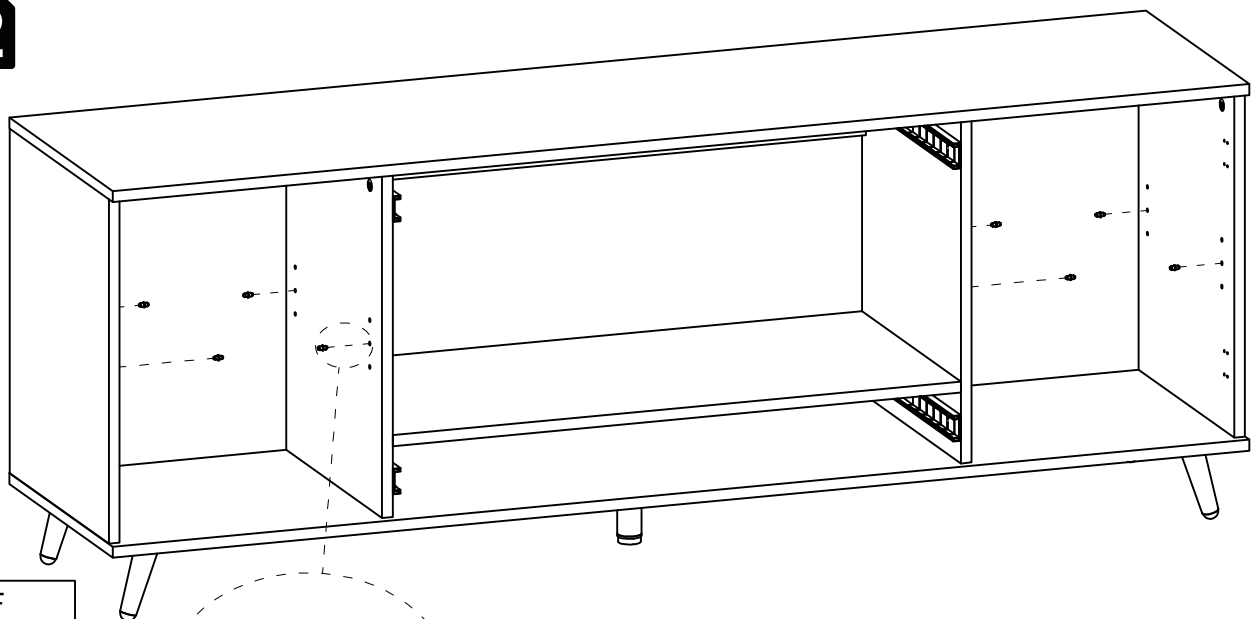



F

Ø5x13mm
8 pcs

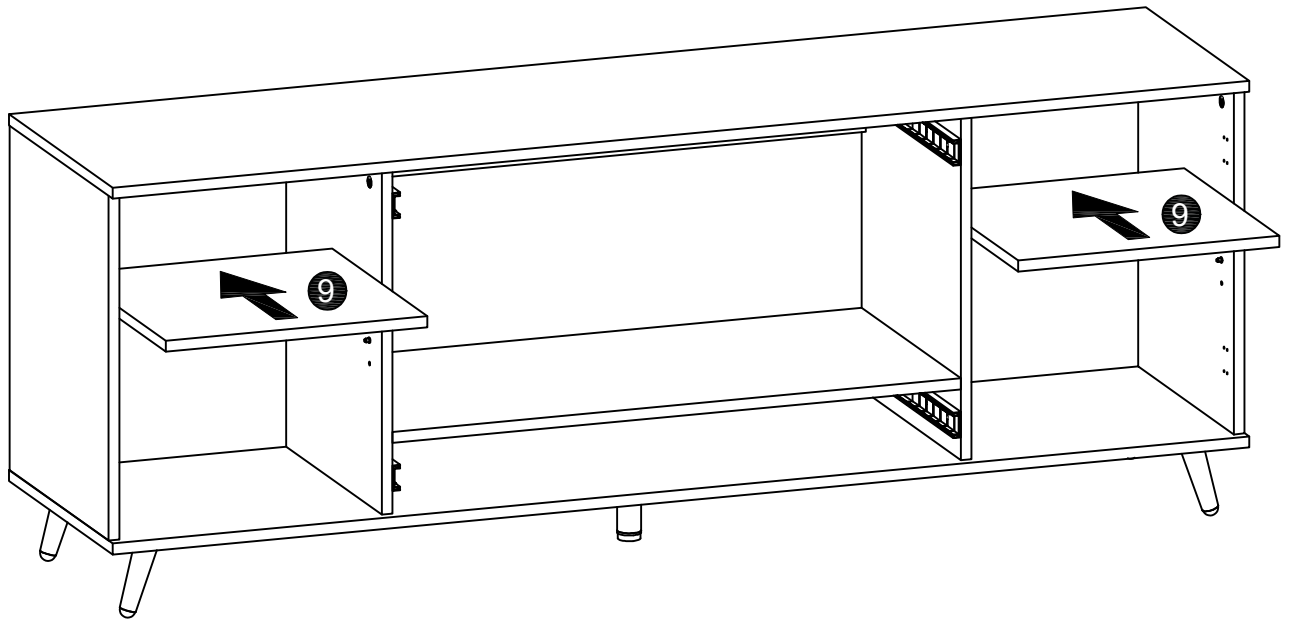
13

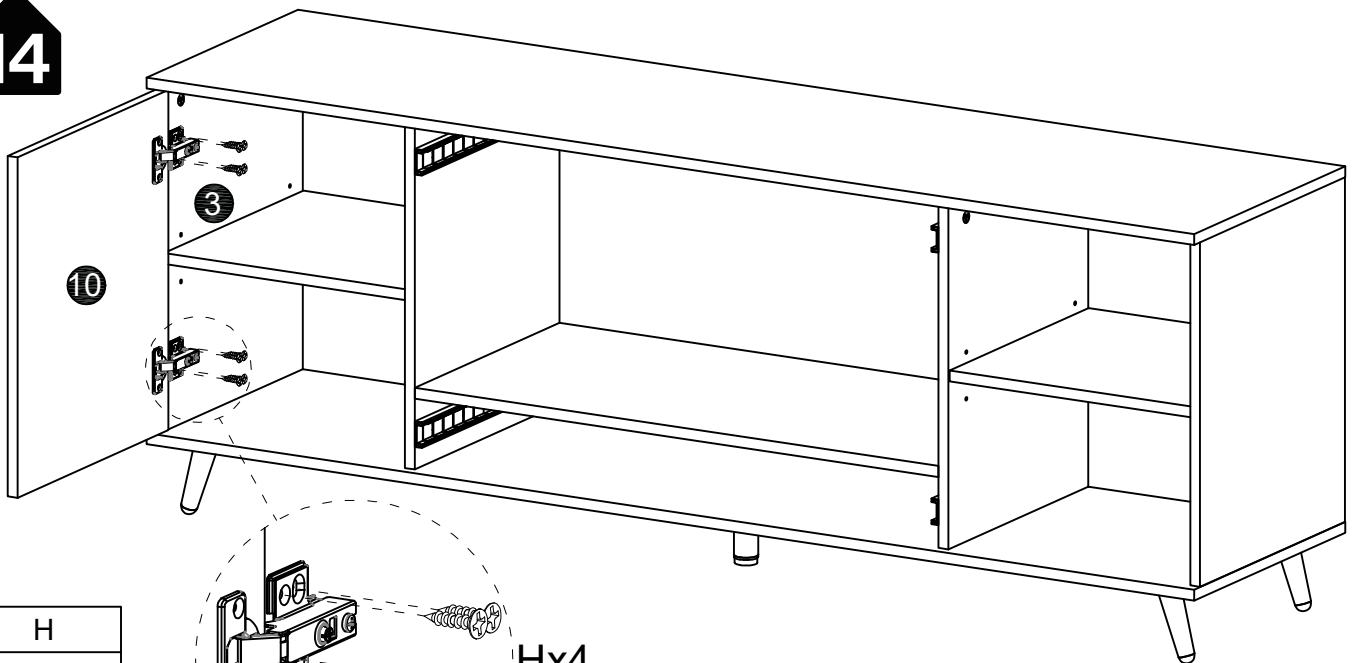


14




H

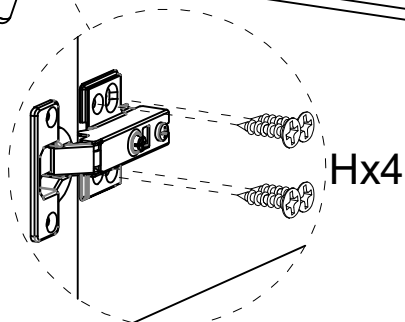3.5x14mm
8 pcs

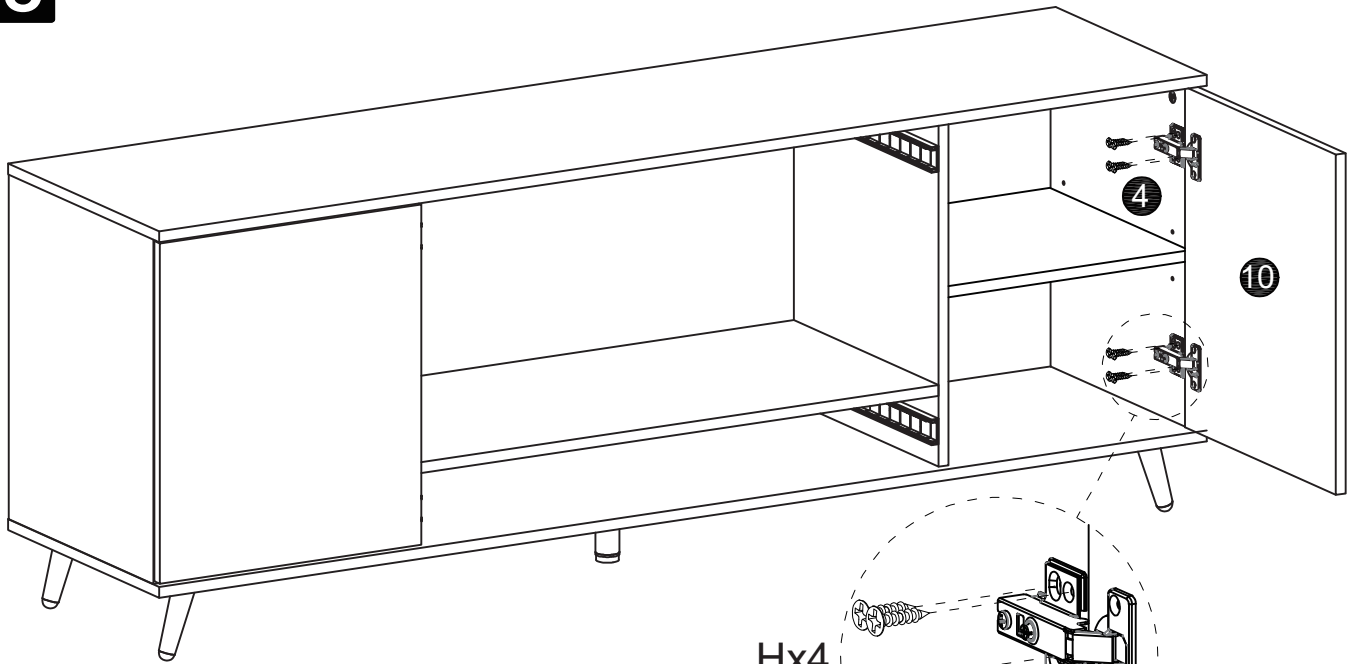



15




H

3.5x14mm
8 pcs

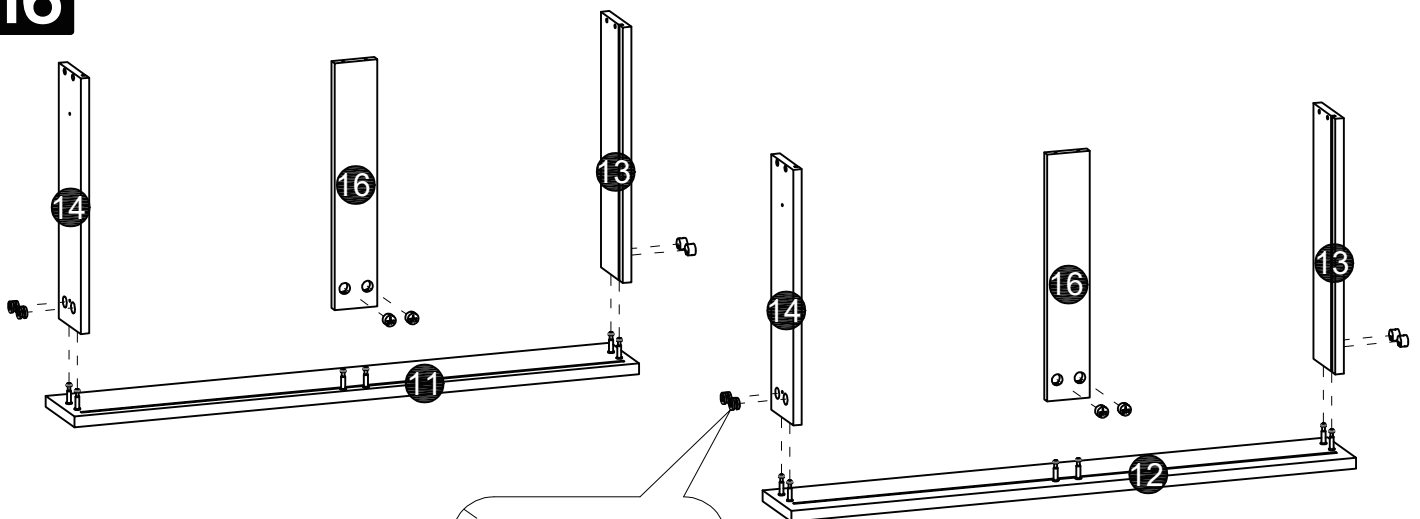16

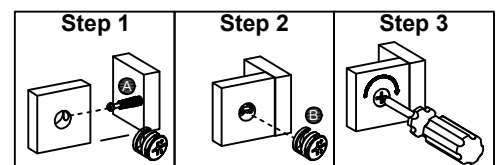


C

15x10mm
12 pcs



Step 1

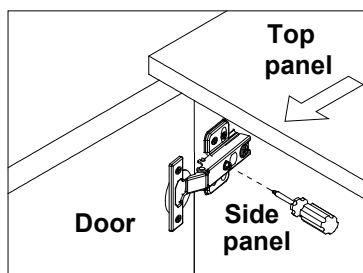
Open the door.



ADJUST YOUR DOORS TO MAKE THE GAPS MORE EVEN (OPTIONAL).



Step 2

Adjust the door panel to be flush with side panel and top panel edge.

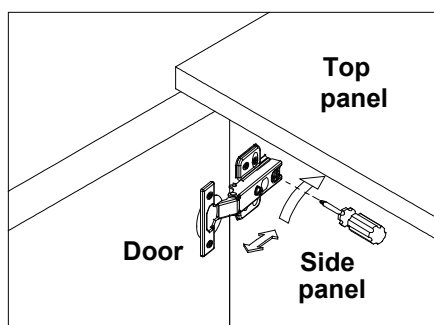



Loosen the screw indicated a little, adjust the hinge to the right position (see step 2a & 2b), then tighten the screw.

Step 2a MOVE DOOR OUT

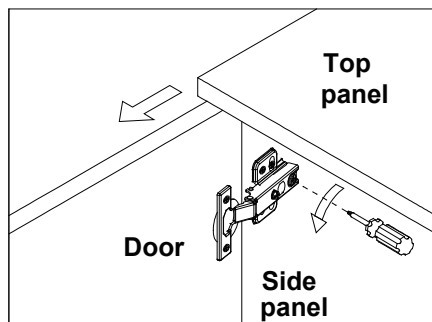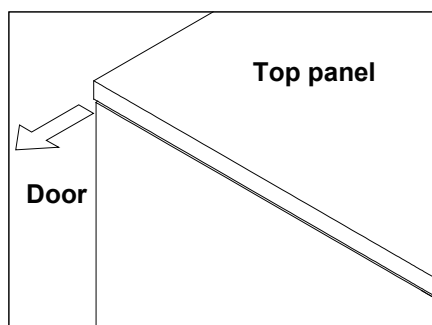

Pull the hinge forward a little.


Step 2b MOVE DOOR IN

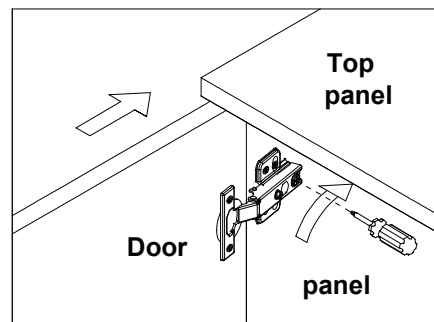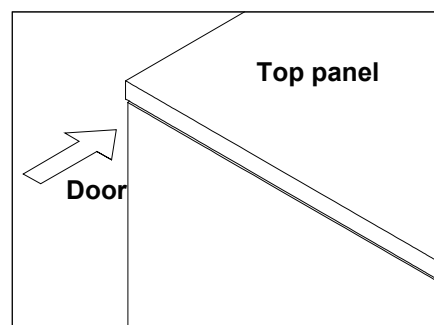

Push the hinge back a little.



Step 3

Adjust the gap between the door panel and the side panel.

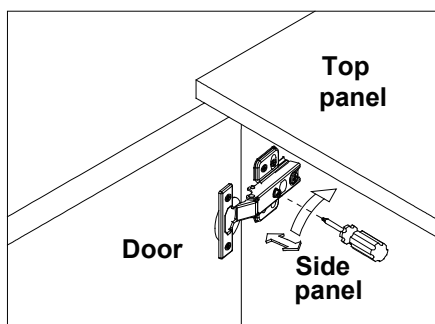



Loosen or tighten the screw indicated a little to adjust the gap between the door panels, adjust the hinge to the right position (see step 3a & 3b).

Step 3a MOVE DOOR LEFT

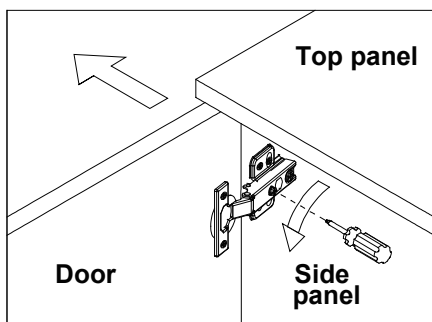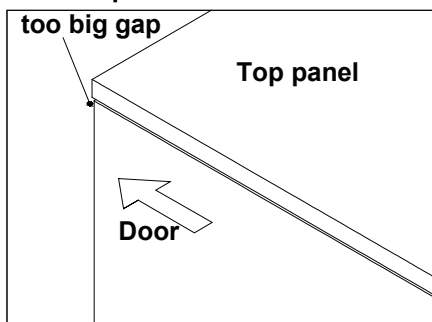



Turn the screw clockwise a little as shown to make the gap smaller

Step 3b MOVE DOOR RIGHT


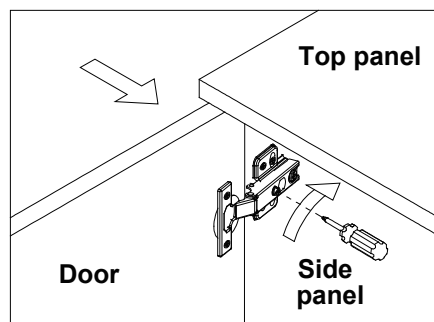
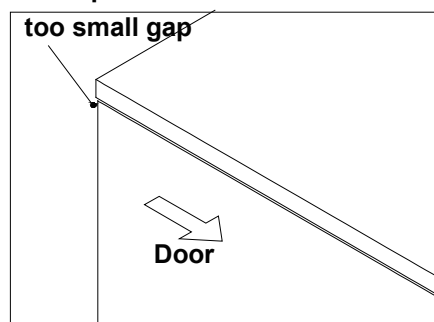



Turn the screw counterclockwise a little as shown to make the gap bigger

17

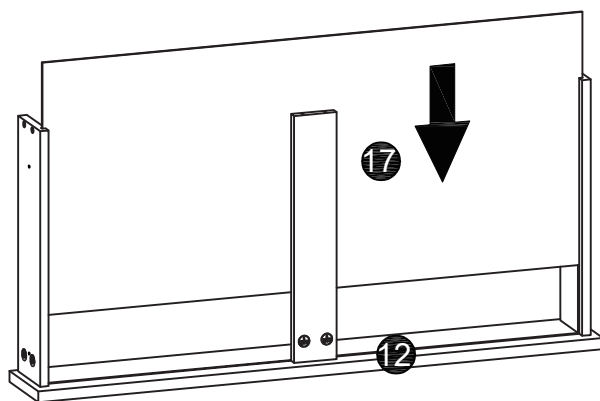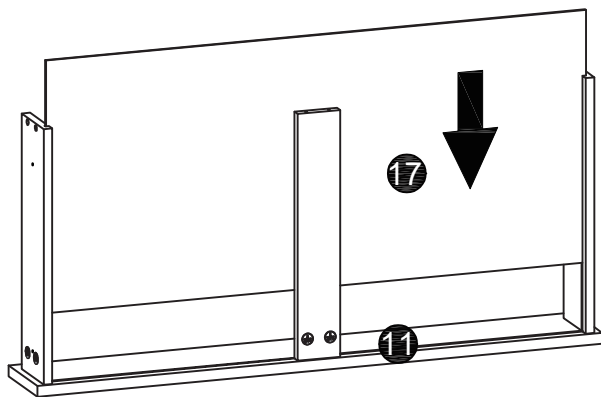


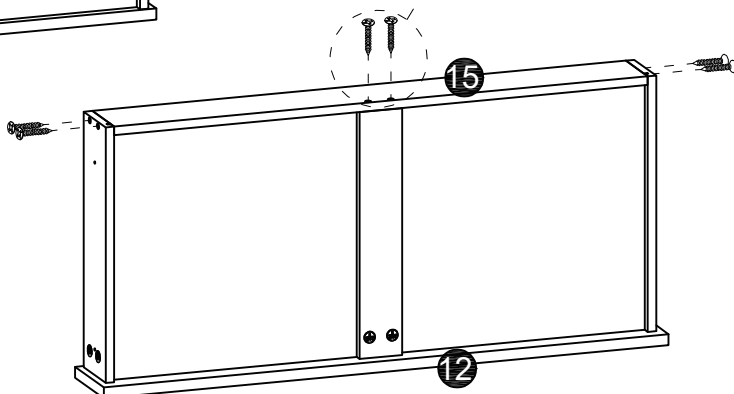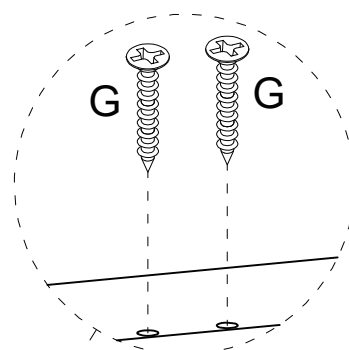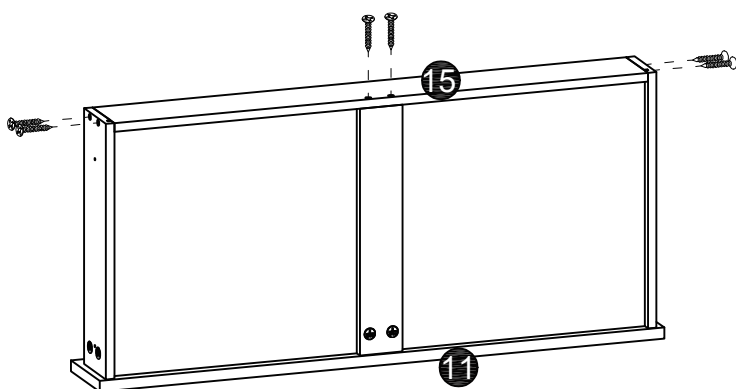

18




G

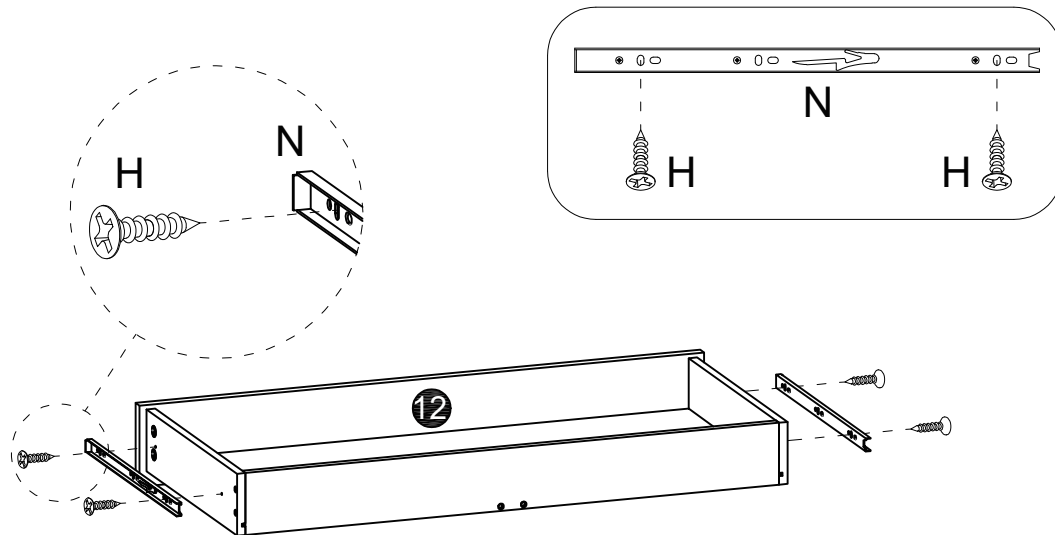4x35mm
12 pcs


19

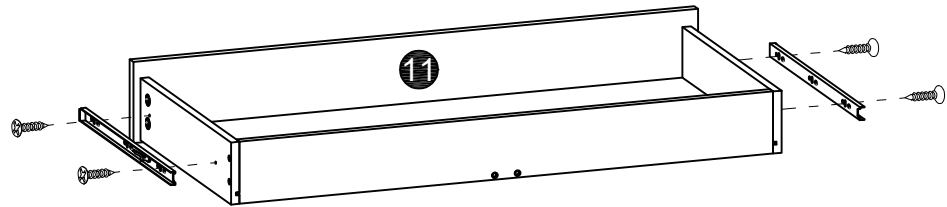


H	N
	
3.5x14mm	L350mm
8 pcs	4 pcs




20

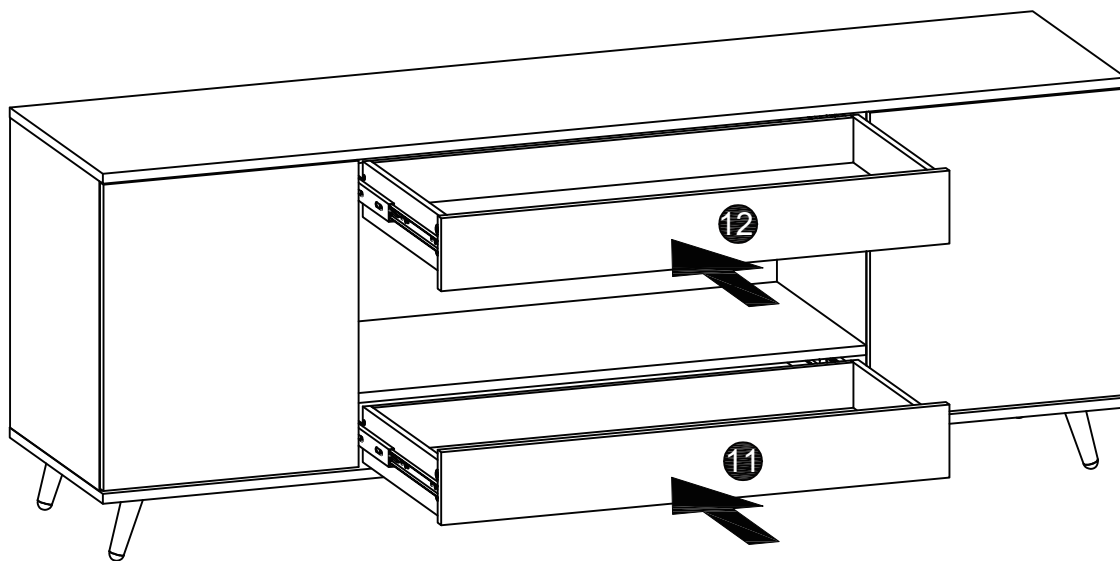


Step 1

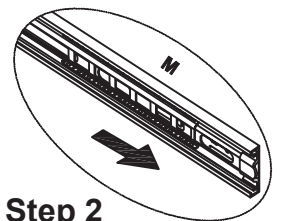


Step 2

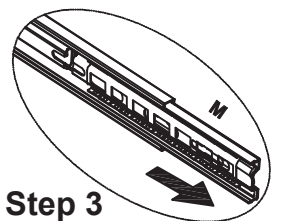

Step 3

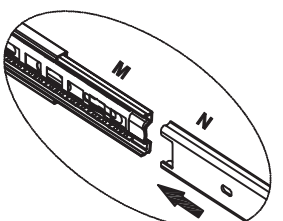

Before installation, slide the inner iron pieces of #M to the outermost side. Then align it with #N and gently push it inward to complete the slide installation.

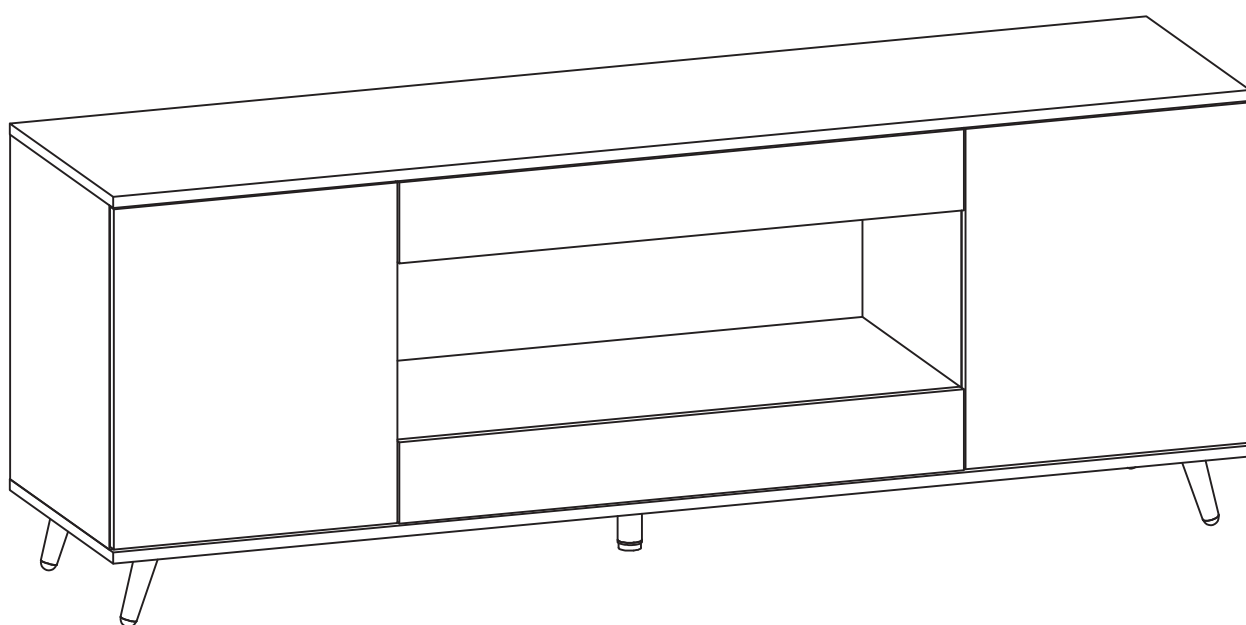

Thank you for your support!

