
2 SHELF CUBBY (with backer board)

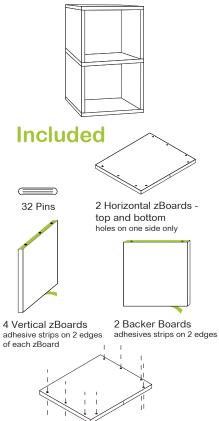






Important





CAUTION placing unit on its side or back will compromise structural integrity. Use right side up.




- · Assemble your unit on a flat even surface
- · Make sure zBoard surfaces are clean and dry
- When moving your Way Basics unit, lift from the bottom
- · Indoor use only. Not in bathroom.

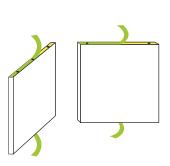


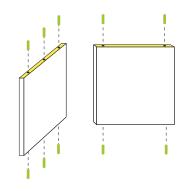


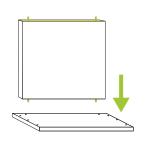


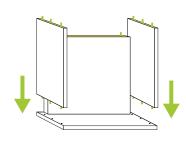



- Carefully remove the protective layer on the Back and Vertical zboards, making sure not to remove the 3M adhesive.
- Insert pins as shown.
- Align Back zBoard to holes in the Bottom zBoard.
- Align Vertical zBoards to holes in the Bottom zBoard.

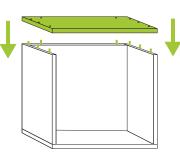

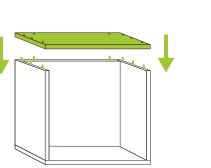

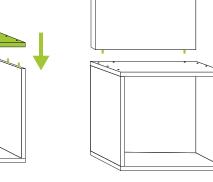

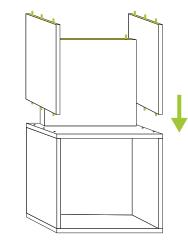

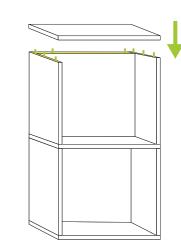

- Align Middle zBoard as shown.
- Align Back zBoard to holes in the Middle zBoard.
- Align Vertical zBoards to holes in the Middle zBoard.
- Align Top horizontal zBoard as shown and press firmly to secure unit together.

Enjoy building possibilities!

