


ASSEMBLY INSTRUCTIONS

HOUSE BED

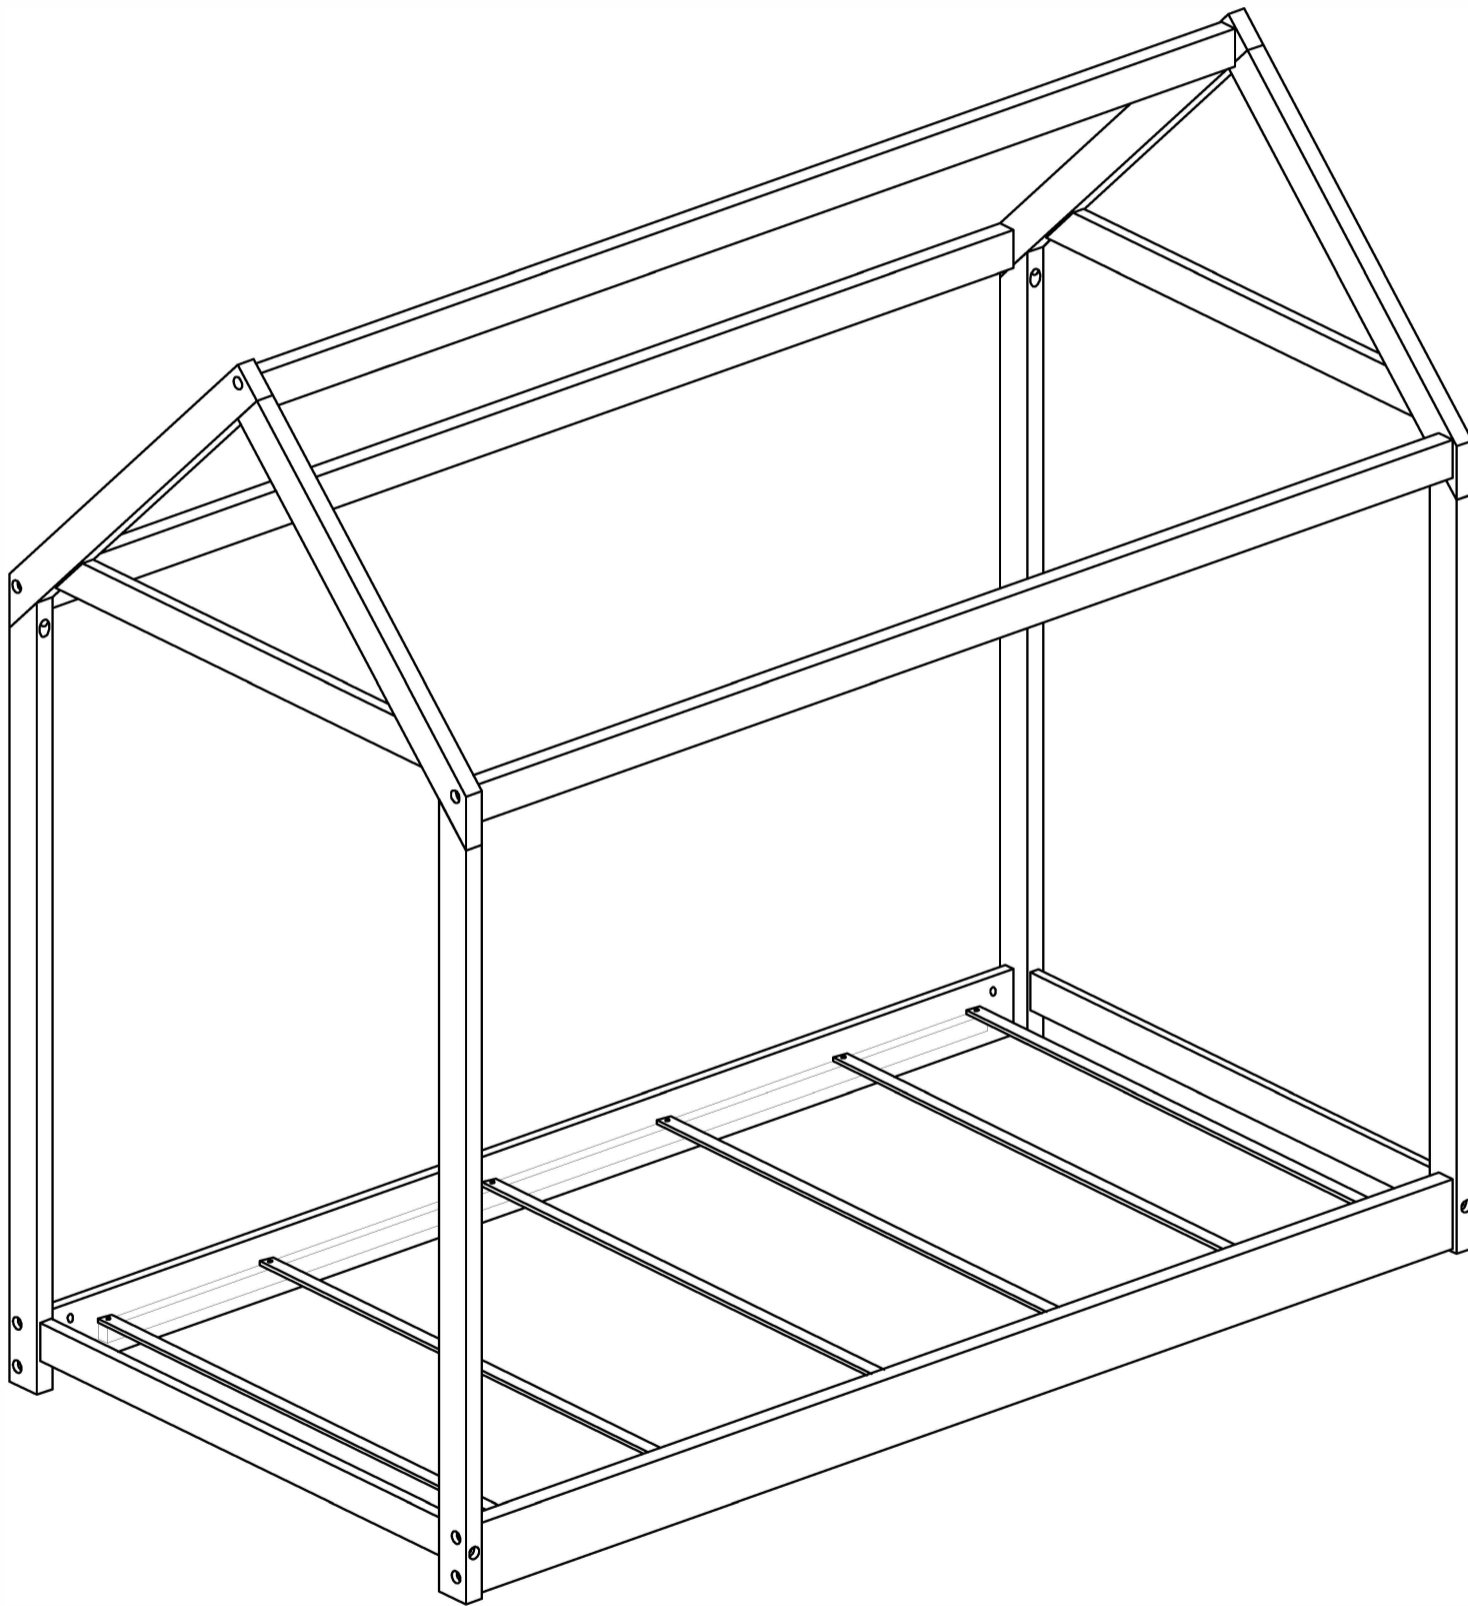

PLEASE DO NOT RETURN PRODUCT TO THE STORE.


If you have any problem or concerns, please feel free to contact our customer service department. We will reply you as soon as possible.












E-Mail: hs.team@qualfurn.net

Tel: 626-912-8886 Ext.100









Detail View

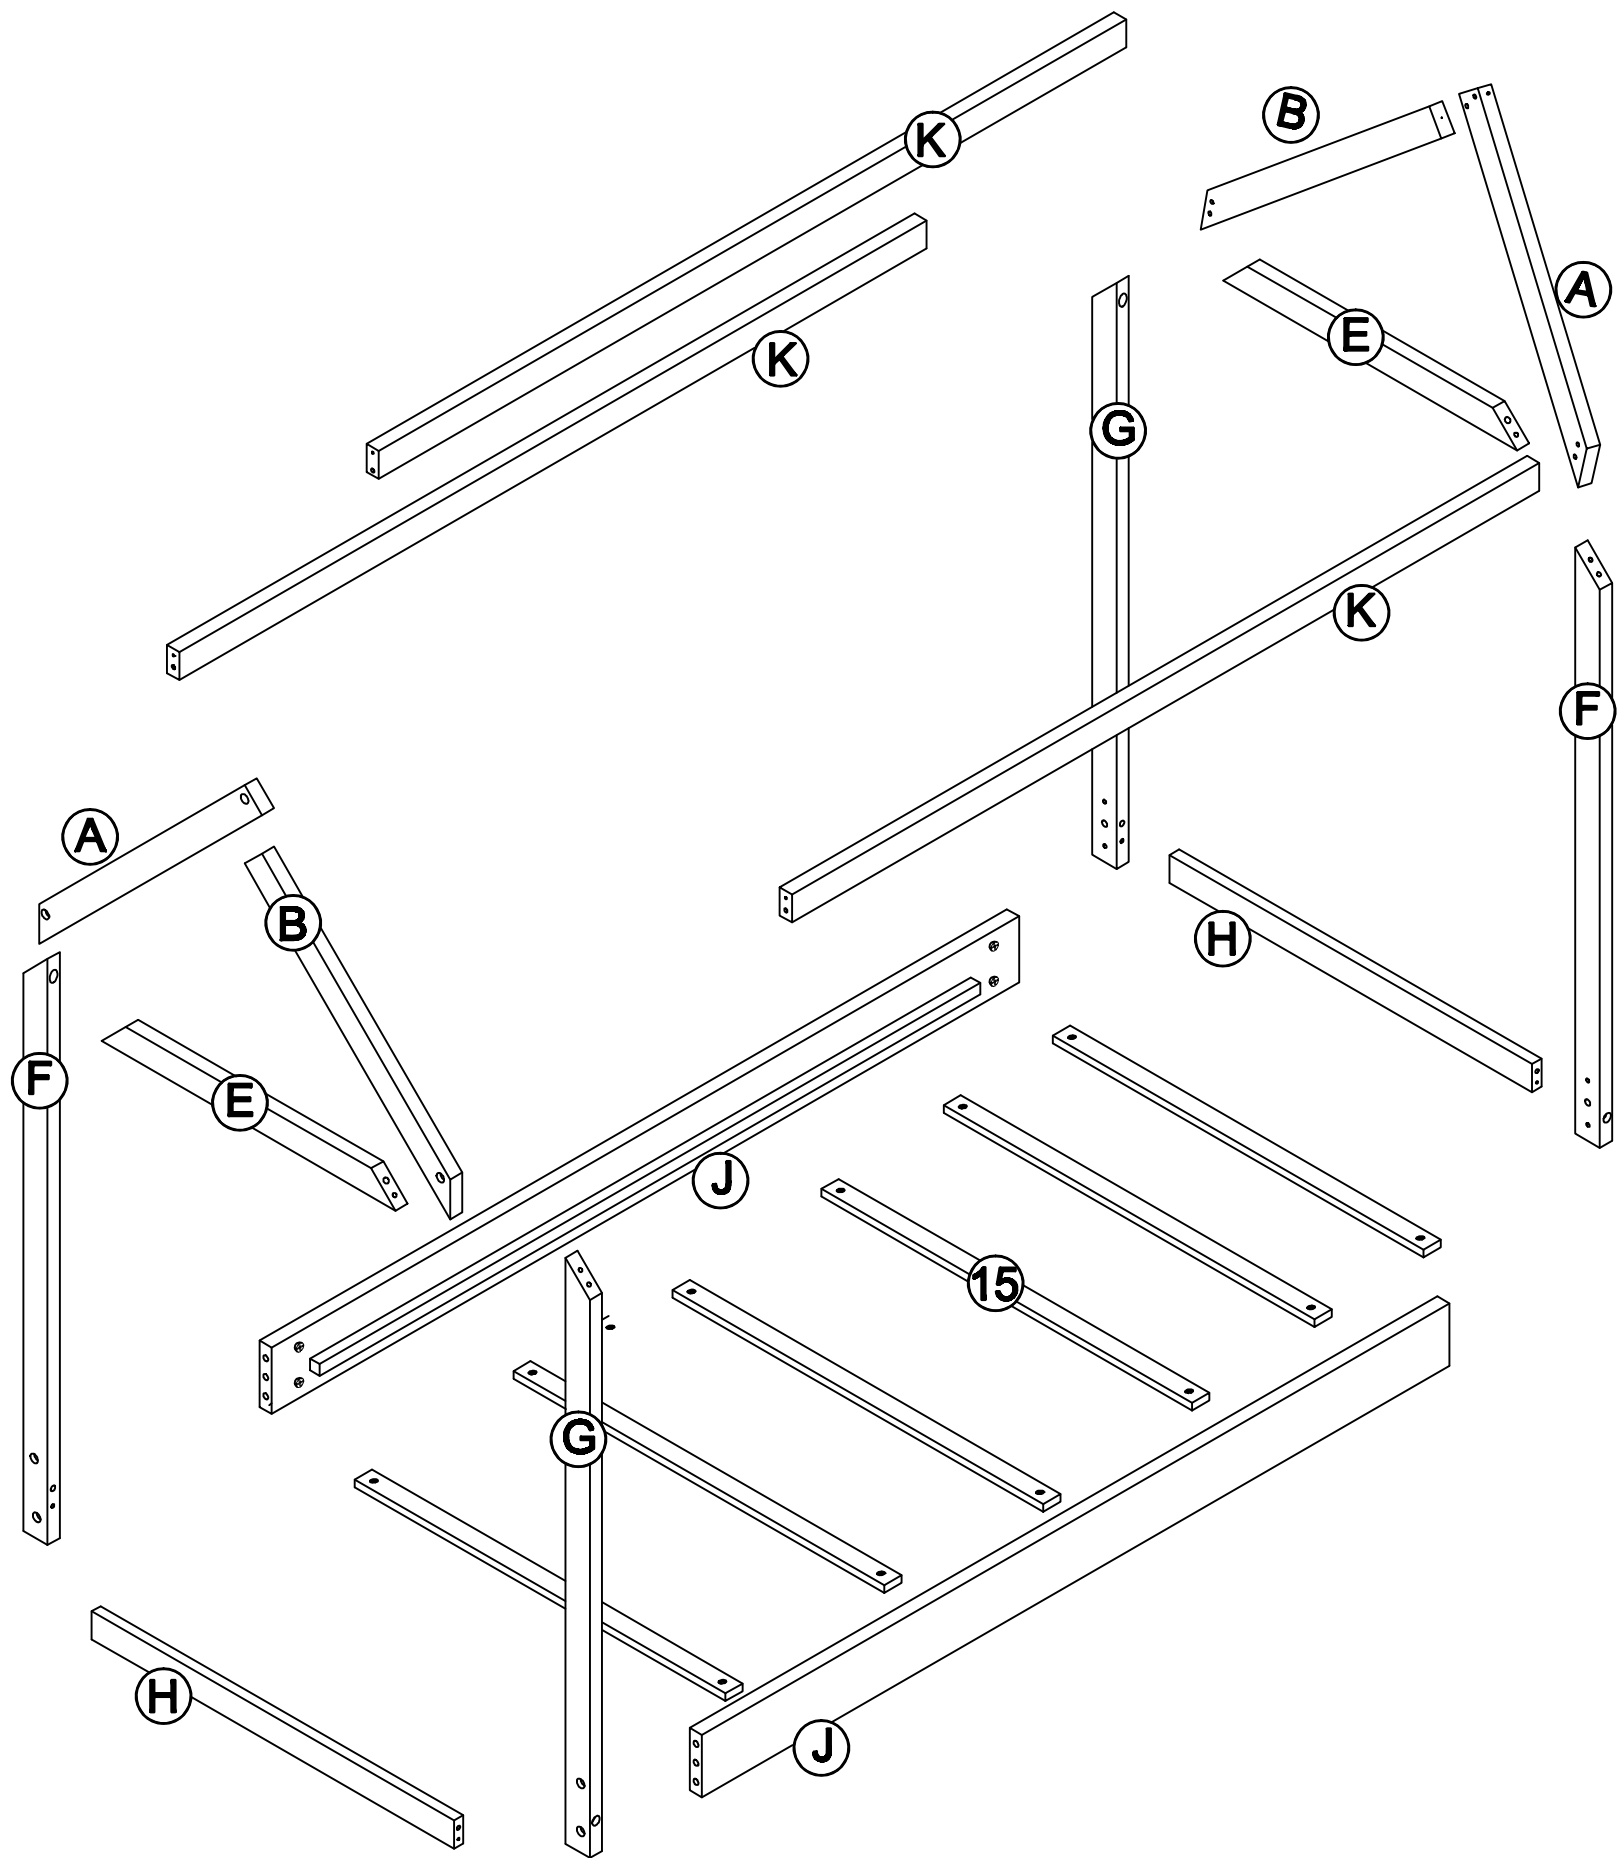


Part List

A 	B 	F 
Cap for upper HB-2pcs	Cap for lower HB-2pcs	Upper leg HB-FB -2pcs
G 	E 	J 
Upper leg HB-FB -2pcs	Horizontal bar HB&FB-2pcs	Front guard rails 2pcs
K 	H 	15 
Guard rail top 3pcs	Horizontal bar HB&FB-2pcs	Slats 6 pcs

Hardware List




1  Ø10*30mm Wood dowel (22pcs)	2  Ø1/4" x 80 mm Wood Screws (8pcs)	3  Ø1/4" x 80 mm Wood Screws (8pcs)
4  # 4*30mm Wood Screws (12pcs)	5  Ø1/4" x 15 mm Horizontal-Hole bolts 8pcs	6  (1/4")4.5*58mm Allen Key (1pc)
7  Ø1/4" x 50 mm Wood Screws (8pcs)	8  Ø1/4" x 100 mm Wood Screws (4pcs)	


ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)





PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !


STEP 1:

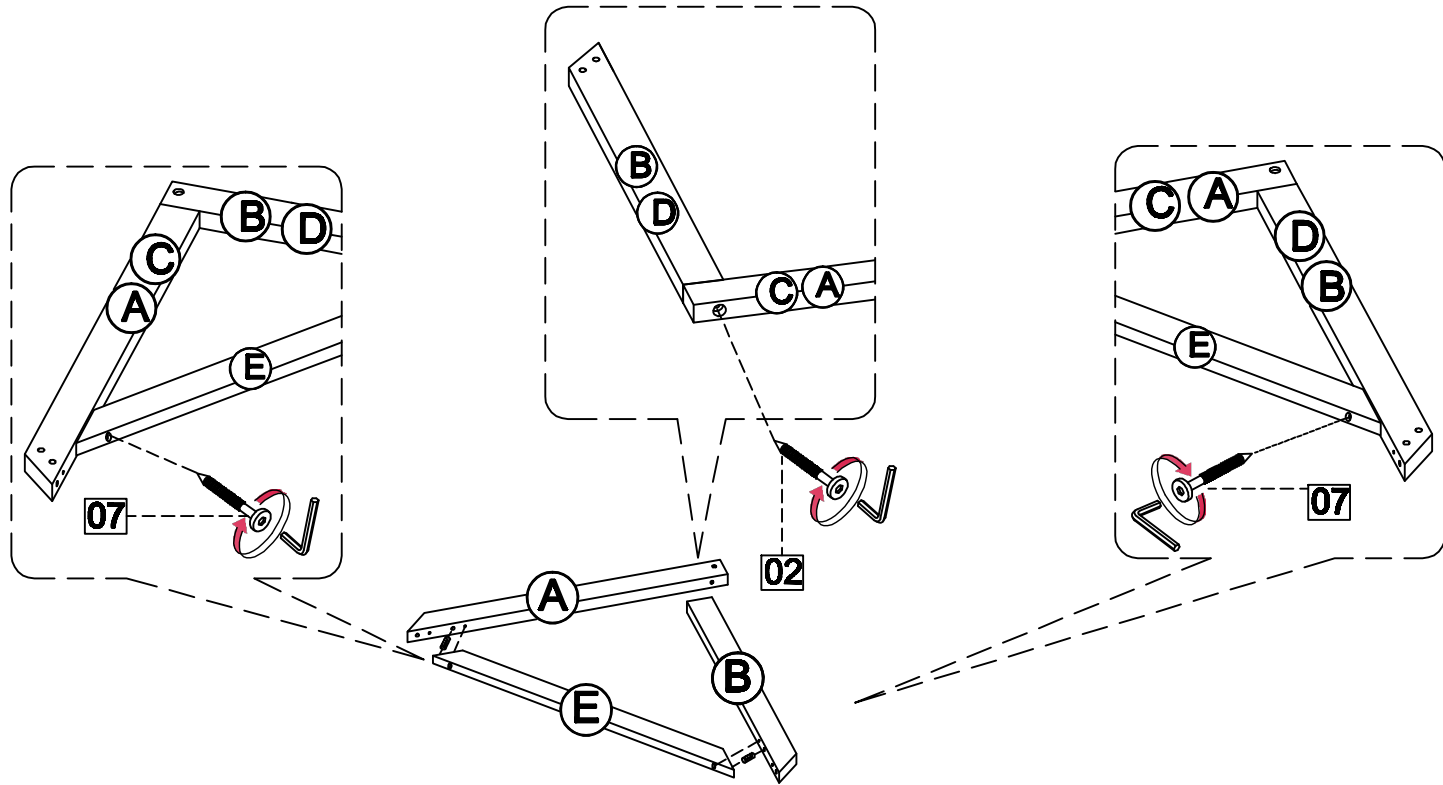07		01		02	
4PCS		4PCS		2PCS	






STEP 2:

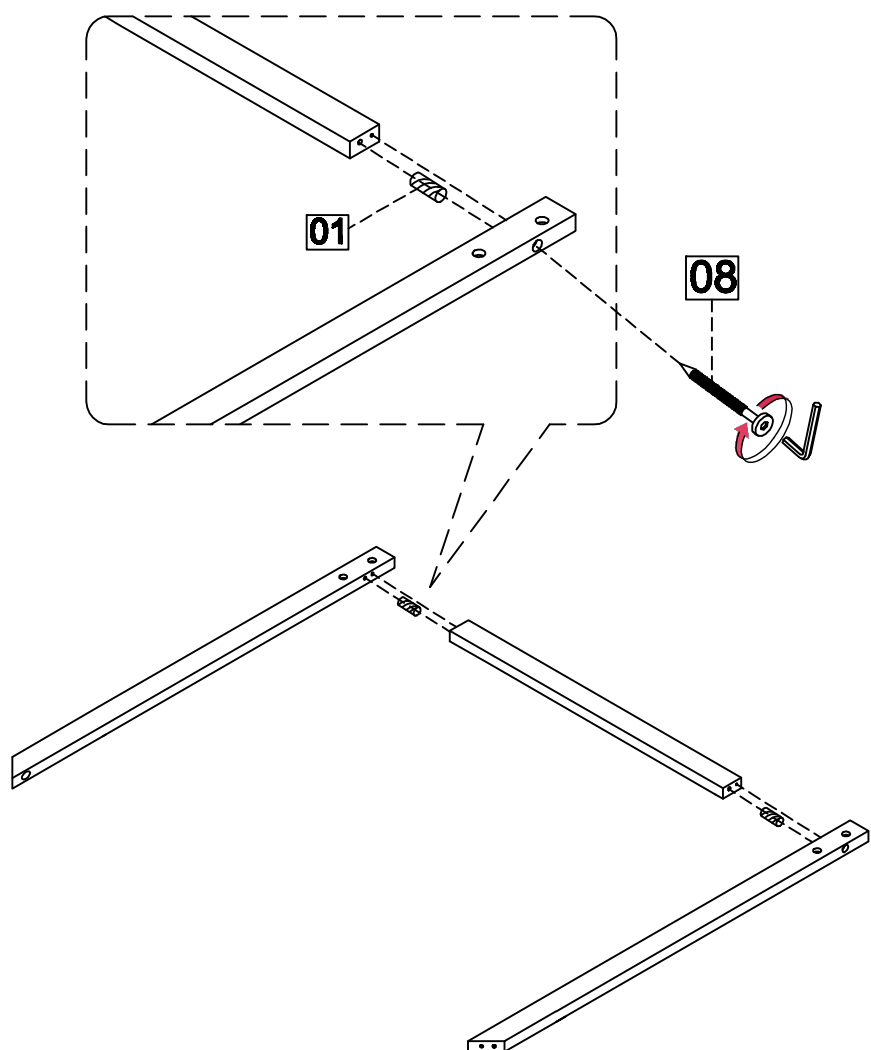01		08	
4PCS		4PCS	






STEP 3:


01		07	
4PCS		4PC	

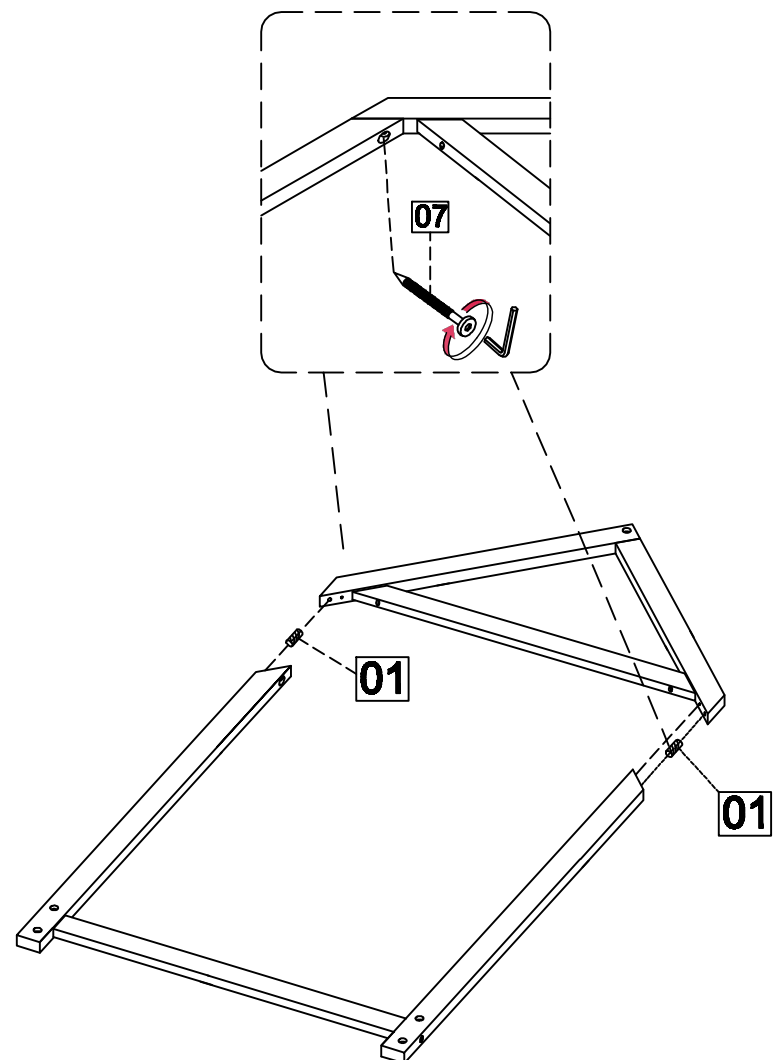


HB


STEP 3:

01		05		03	
10PCS		8PCS		8PCS	

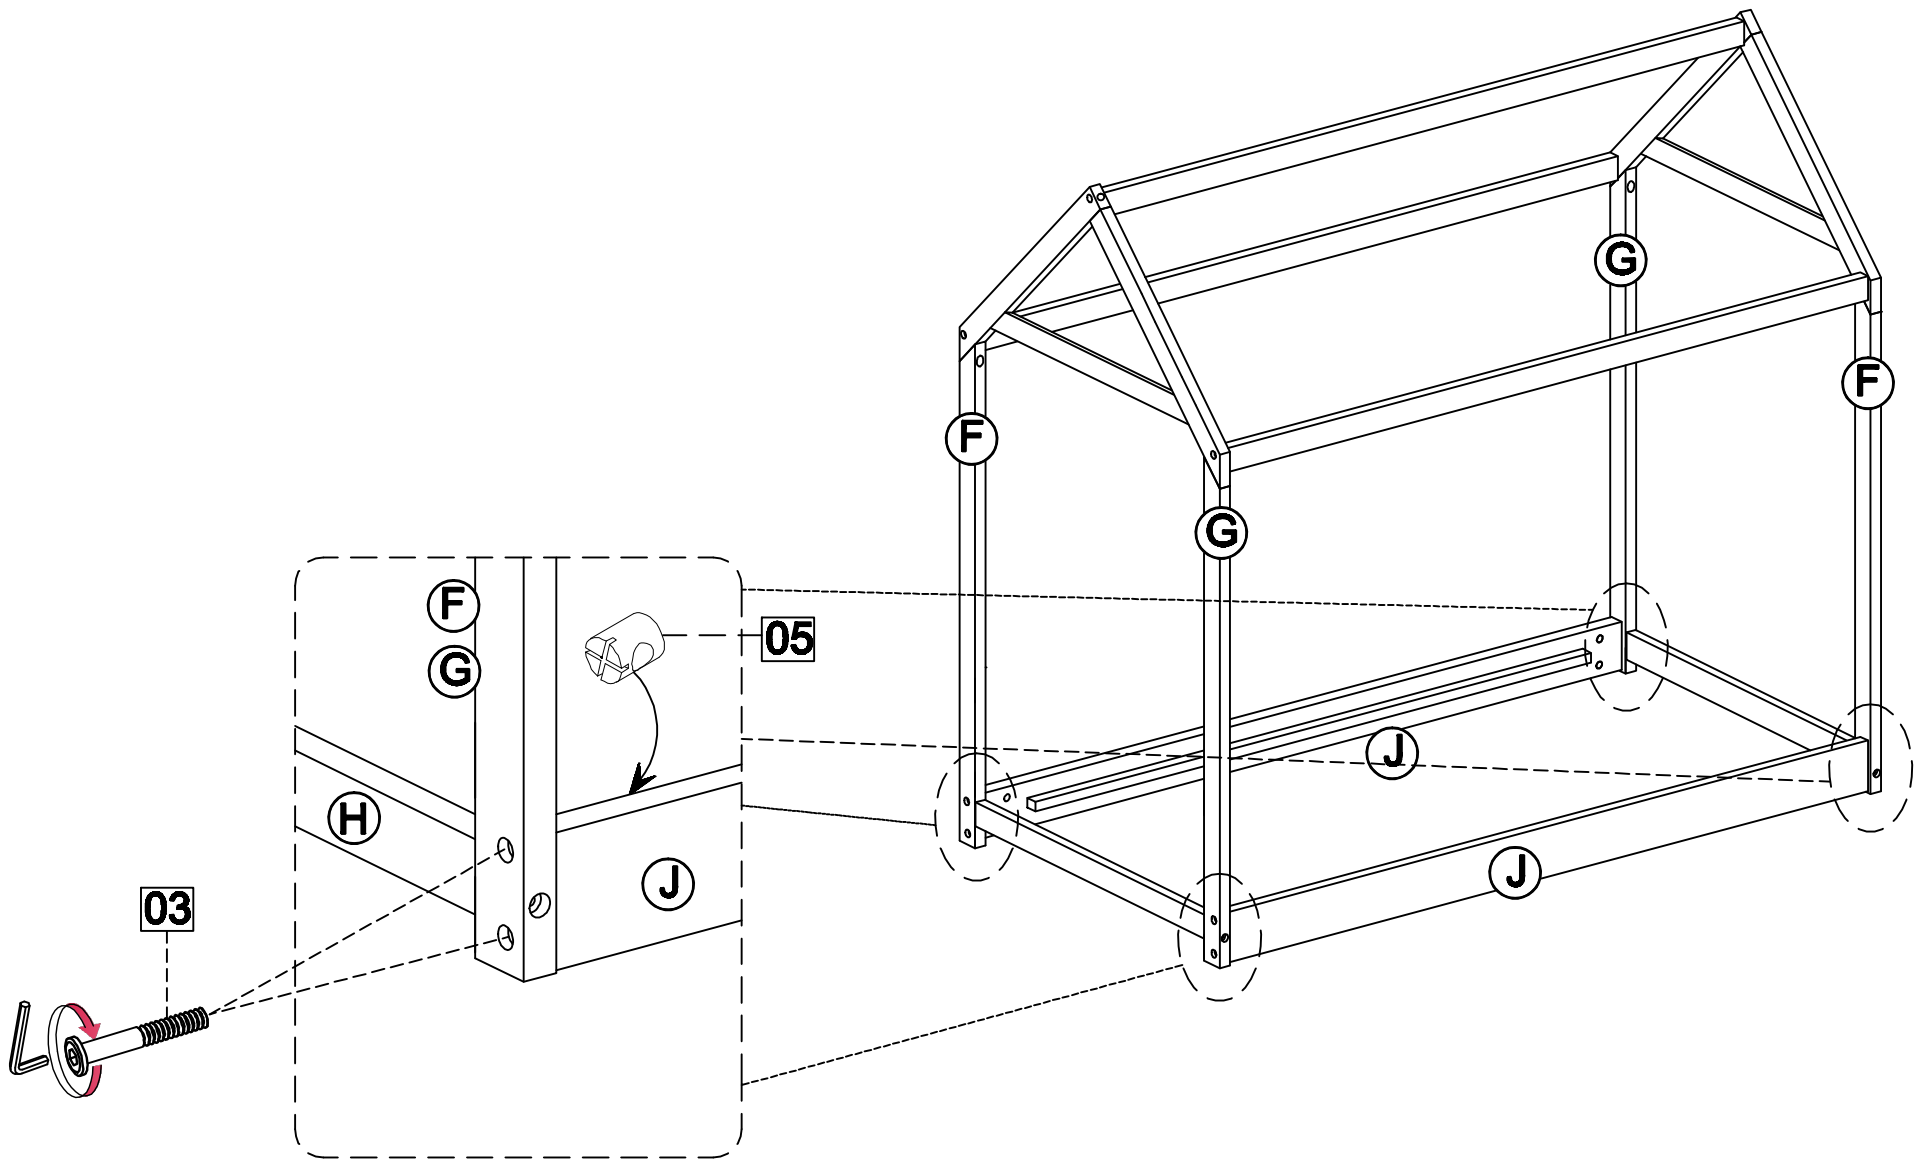


STEP 4:

02	
4PCS	



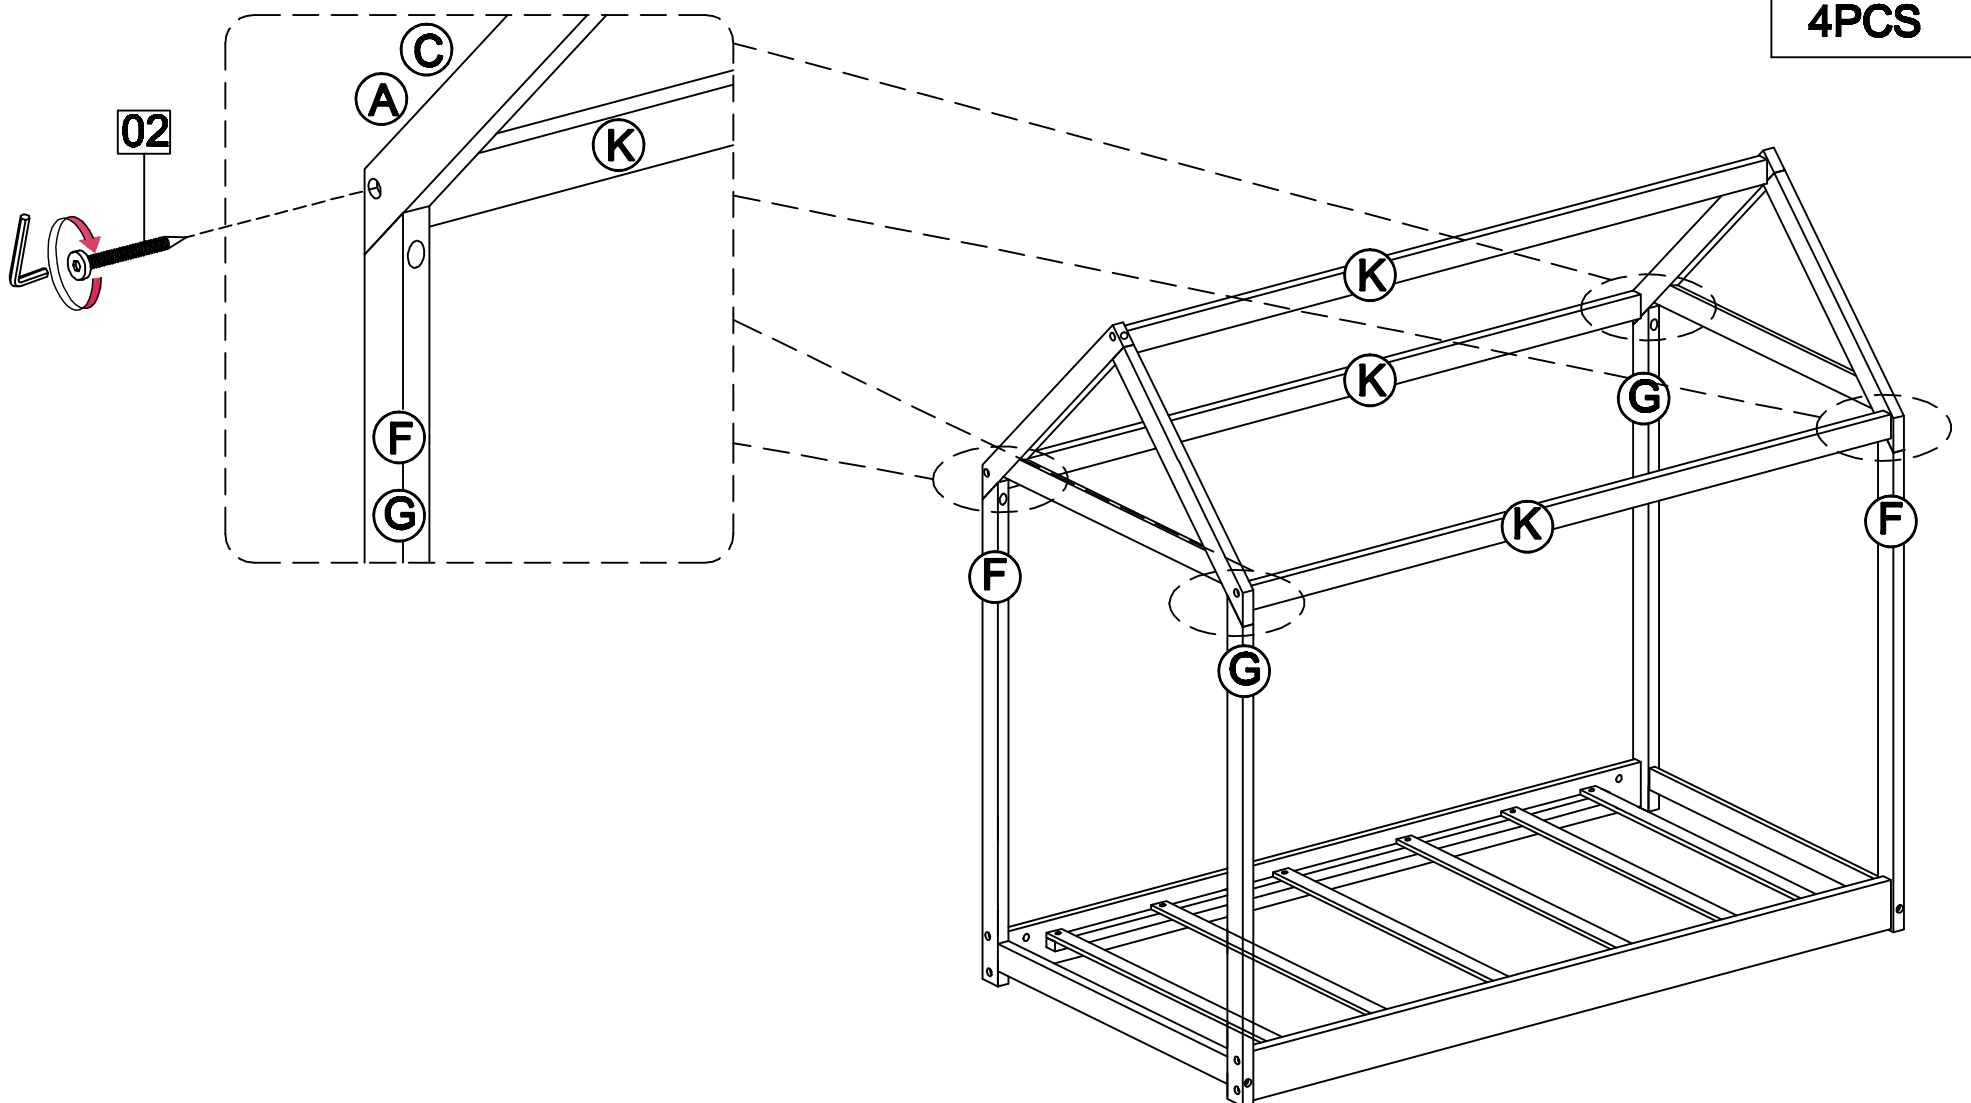


STEP 5:

02




2PCS

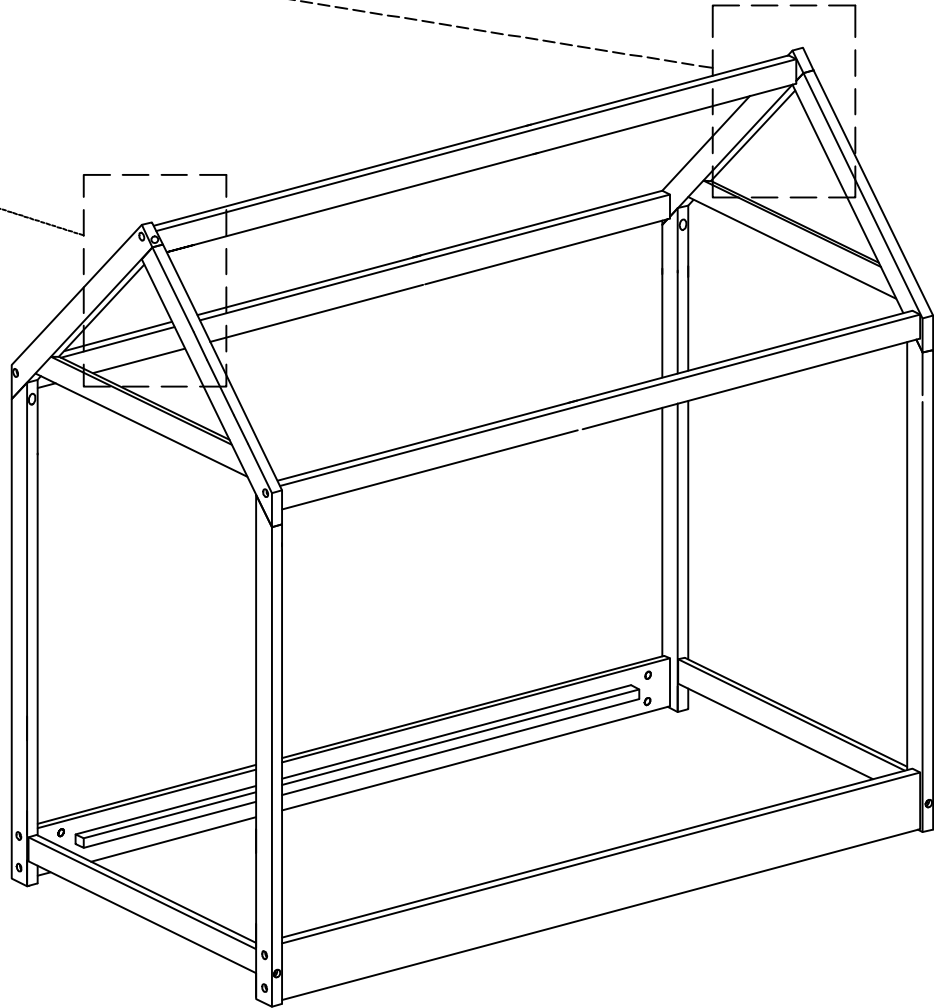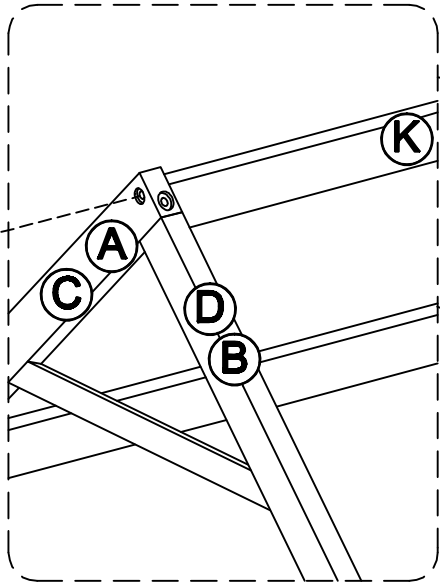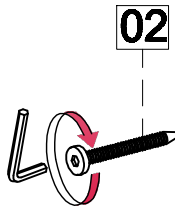



STEP 6:

04



12PCS

04

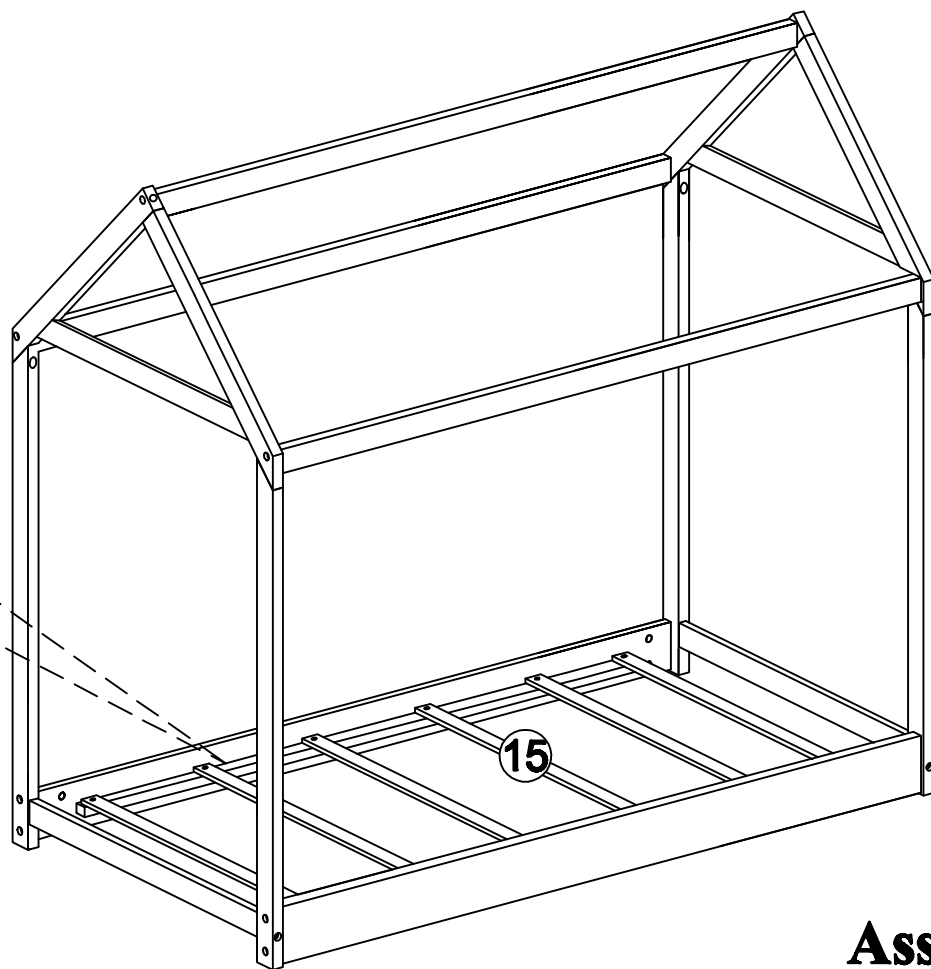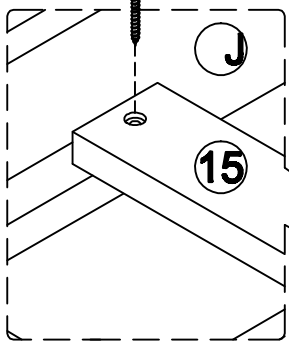

Assembly Complete