

PARTS:

Part No.	QTY.	Description
PLATE	1	PLATE
R1	1	RIB 1
R2	1	RIB 2
R3	1	RIB 3
R4	1	RIB 4
R5	1	RIB 5
R6	1	RIB 6
R7	1	RIB 7
LPR	1	LEFT PROJECTION BAR
RPR	1	RIGHT PROJECTION BAR

Other parts: Z-Brackets, Self tapping Screws, 1/1/2" Bolts, Nuts


Tools Required: Electrical Drill, 1/4" Nut Driver Bit, Full Socket Set, Full set of Steel and Masonry Bits, Tape Measure, Safety Glasses, 4' Level, A Safe Ladder, #2 Pencil

YOU MAY ALSO NEED AN ASSISTANT FOR LARGER AWNINGS. IT DEPENDS ON THE SIZE AND WEIGHT OF THE AWNING.


NOTE: YOU WILL FIND THAT THE FITTINGS HAVE BEEN PRE-INSTALLED, AS WE HAVE PRE-ASSEMBLED AND INSPECTED IT FOR YOU IN THE FACTORY.

Bostonian should be assembled on the ground


STEP 1: Separate all of the parts, so they will be easy to assemble.

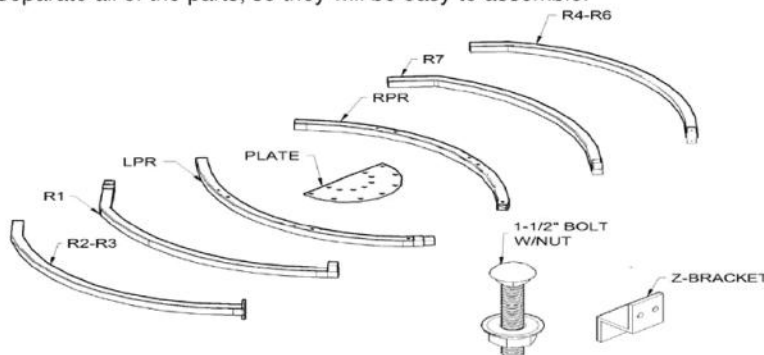


Step 2: Connect R1 And R7, and Connect LPR and RPR. You may need a rubber mallet to set the tubing into the fittings.

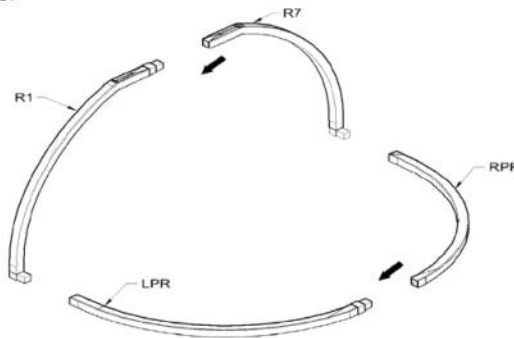


Step 3: Connect Both R1,R7 to RPR, LPR.

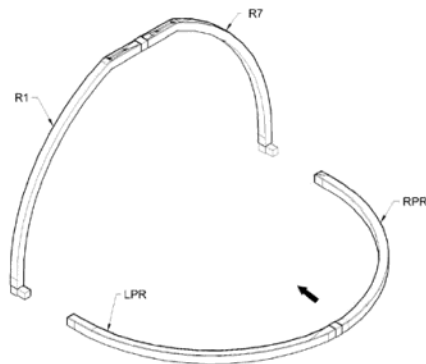


Step 4: Connect the Plate to the top of the structure, secure it with provided Bolts and Nuts. Requires 7/16" wrench.

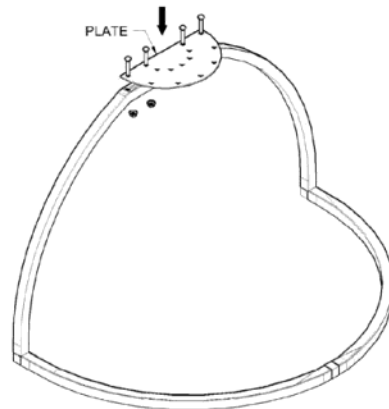

Step 5: Attach R2, R3, R4, R5, R6 to top plate. Use self tapping screws to secure the ribs to LPR and RPR.

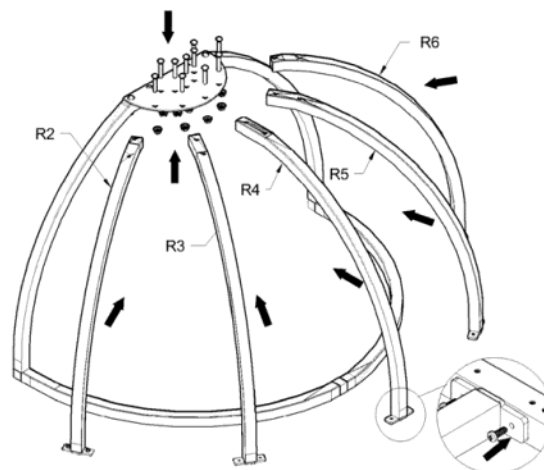


The frame for the Bostonian is complete

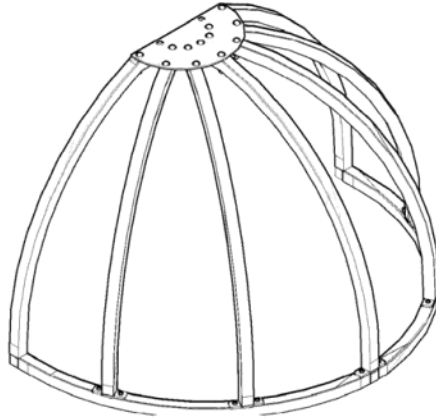


INSTALLING THE COVER

STEP 6: Fit the fabric over the frame with the valance hanging down below the curved bars.

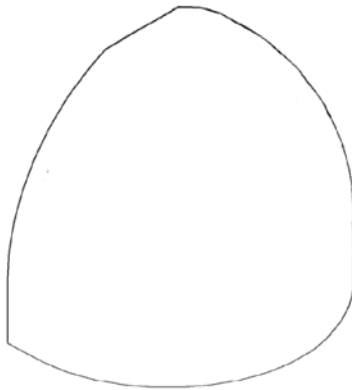

STEP 7: Once you are satisfied with the position of the cover, Pull the tabs snugly and attach them to the pre-installed Velcro tape on the bars.

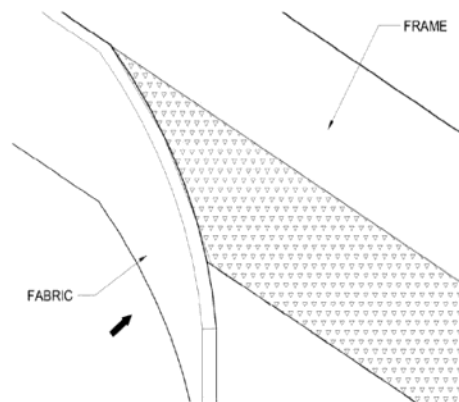

MOUNTING THE AWNING

STEP 8: Place the awning on in desired location. From the inside of the awning make a mark on the wall where the awning touches. (see the chart below for the height measurements)

***all the sizes are in inches

Model	Space between TB and P	Height incl valance	Projection
RB3	40.5	31	24
RB4	52.5	33.25	26.25
RB5	64.5	39.25	32.25
RB6	76.5	45.25	38.25
RB7	88.5	51.25	44.25
RB8	100.5	57.25	50.25

Step 9: install the Z-Brackets, temporarily place the awning on the wall to make sure it fits prior to tightening screws.

Step 10: Remove the awning and tighten wall brackets.

Step 11: Install weather Stripping on the awning outside parameter. Place the awning back on the brackets. Drill two holes for self tapping screws thru the (TP) use Z-Brackets for guide. Secure with self tapping screws.

