




Ellis Curtain Measurement Guide

Curtain Rods are typically mounted 2" to 4" above the window and 4" on the outside of the frame (2" on each side)

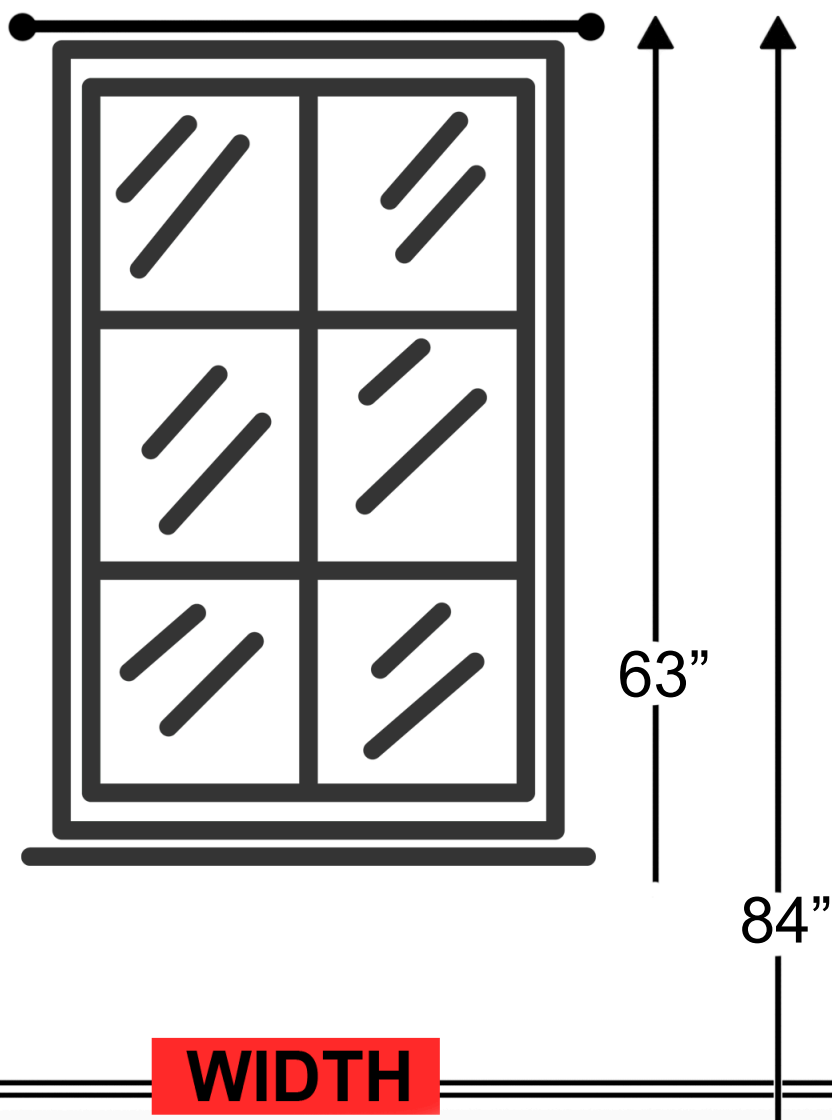

LENGTH

Shorter panels typically hang 4" below window sill

Longer panels typically hang 1/2" above the floor

For a puddled look measure from rod to floor and add appx. 6"



WIDTH

For a standard fullness look use window width measurement X2 fabric
For a total fullness look use window width measurement X2.5 fabric
For an ultra fullness look use window width measurement x3 fabric