

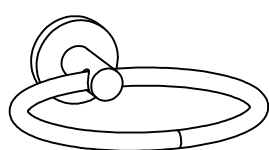


INSTALLATION INSTRUCTION

BATHROOM HARDWARE SET

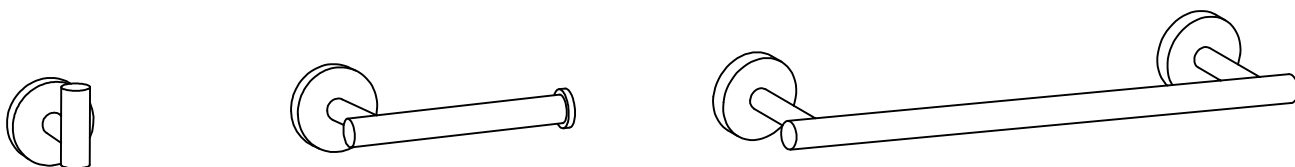

**THANK YOU FOR PURCHASING OUR PRODUCTS.
FOR IMMEDIATE HELP WITH ASSEMBLY OR
PRODUCT INFORMATION EMAIL US:**

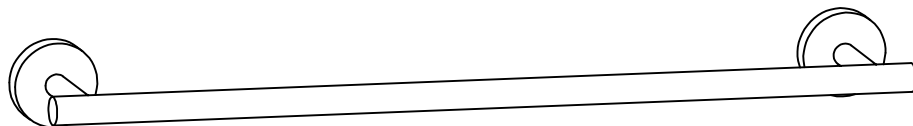


support@customerserviceyibai.com

Please offer your order ID and the product model number

Our staff is ready to provide assistance M-F 8:00 AM to 5:00 PM PST


①

Place Towel Ring/Toilet Paper Holder/Towel Hook on wall where you need to install, mark the outing of product base with a pen.

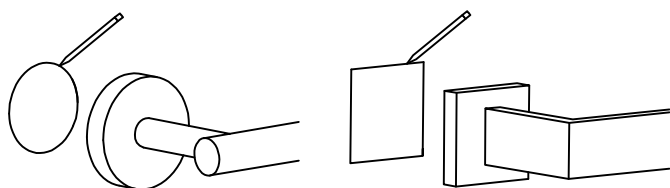


②

Cover mounting bracket paper on marked irde base, mark 2 points according to paper holes to deil wail holes.

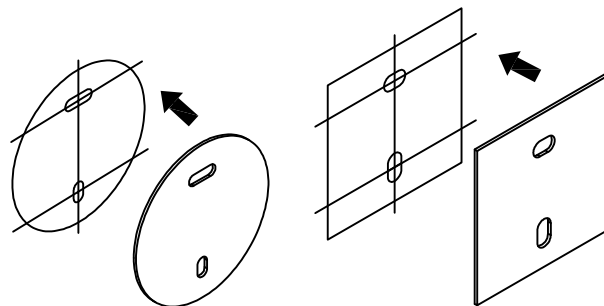


③

Use 1/4 inch drill to drill holes on wall which you marked, the depth same as white anchor.

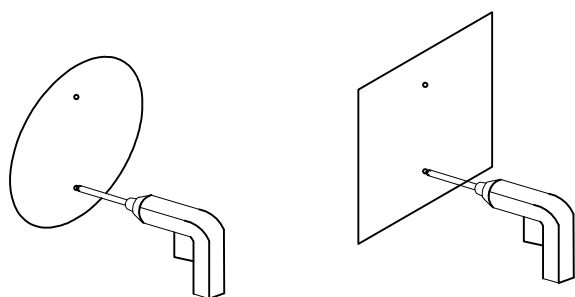


④

Use hammer hit the white anchors into holes, make sure whole anchor into hole.

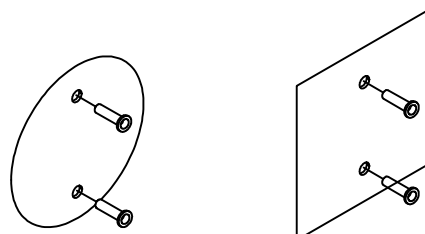


⑤

Use file, wrench loosen the setting screw then, unting bracket from accessory.

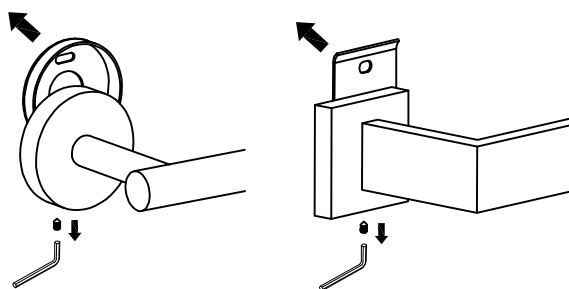

⑥

Use screwdriver sighten the mounting bracket on wall stable.

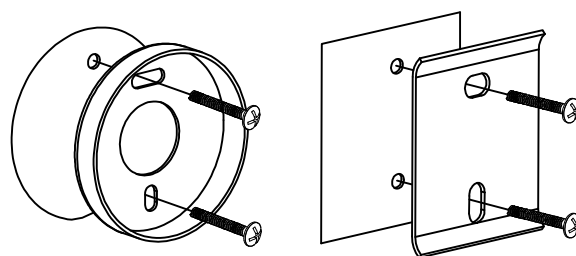

⑦

Put the accessory onto mounting bracket and tighten the setting screw in bottom.

