


INSTRUCTIONS

1. Remove chain and bar from locking plate before installing.
2. Drill pilot holes for locking plate on door jamb.
3. Screw locking plate on door frame.
4. Drill pilot holes for long plate on door.
5. Mount long plate 1/4" from edge of door at convenient height. Large hole at end of slot faces away from door jamb. Install screws. (Drill 3/32" pilot holes if necessary.)
6. Mount chain holder on door jamb so that knob on chain will reach hole in the slide plate. Install screws.

Operation:

1. Before leaving, insert chain button into slide plate and then from the outside reach through door and insert lock shoe into lock.
2. For re-entry, open door and insert key, turning 1/4 turn to release shoe lock.

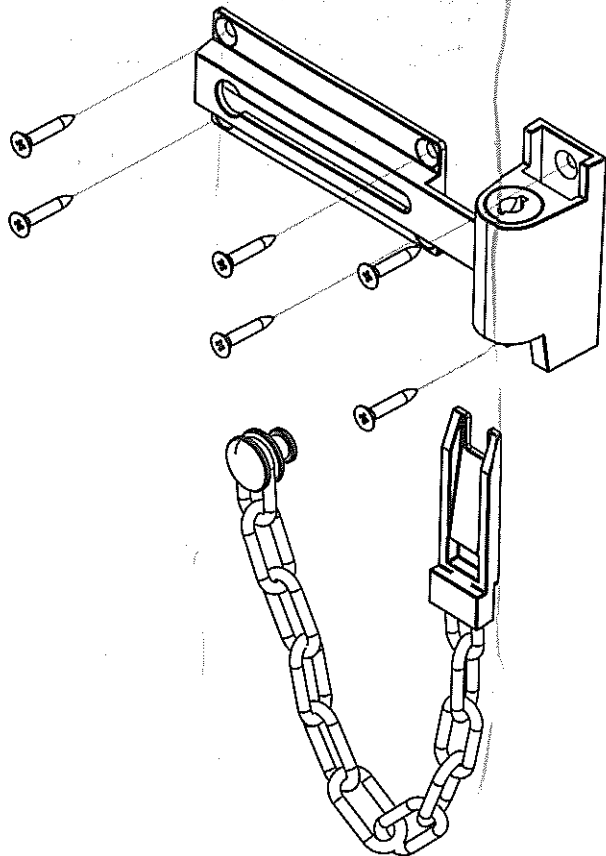

1800

SATISFACTION GUARANTEED

(See website for details <http://www.hickoryhardware.com/warranty/>)

© **Belwith Products**

3100 Broadway SW, Grandville, MI 49418

Made to Belwith Products' specifications in China