

# DRY ERASE BOARD

Stay organized and on task with this dry erase board.



Rust-Oleum Specialty Dry Erase Paint allows you to turn almost any surface into a functional organizational canvas. Create this crafty and handy dry erase board with these simple instructions.

## ITEMS


- Wooden Square Board
- Wooden Frame
- 1 Kit of Rust-Oleum Dry Erase Paint
- Foam Roller (1/4" to 3/8" nap) and Frame
- Roller Tray
- Drop Cloth

**1. PREPARE:** Always work in a well-ventilated area, like your garage, and use a drop cloth to protect from paint splatter.

**2. PAINT:** Stir part A and part B separately. Pour part A into part B and mix together. Begin painting immediately. Use a foam roller to apply Rust-Oleum Dry Erase paint onto the wood square board. Use light, even strokes to ensure a smooth finish. Wait 10-15 minutes then apply a second coat.

**Tip:** We recommend priming bare wood surfaces with a good multi-purpose primer like BullsEye 1-2-3 prior to painting.

**3. FINISH:** Allow paint to dry slightly and attach the frame to the painted square board with glue. Allow paint to dry for 3 days before using.

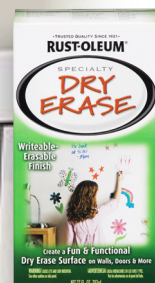

As shown Rust-Oleum Specialty Dry Erase Paint Kit

 **RUST-OLEUM®**

Visit [www.homedepot.com/rustoleum](http://www.homedepot.com/rustoleum) for other great ideas, products and inspiration.

# DRY ERASE WALL CALENDAR

KEEP YOUR LIFE IN PERFECT ORDER WITH THIS BOLD CALENDAR

Create a decorative showpiece on your wall to keep track of appointments, daily tasks and special events. With Rust-Oleum Dry Erase Paint, you can convert an average wall into a functional calendar.


## ITEMS

- Drop cloth
- Painter's tape
- Level
- Foam roller (1/4" to 3/8" nap) and frame
- Roller tray
- 1 kit of Rust-Oleum Dry Erase paint

## STEPS

- 1. PREPARE:** Cover nearby items with drop cloths to protect from paint splatter. Clean all surfaces thoroughly with soap and water. Use painter's tape and a level to create a grid for your calendar.
- 2. PAINT:** Stir part A and part B separately. Pour part A into part B and mix together. Begin painting immediately. Use a foam roller to apply Rust-Oleum Dry Erase paint to the wall. Use light, even strokes to ensure a smooth finish. Wait 10-15 minutes then apply a second coat. Repeat a third time on darker surfaces.
- 3. FINISH:** After one hour, remove the painter's tape. Allow paint to dry for 3 days before use.

*Always thoroughly review directions on the package before using any product.*

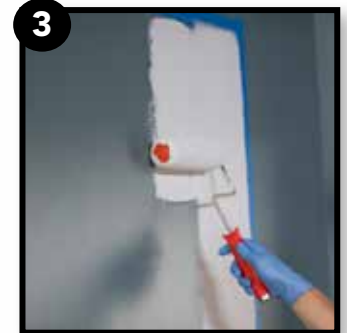

**RUST-OLEUM®**