Please unscrew all hardware from cushion before assembly. Por favor de destornillar todos los tornillos del cojin antes


Por favor de destornillar todos los tornillos del cojin de assamblar la silla.

000 9 EXX 900 Mechanism Sout SX. 養 (0) 100mm Gas Lift ENSKET M5+30 BACK BAR SCREWS MB+30 MECHANISM SCREW M6+25 ARM SCREWS EX. (5)X1 MODEL: B905/B915/HS900 Wood Base w/ Casters Left & Right Arm (J)X1 (L)X1 (R) (6)X1

Customer Service Hotline: 1-800-593-1888
For further assembly instructions,
please visit our website at www.bosschair.com

1000

ME-36 ARM SCREWS

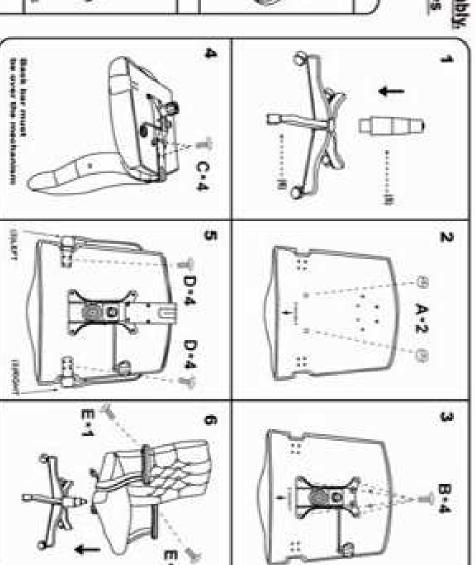

Insert and loosely tighten all screws. When assembly is completed, fully tighten all screws before using. This chair is only intended for sitting. Any other use will void the warranty.

