






# INSTALLATION GUIDE

# ARIEL


**STOP**, please make sure the cabinet is level before installing the countertop

INCLUDED	NEEDED	HARDWARE	
<ul style="list-style-type: none"><li>• Base cabinet</li><li>• Countertop</li><li>• Sink basin</li><li>• Backsplash</li><li>• Hardware</li></ul>	<ul style="list-style-type: none"><li>• Permanent marker</li><li>• Silicone - (Recommend Liquid Nails #LN-933 or Loctite #PL530 or GE Silicone II #M90010)</li><li>• Epoxy - (Recommend Loctite #1365868 or Gorilla Glue #4200101)</li><li>• Caulking gun</li><li>• Power Drill</li><li>• Drywall Screws</li></ul>	<p data-bbox="683 279 705 295">A</p>  <p data-bbox="705 335 778 351">Bolts (4)</p> <p data-bbox="683 391 705 406">C</p>  <p data-bbox="705 422 800 438">Washers (4)</p>	<p data-bbox="879 279 901 295">B</p>  <p data-bbox="901 311 1019 327">Wing nuts (4)</p> <p data-bbox="879 391 901 406">D</p>  <p data-bbox="873 430 1052 446">Undermount clips (4)</p>

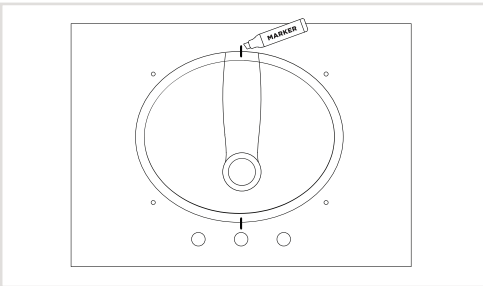


### STEP 1 - PLACE & TRACE

Place the sink basin on the bottom of the countertop, making sure to center over the opening. Draw guide lines on the countertop and the basin in two locations.

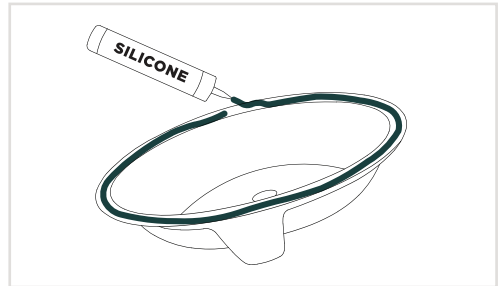


### STEP 2 - PREPARE SINK BASIN

Using a caulking gun, apply a heavy amount of silicone of your choice on the top side of the sink basin edge.

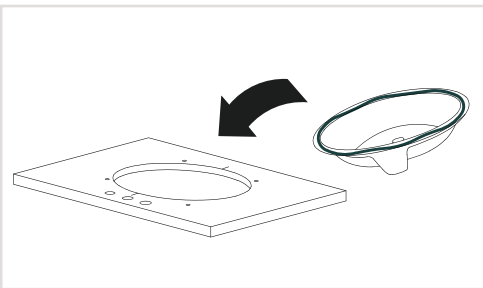


### STEP 3 - FLIP & SET IN PLACE

Carefully flip the sink basin over and place it so the guide lines match up in both locations.

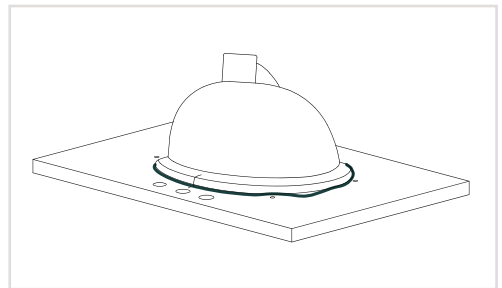

### STEP 4 - DRY & SET

Press down on the sink basin to seal the silicone. Remove any excess. Follow dry time recommendation found on your product, typically 12 to 24 hours.

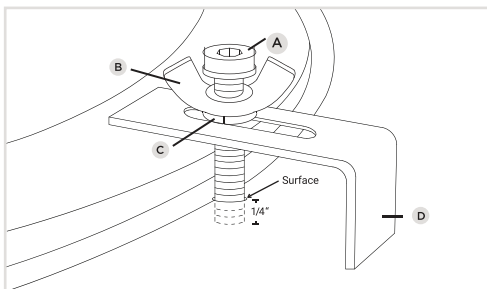


### STEP 5 - ATTACH UNDERMOUNT CLIPS

Please tighten Bolt (A) into wing nut (B) slide on washer (C) and guide through Under-mount clip (D) opening into threaded bolt hole in the countertop. ONLY-Hand Tighten Bolt (A) to a depth of about 1/4" below countertop surface. Then secure the Sink with the under-mount clip (D) by Tightening wing nut (B) only




### STEP 6 - ATTACH BASE CABINET TO WALL

Place cabinet in desired location and determine where the wall studs are.

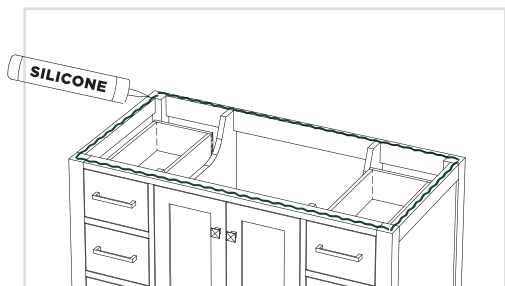


### STEP 7 - PREPARE BASE CABINET

Using a caulking gun, apply silicone around the top of the base cabinet.

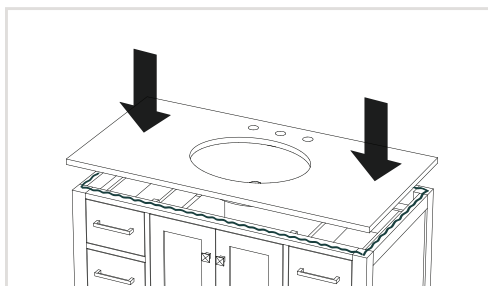

### STEP 8 - SET COUNTERTOP IN PLACE

Carefully place the countertop, with the sink attached, onto the cabinet and press down firmly. Wipe away any excess silicone immediately.

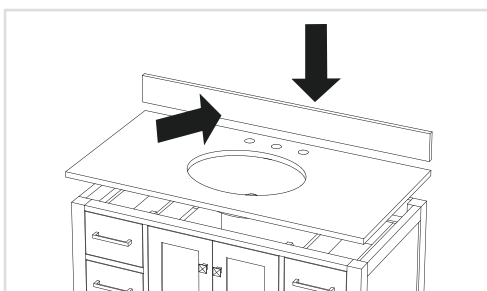

### STEP 9 - SET BACKSPLASH

After the vanity is in place, use a caulking gun to apply silicone to the back and bottom unfinished sides of the backsplash. Press firmly down and back to set in place. Remove any excess silicone.