





Bottom Full Bed

SKU CODE: WF286537-WF286538

This set is included 3 boxex if do not receive full 3 boxex please contact our customer service team

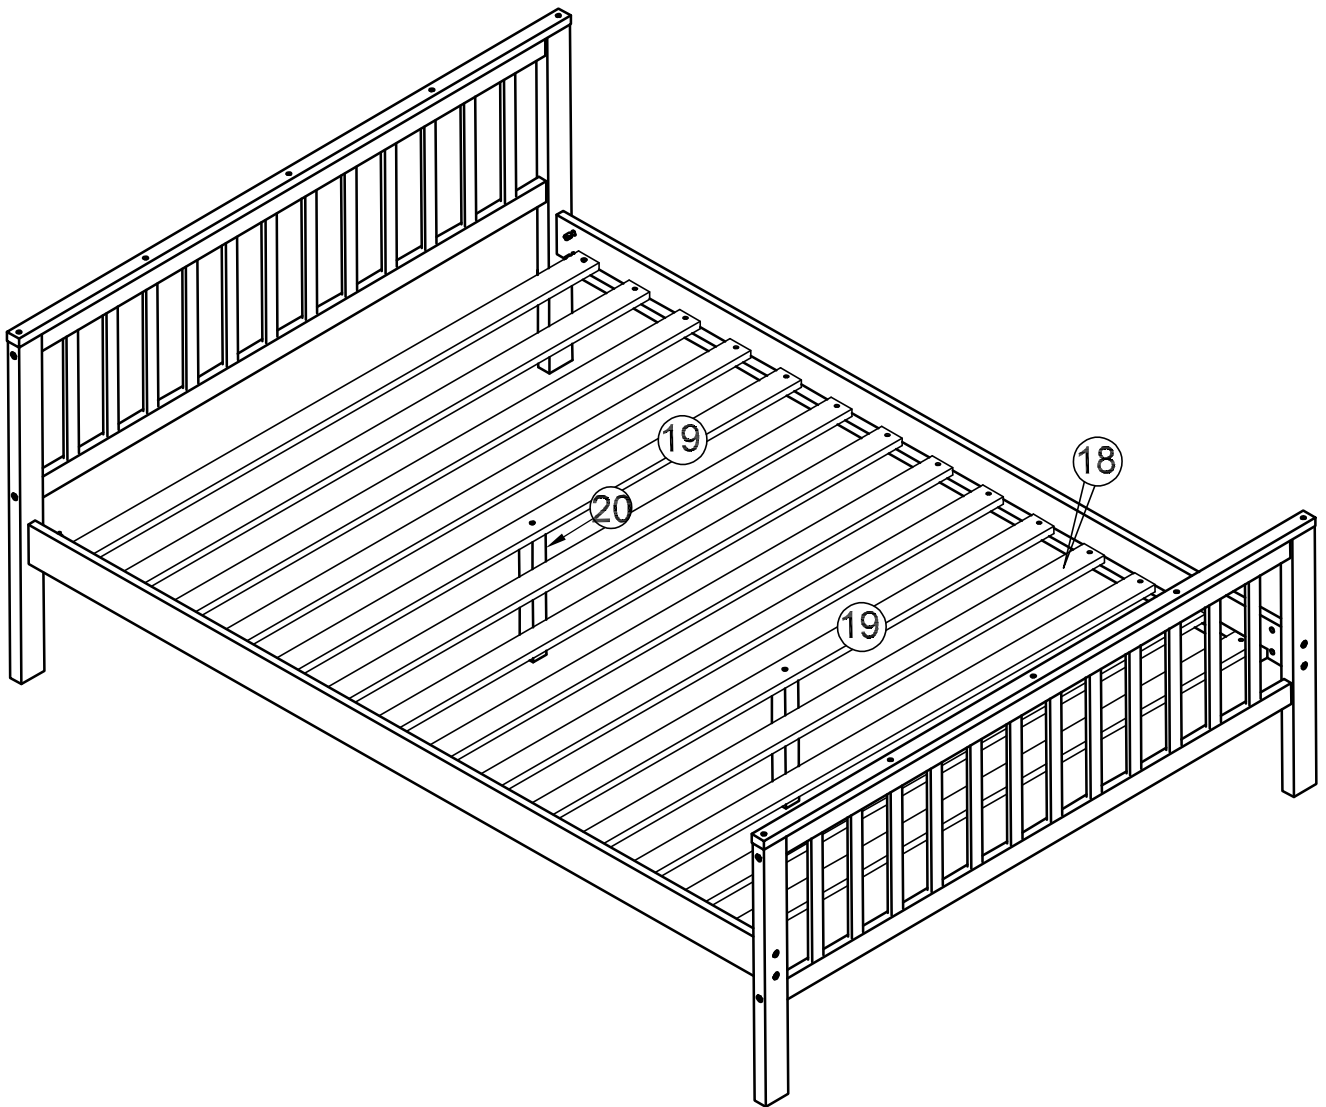


PART LIST-WF286537

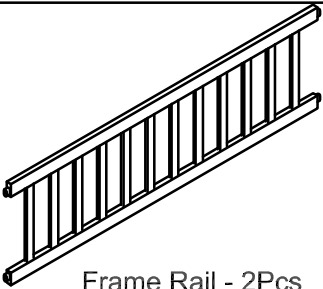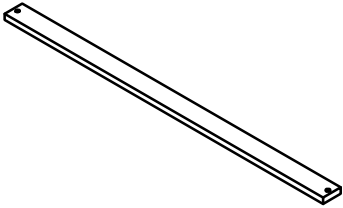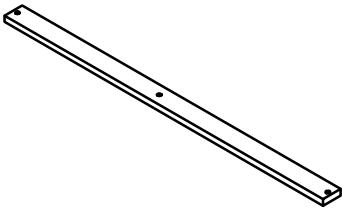12	 Frame Rail - 2Pcs	13	 Legs headboard (L) - 1pc	14	 Legs headboard (R) - 1pc
15	 Legs footboard (L) - 1pc	16	 Legs footboard (R) - 1pc	18	 Long Slats-12pcs
19	 Long Slats with mid hole - 2Pcs	20	 Center legs-2Pcs		


PART LIST-WF286538

11

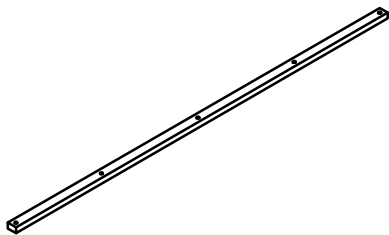






Top rail - 2Pcs

17

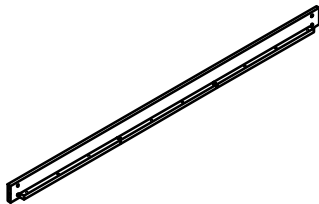


Side rails - 2Pcs


HARDWARE LIST

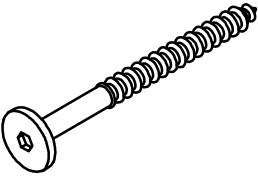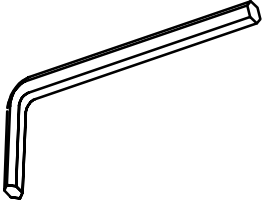A  M4x30 Wood screws-38pcs	B  Ø1/4 x 70 mm Hexagonal bolts catch Wood - 8Pcs	C  Ø1/4 x 80 mm Hex-Head bolts - 8Pcs
D  Ø10 x 40mm Dowles - 4Pcs	E  Ø1/4 x 13mm Cross nuts - 8Pcs	F  Allen Key - 1Pc
G  Ø1/4" x 35 mm Hex-Head bolts-2pcs	 Assembly Tools Required (Not Included)	

**PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE
POSITION WHEN YOU USE POWER TOOLS!**

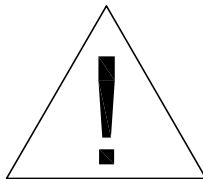


STEP 1

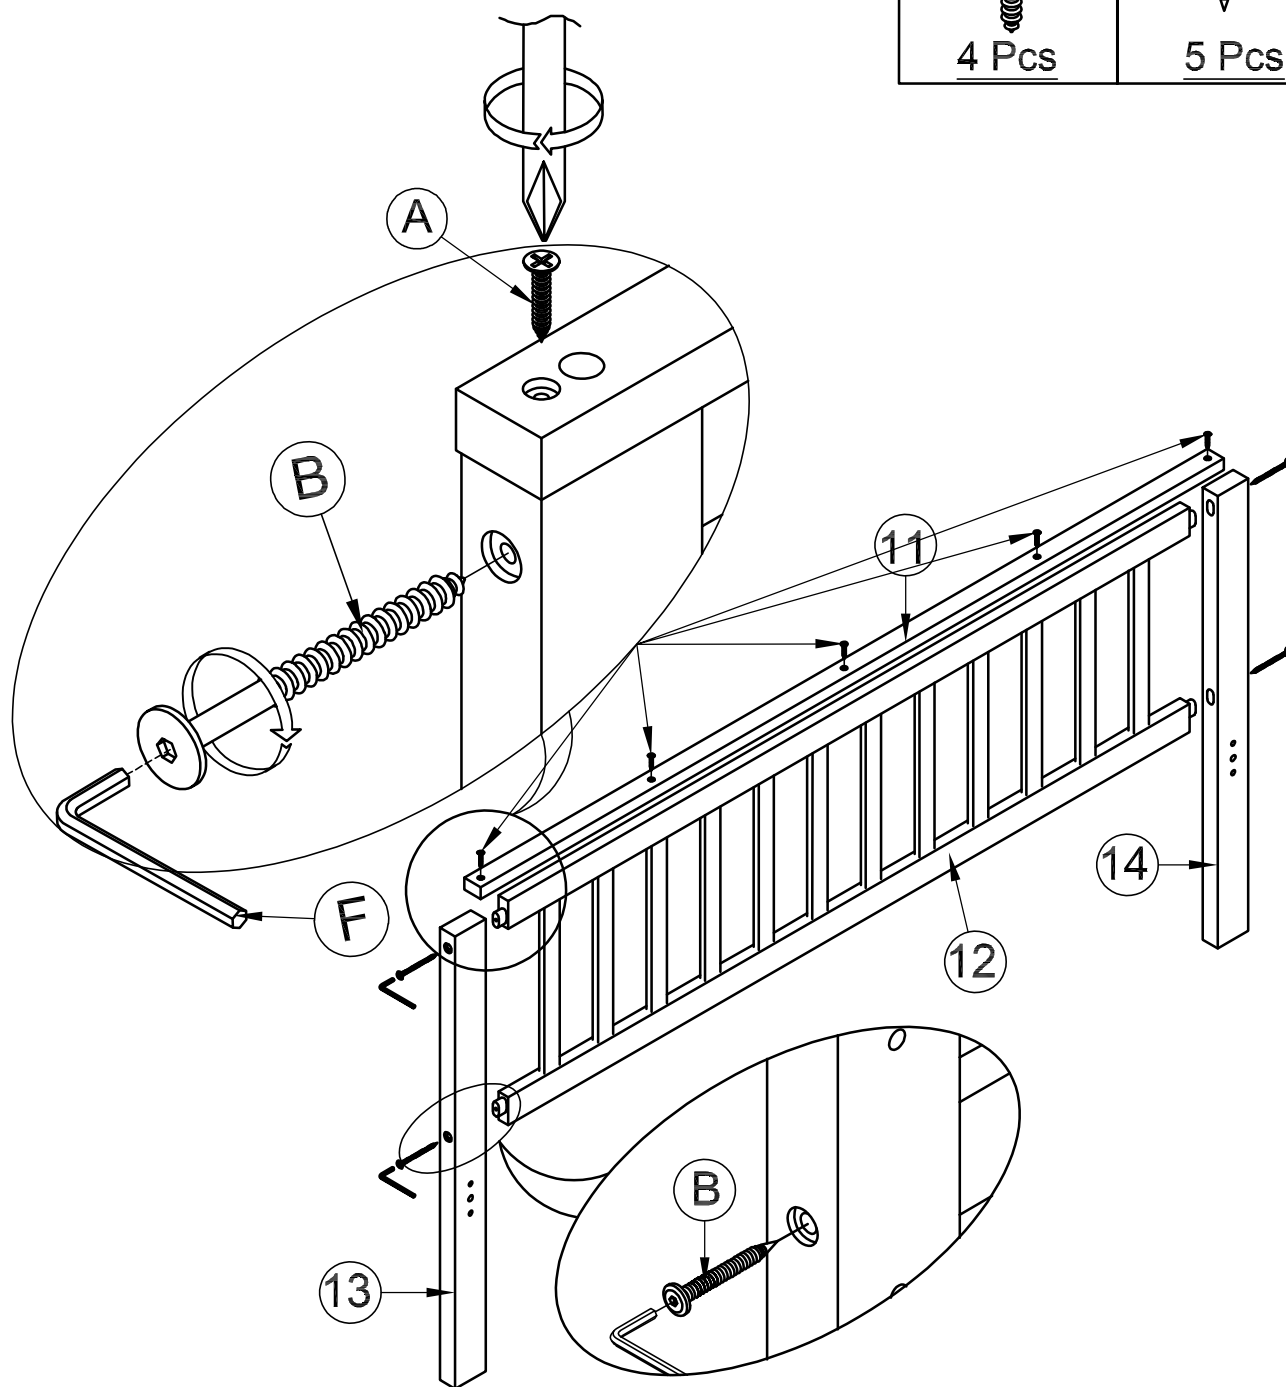

HEADBOARD


STEP 2

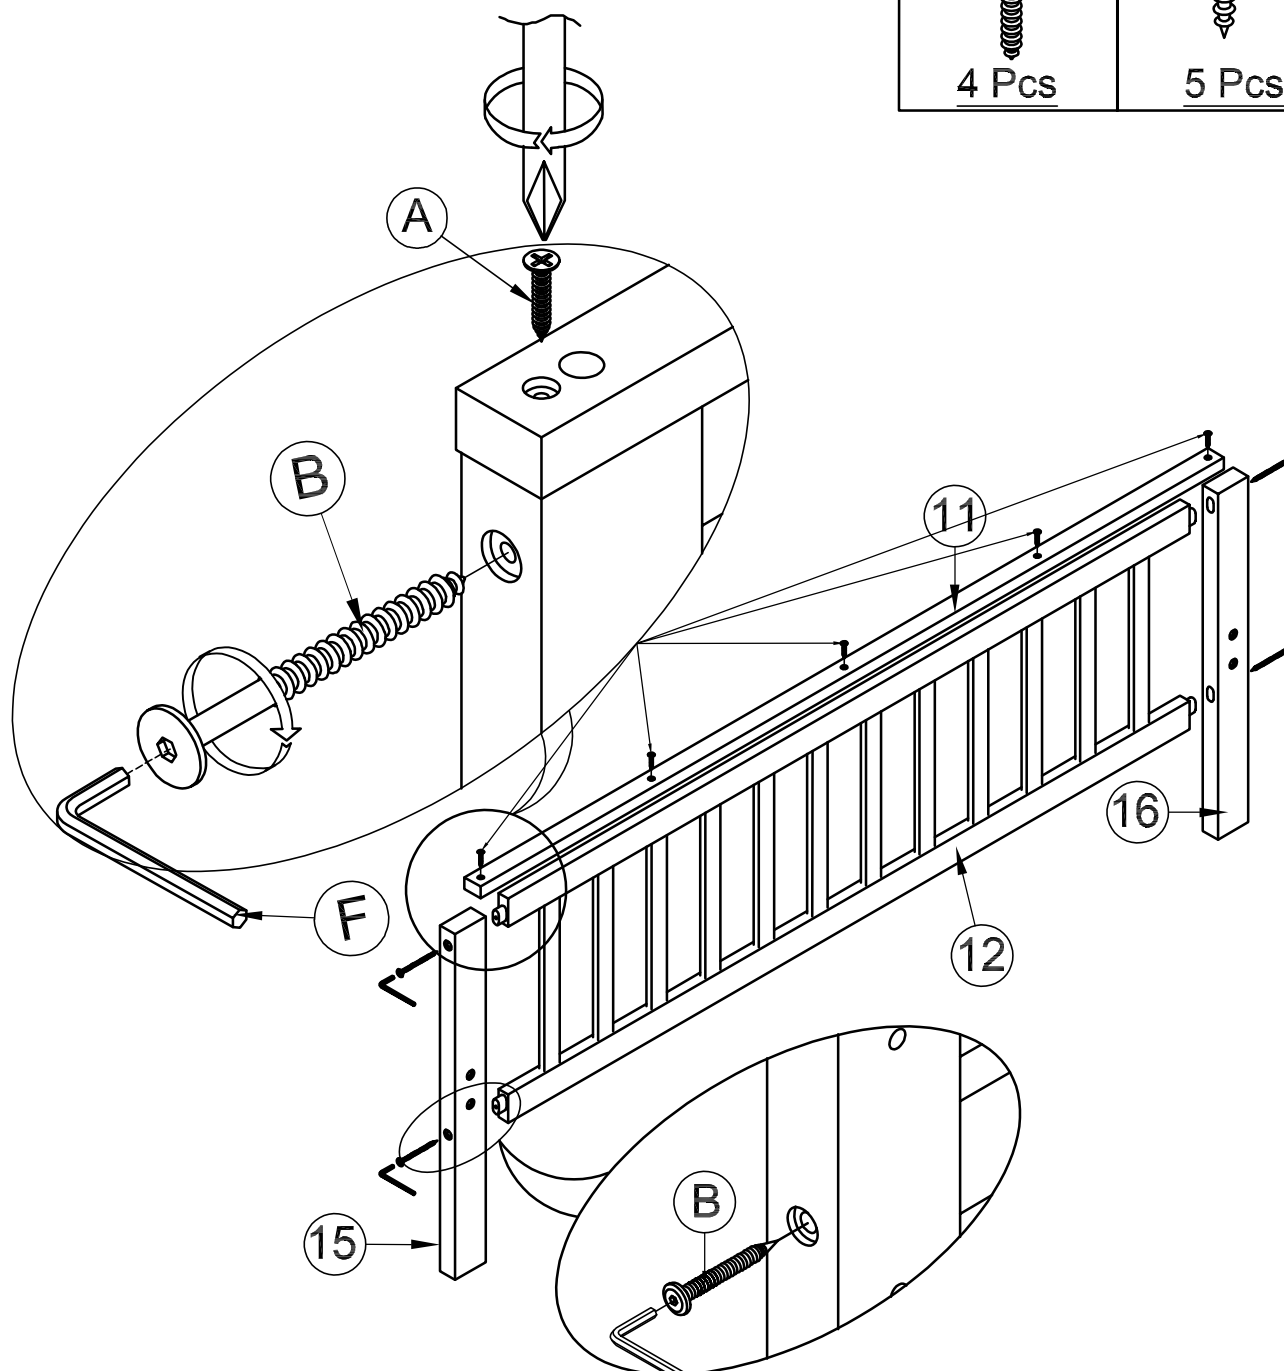


FOOTBOARD

STEP 3


C		E		D	
8pcs		8pcs		4pcs	

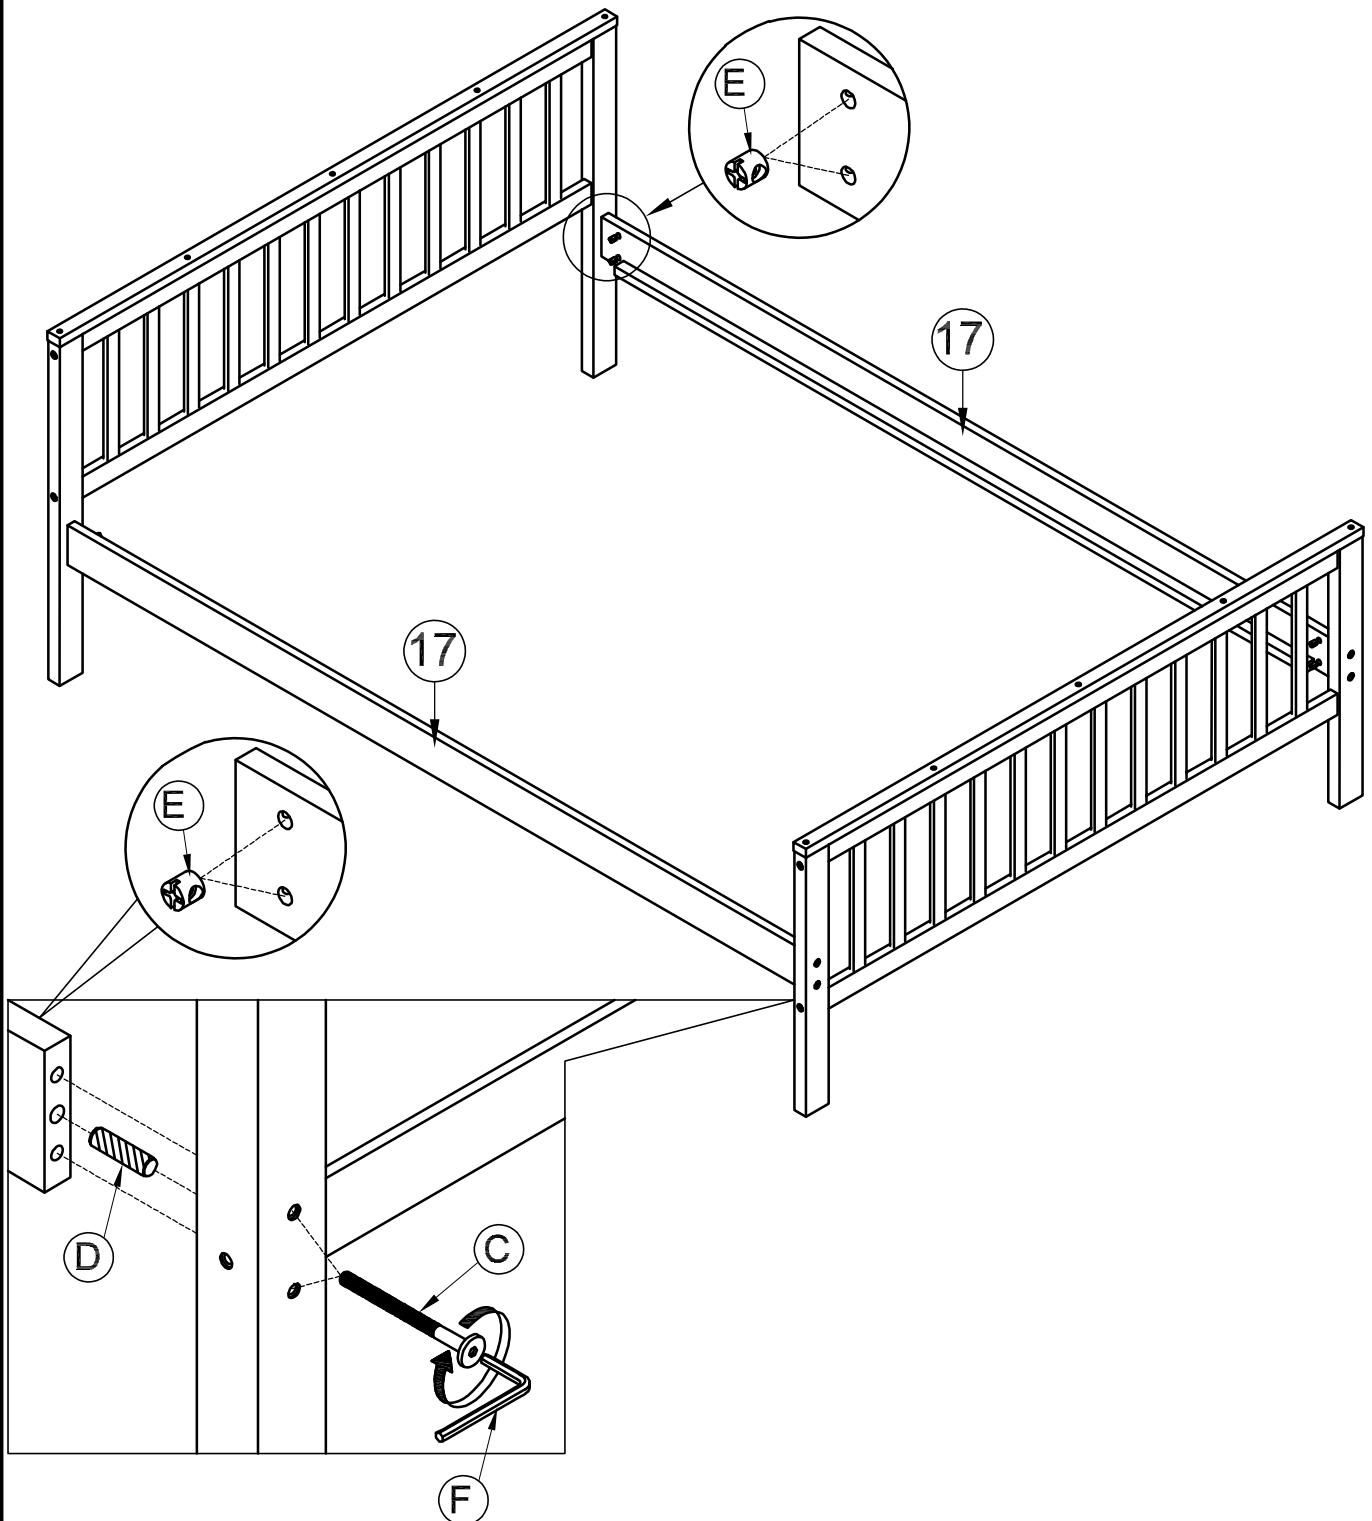

STEP 4

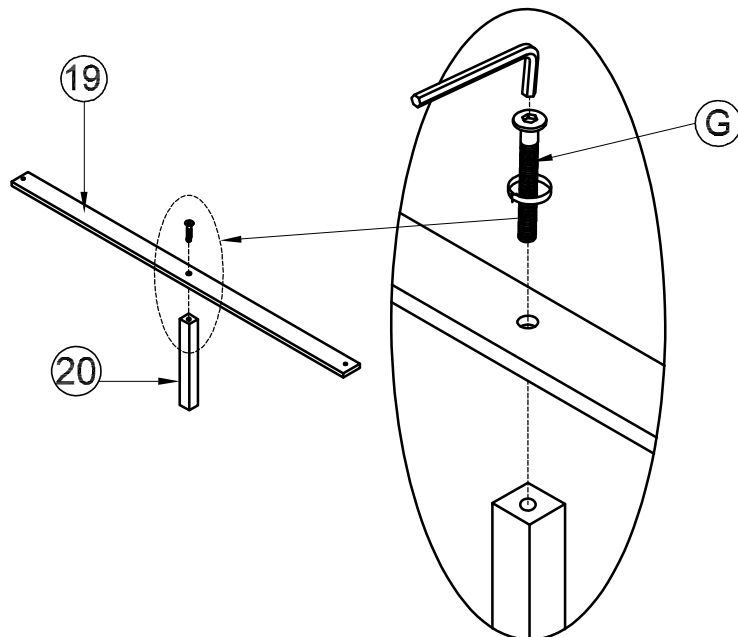


G




2 pcs

STEP 5

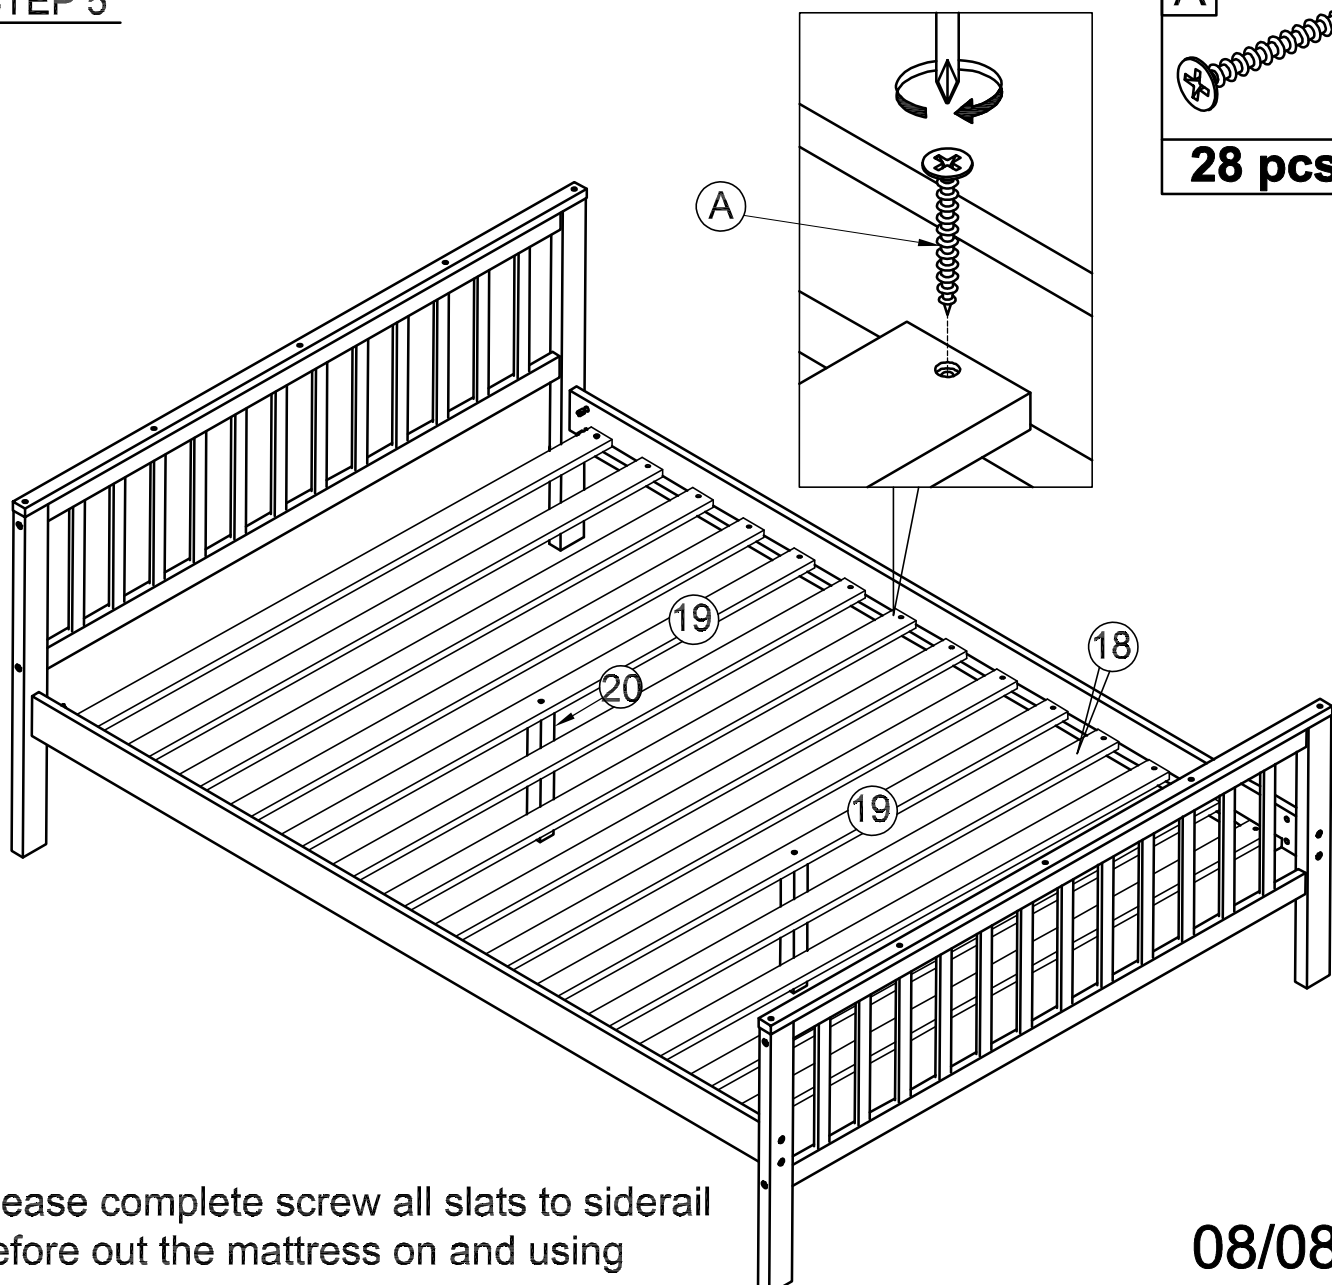

A



28 pcs

Please complete screw all slats to siderail
before out the mattress on and using

08/08