

TIDES

by


CRAFT + MAIN™

NEO-ANGLE SHOWER DOOR

COPY THE MODEL NUMBER FOR YOUR RECORDS HERE #

READ THE INSTRUCTIONS CAREFULLY

Familiarize yourself with all the parts as shown in the exploded view. The exploded view will also provide a helpful reference when relating to the location of the various parts and how they are mounted.

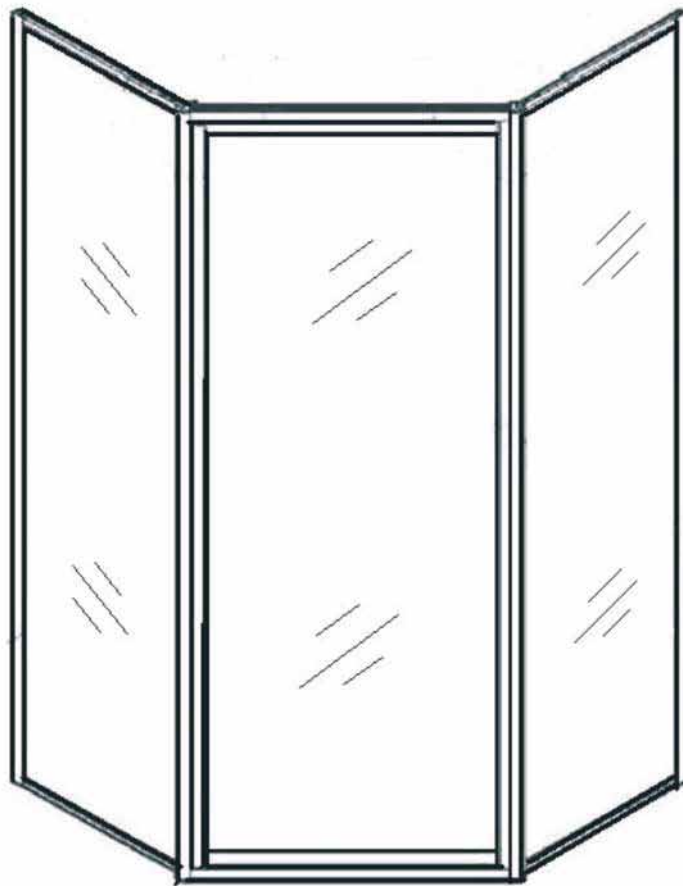

Please visit us on YouTube and view our shower door installation videos.
One may be available for your installation. www.youtube.com/c/CRAFTANDMAIN



Toll Free Customer Assistance 1-888-620-3667 US Customers

Monday-Friday, 7:30 a.m. To 5:00 p.m. CST

1-888-256-7551 Canada Customers

6241 Northwind Parkway, Hobart, IN USA 46342
www.ForemostBath.com

5970 Chedworth Way, Unit B, Mississauga, Ontario, Canada L5R 4G5
www.ForemostCanada.com




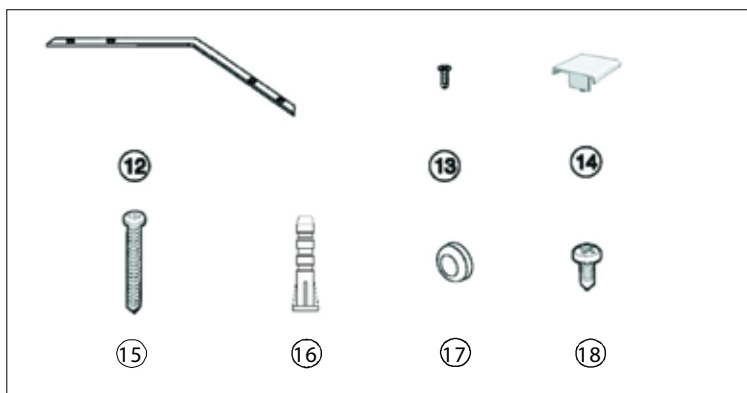
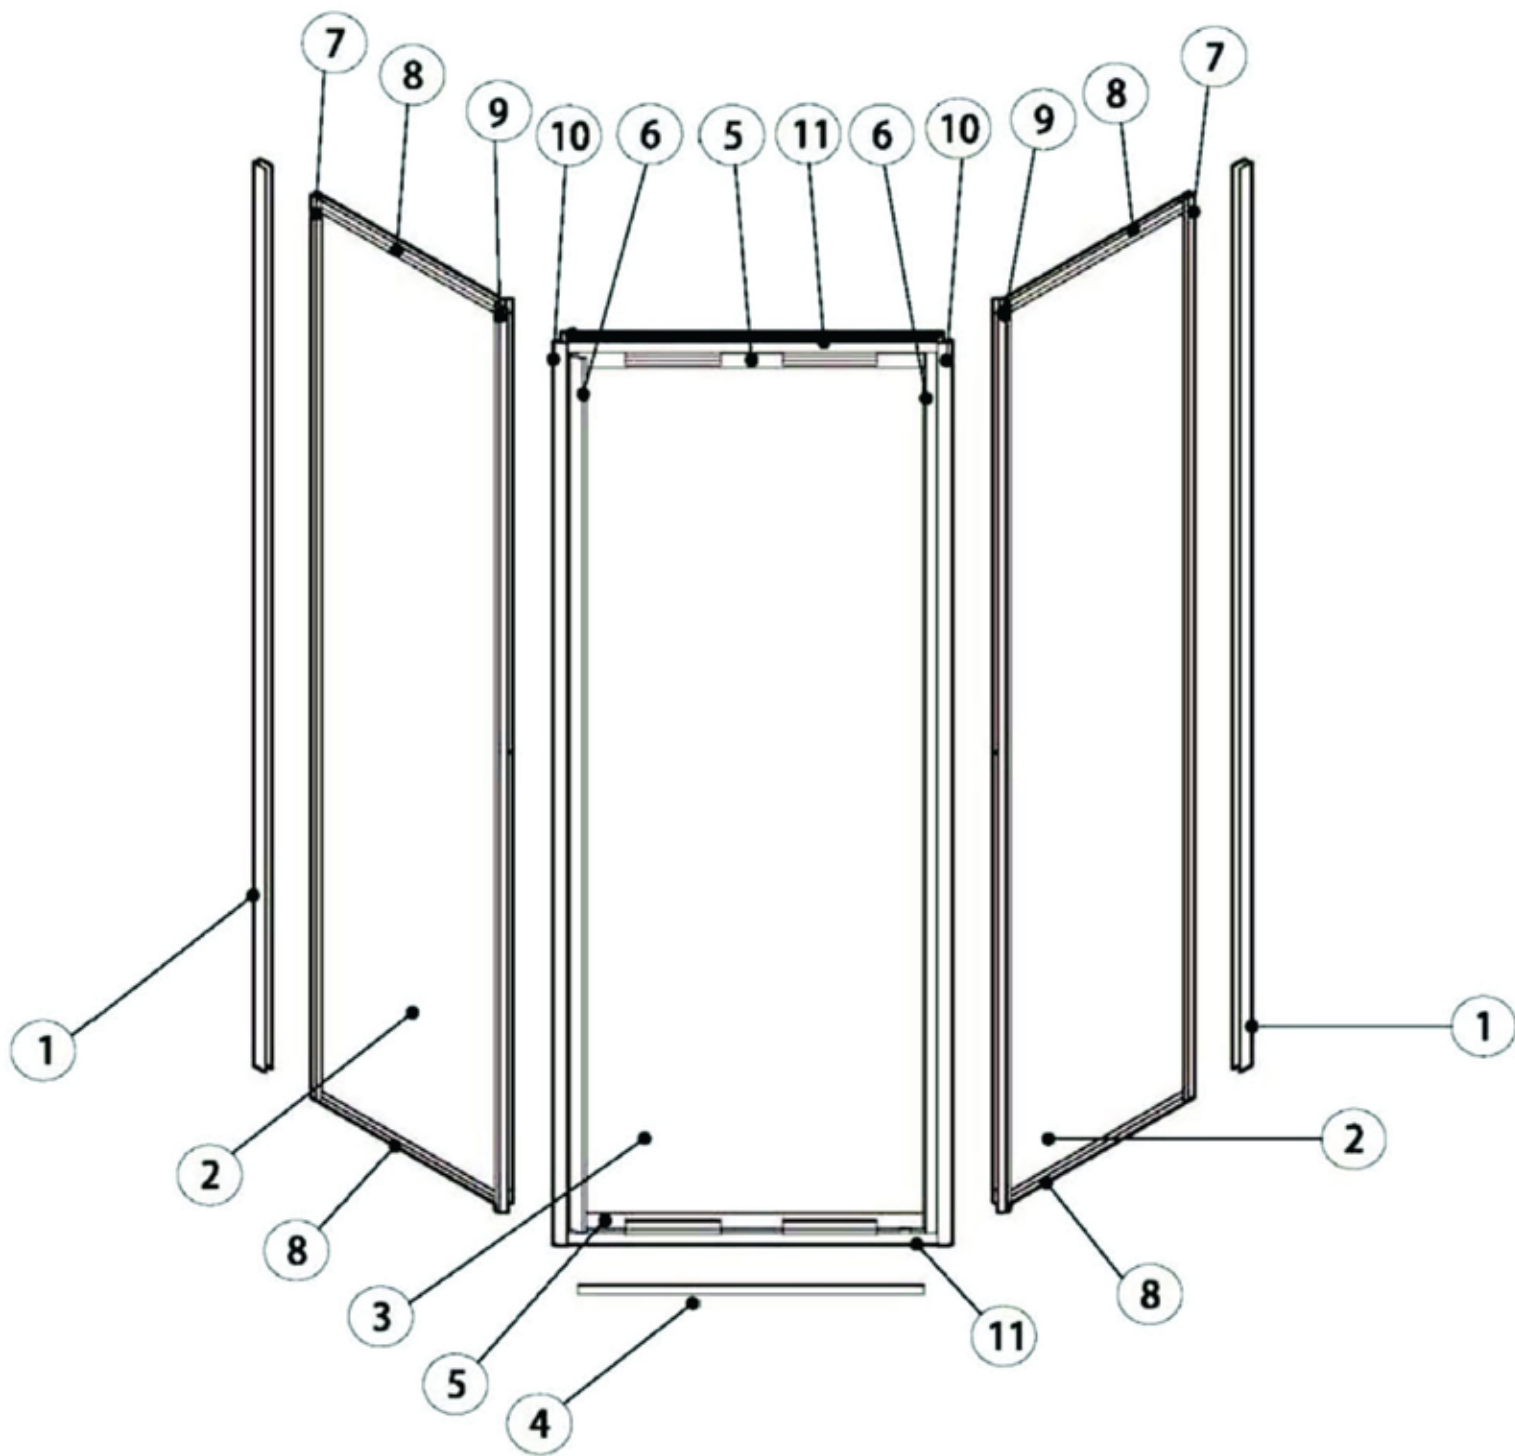

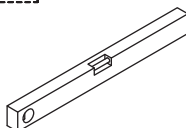







PARTS LIST

ITEM	PARTS LIST	QTY
1	WALL JAMB	2
2	FIXED PANEL	2
3	DOOR PANEL	1
4	SPLASH GUARD	1
5	FRAMED VERTICAL DOOR PANEL	2
6	FRAMED HORIZONTAL FIXED PANEL	2
7	FRAMED VERTICAL FIXED PANEL	2
8	FRAMED HORIZONTAL FIXED PANEL	4
9	FRAMED CONNECTOR FIXED PANEL	2
10	FRAMED VERTICAL SUPERIER FOR DOOR PANEL	2
11	FRAMED HORIZONTAL SUPERIER FOR DOOR PANEL	2
12	ANGLE DE RENFORT	2
13	SCREW 4x12	8
14	WALL JAMB CAP	4
15	SCREW 4 x 38	6
16	WALL PLUG	6
17	SCREW CAP	12
18	SCREW 4 x 15	6

⚠ WARNING: Safety glasses should always be worn when working with tempered glass.

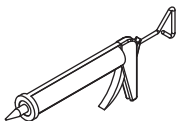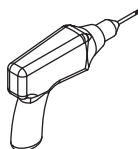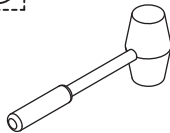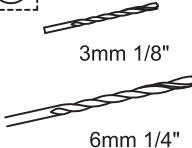
RECOMMENDED TOOLS

① 	② 	③ 	④ 	⑤ 	
SILICONE	DRILL	TAPE MEASURE	RUBBER MALLET	DRILL BIT	KNIFE
⑥ 	⑦ 	⑧ 	⑨ 	⑩ 	
LEVEL	PENCIL	SCREW DRIVERS	UTILITY KNIFE	SAFETY GLASSES	CUTTING NIPPERS

CHOOSE WHETHER YOU ARE INSTALLING LEFT OR RIGHT SHOWER DOOR


Determine which assembly configuration you need to follow based on the location of the shower head as viewed from the outside of the shower.

INSTALLATION PROCEDURE / STEP 1

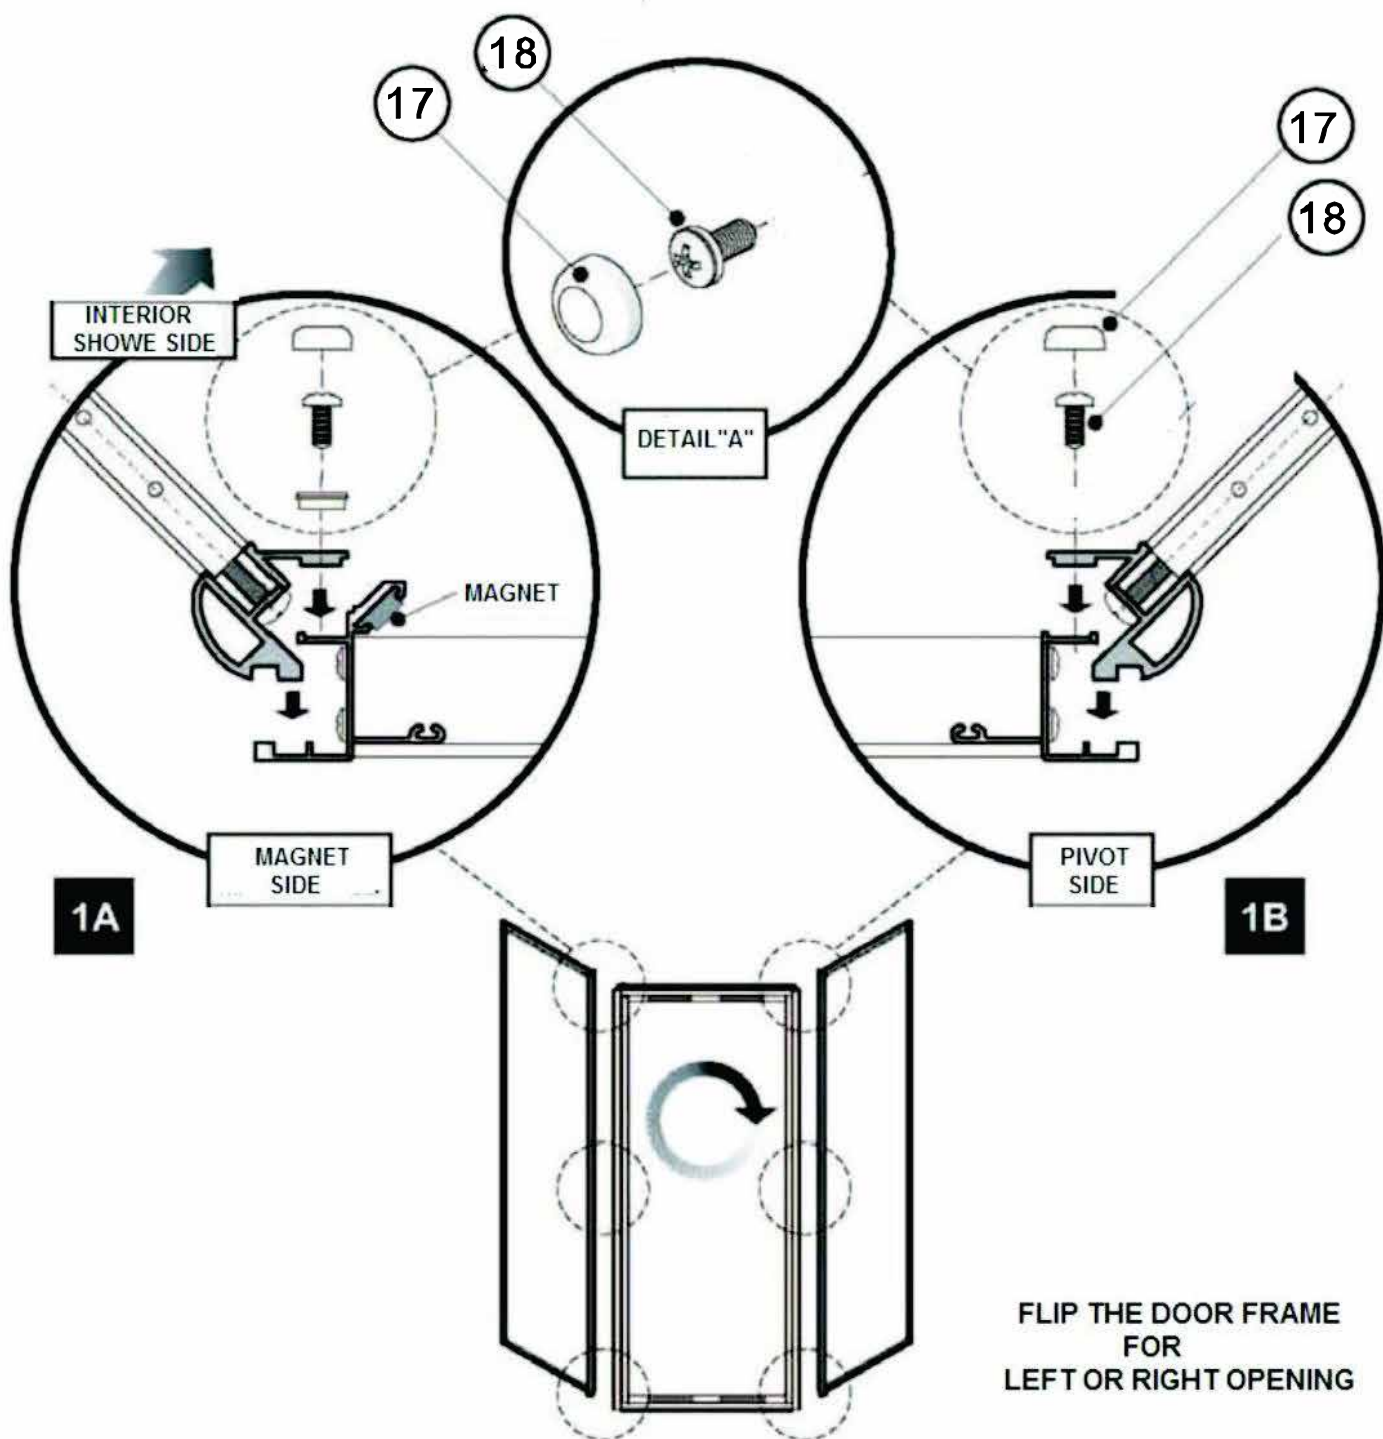


INSTALLATION PROCEDURE / STEP 2

- 2** Insert Angle Bracket(12) into top frame of the Side Panel(8) attached to the top Door Frame(11) using Screw(13).

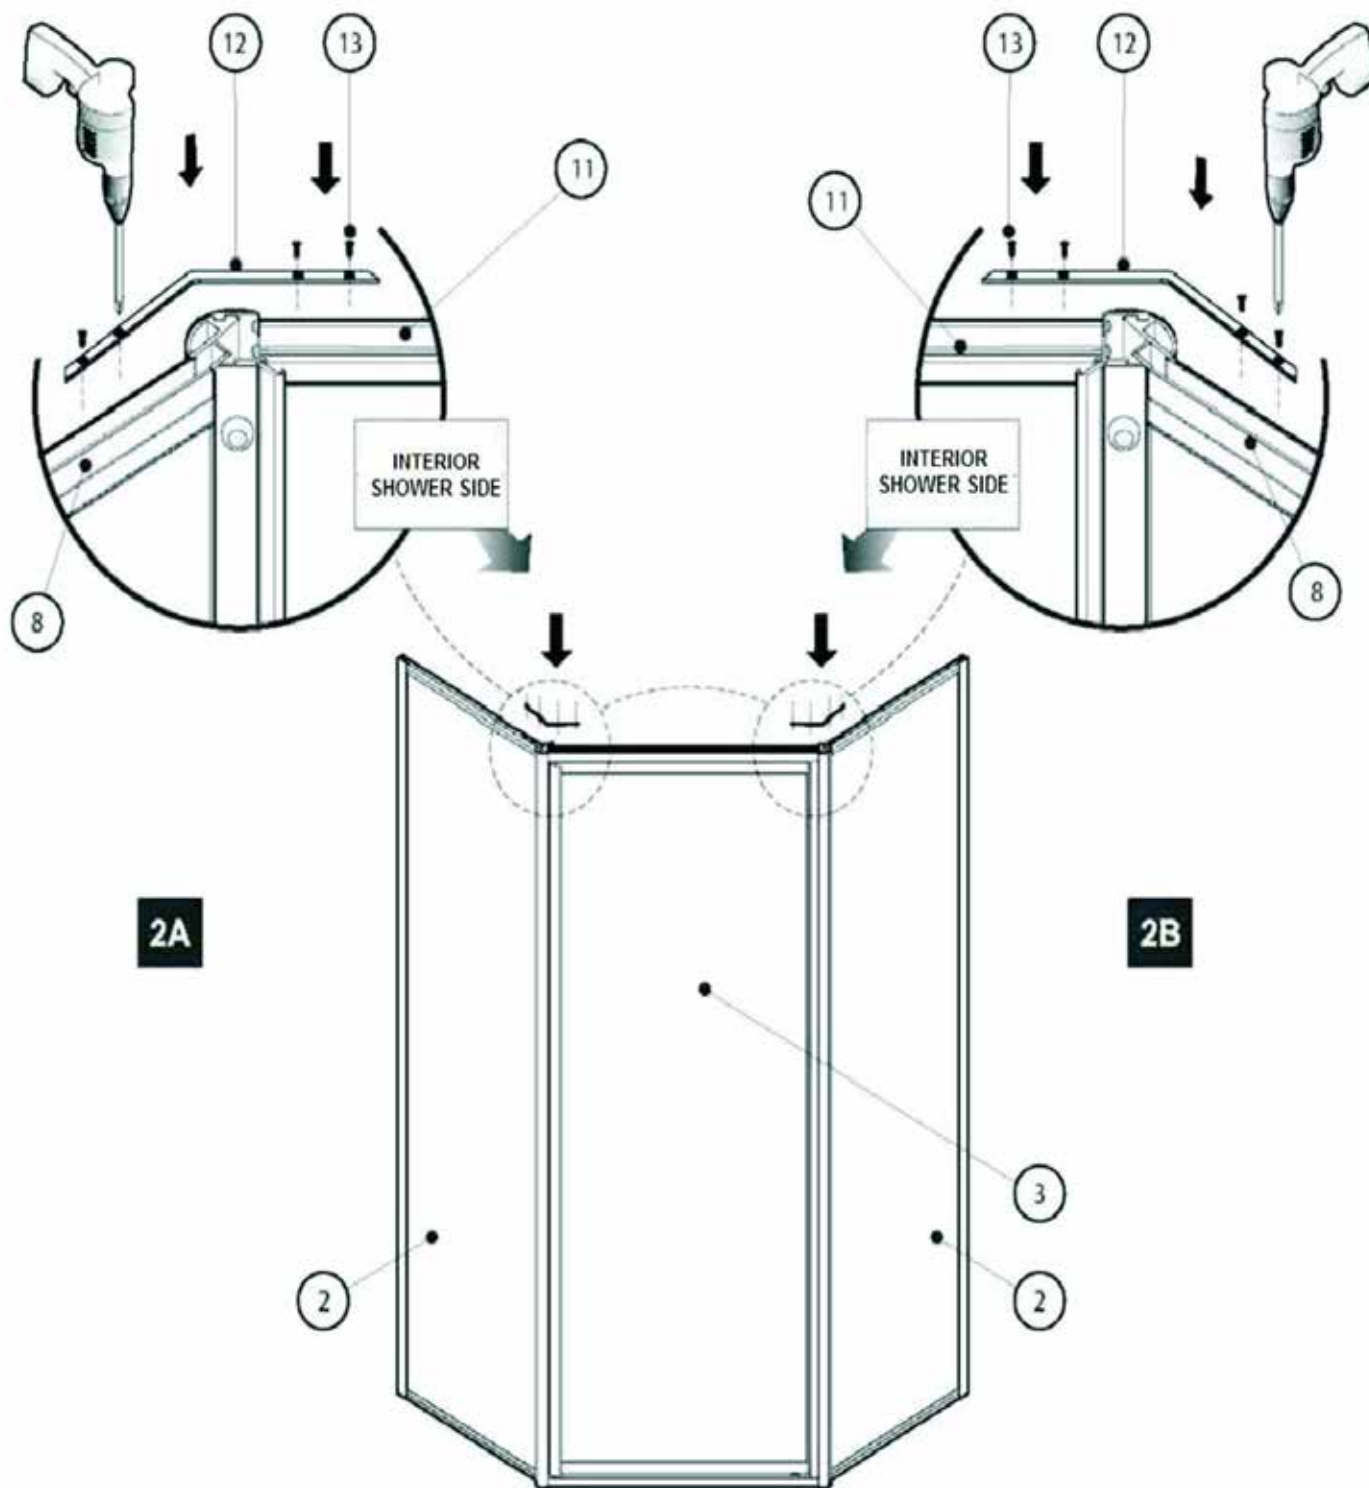


3 WALL JAMBS POSITIONING

3A. Insert wall jambs(#1)into assembly.

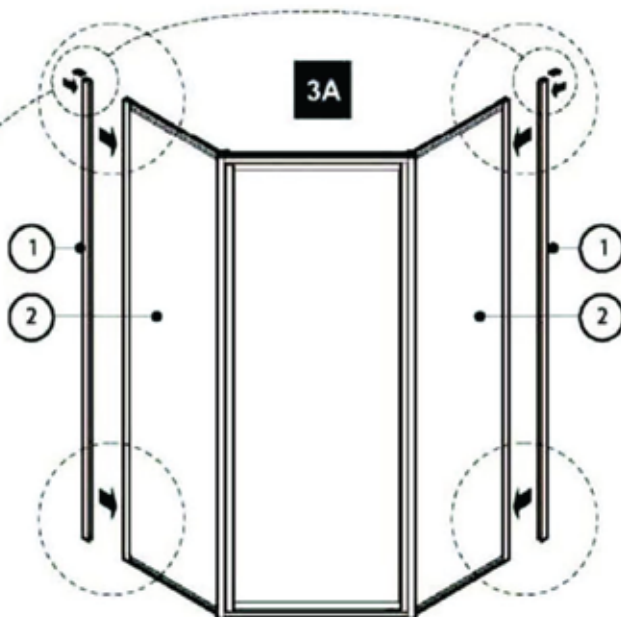

REPEAT ON BOTH SIDES

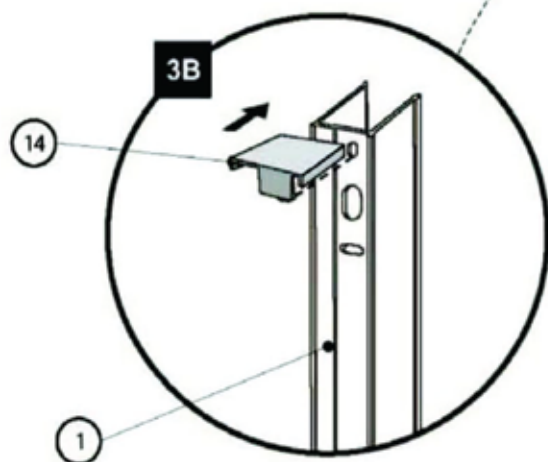


3B. Insert wall jambs cap(#14)

3C. Positioning and center the frame together with wall jambs(#1) onto threshold of shower base.

3D. Adjust and level the assembly.
Trace outer edge of wall jambs(#1).


3E. Remove the assembly from base temporarily.

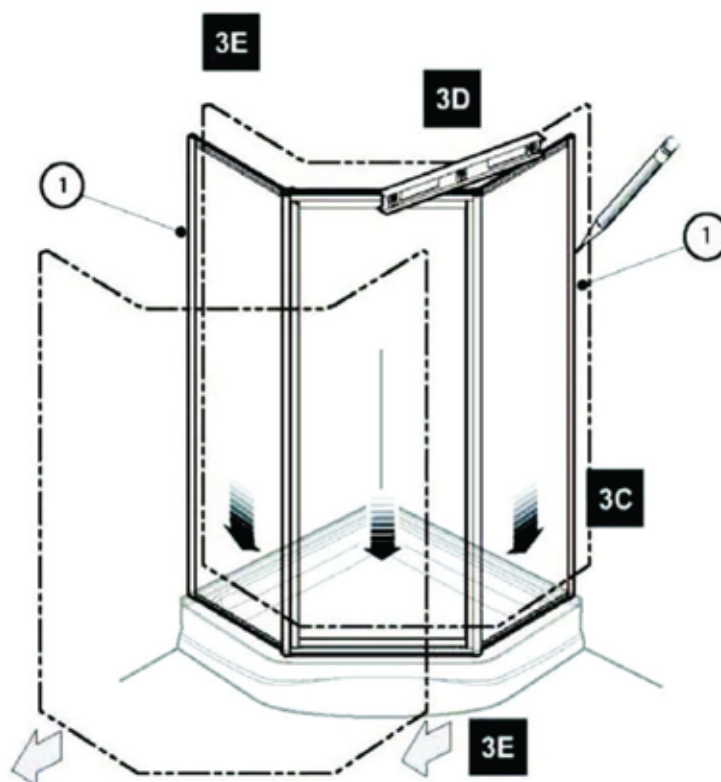

4 INSTALLING WALL JAMBS

4A. Realign wall jamb. Mark drilling location.
Remove the wall jamb temporarily (#1)

4B. With a 1/4" drill bit, drill 4 holes into the wall using the marks as a guide

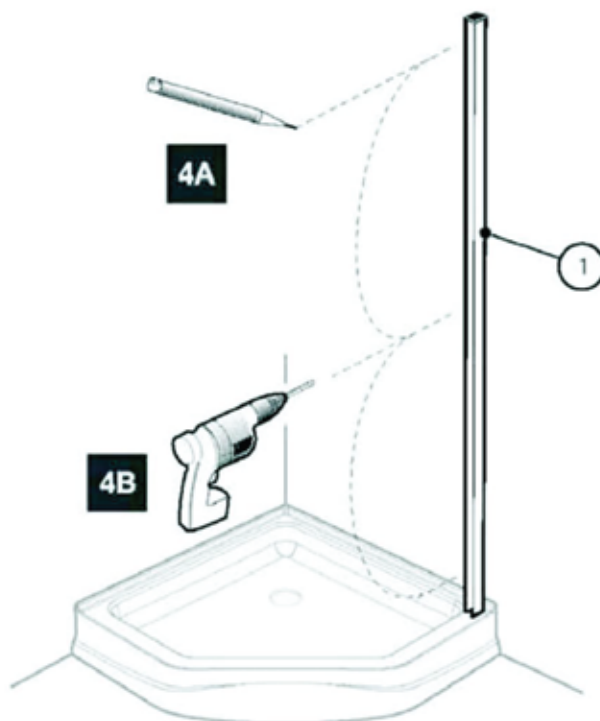

REPEAT ON BOTH SIDES

4C. Insert 6 wall plugs(#16) and put in each a drop of silicone.

4D. Fasten wall jamb with screw 4x38mm (#15)


FOR ACRYLIC & FIBERGLASS SHOWER ENCLOSURES

Using a 1/8 inch drill bit, drill a hole about 1-1/2 inch deep at each of the previously marked locations.

WARNING: Do not use wall anchors with fiberglass or acrylic shower enclosures.


FOR TILED SHOWER ENCLOSURES

Using a 1/4 inch masonry drill bit, drill a hole about 1-1/2 inch deep at each of the previously marked locations. Insert wall plugs into each of the drilled holes.

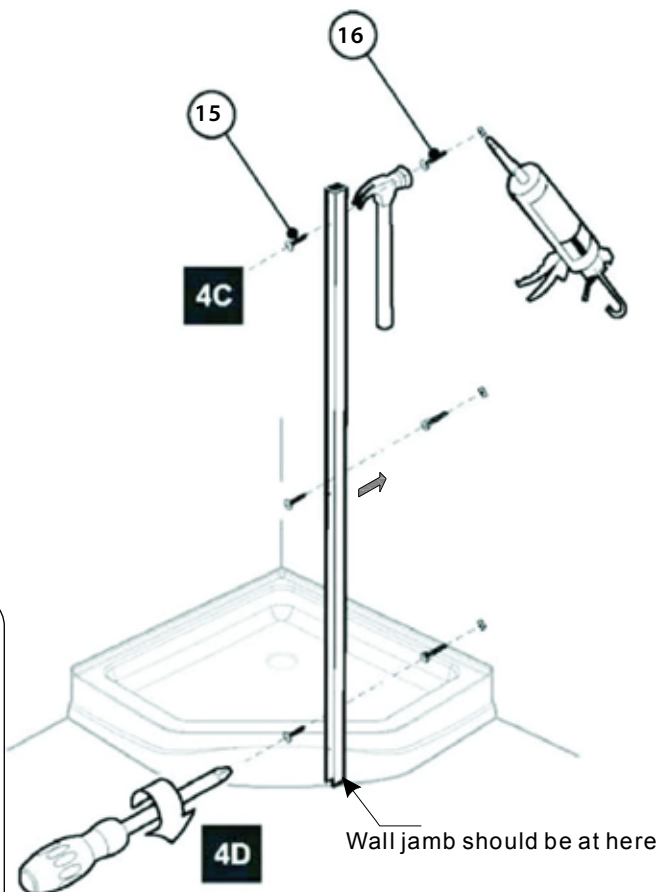


5 INSTALL THE SHOWER DOOR UNIT

5A. Insert one side of assembly into wall-jamb(#1) as shown.

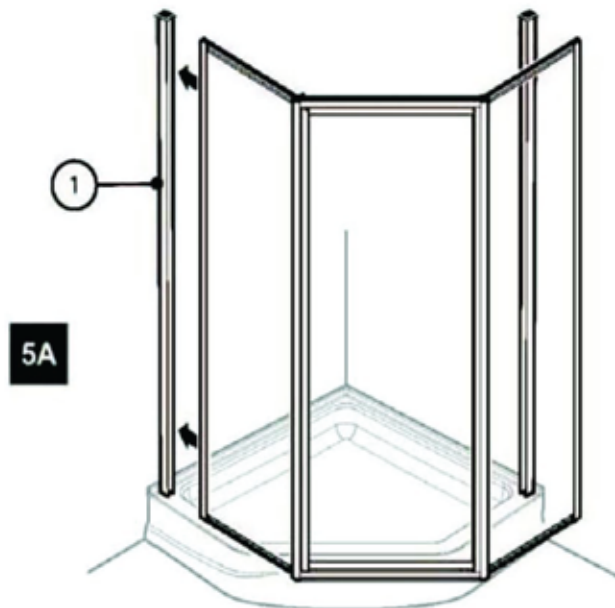





5B-5C. Engage the other side of assembly into wall jamb(#1)

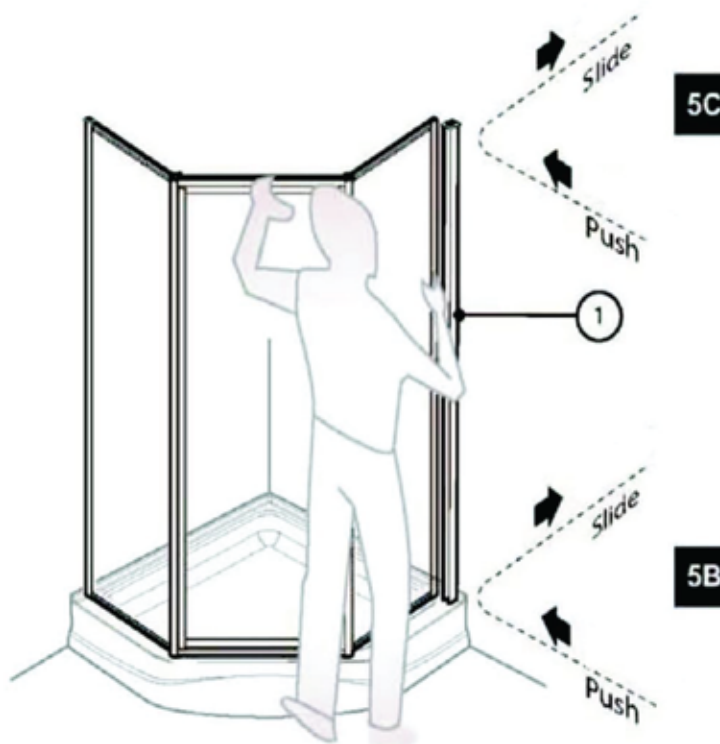

6 SHOWER DOOR ADJUSTMENT

6A. Adjust assembly on the base.


6B. Insert shower assembly into wall-jamb(#1)
by securing with screws(#16).

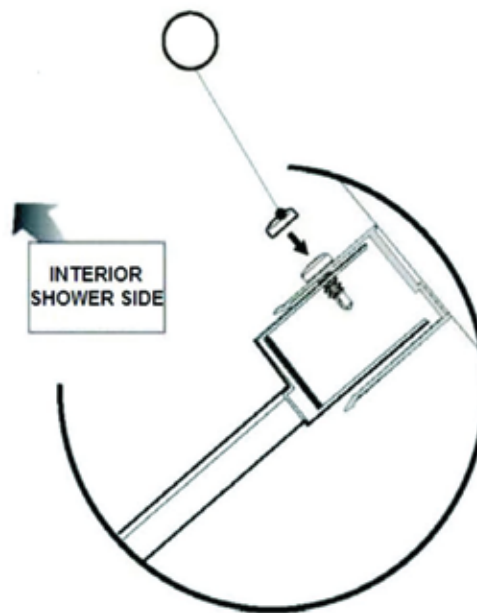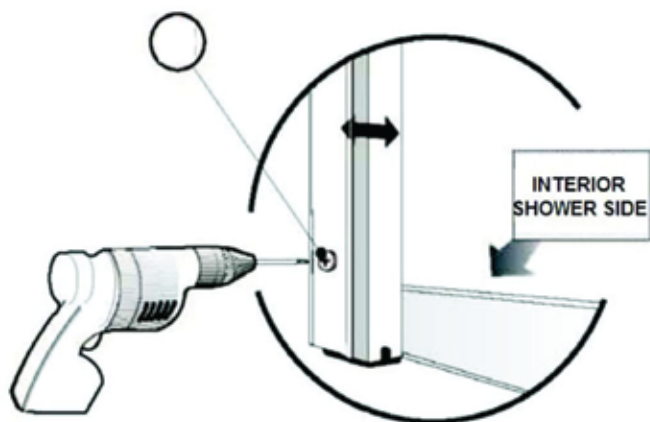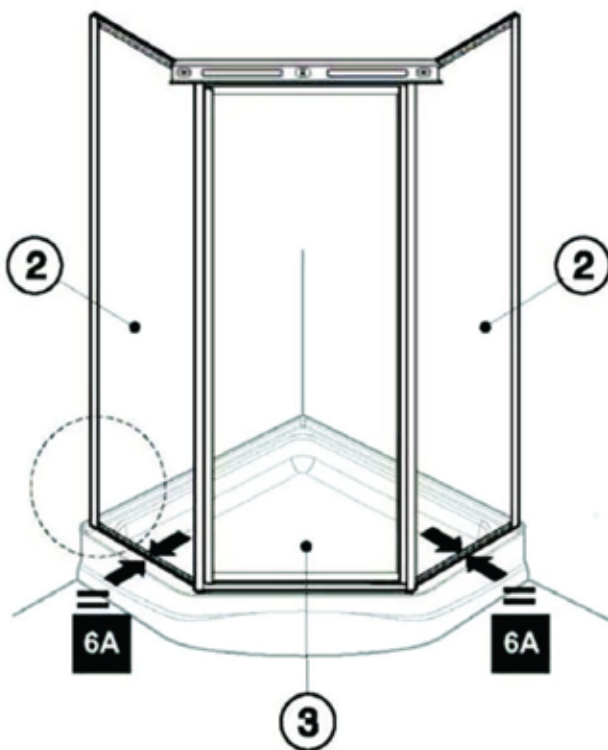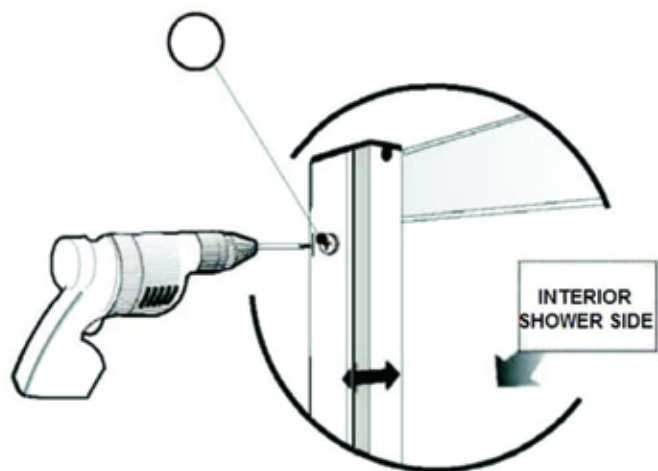

7 SHOWER DOOR ADJUSTMENT


7A. If it is necessary adjust the door panel, with a phillips head screw driver.

7B. Slide the splash guard(#4) into the door panel.

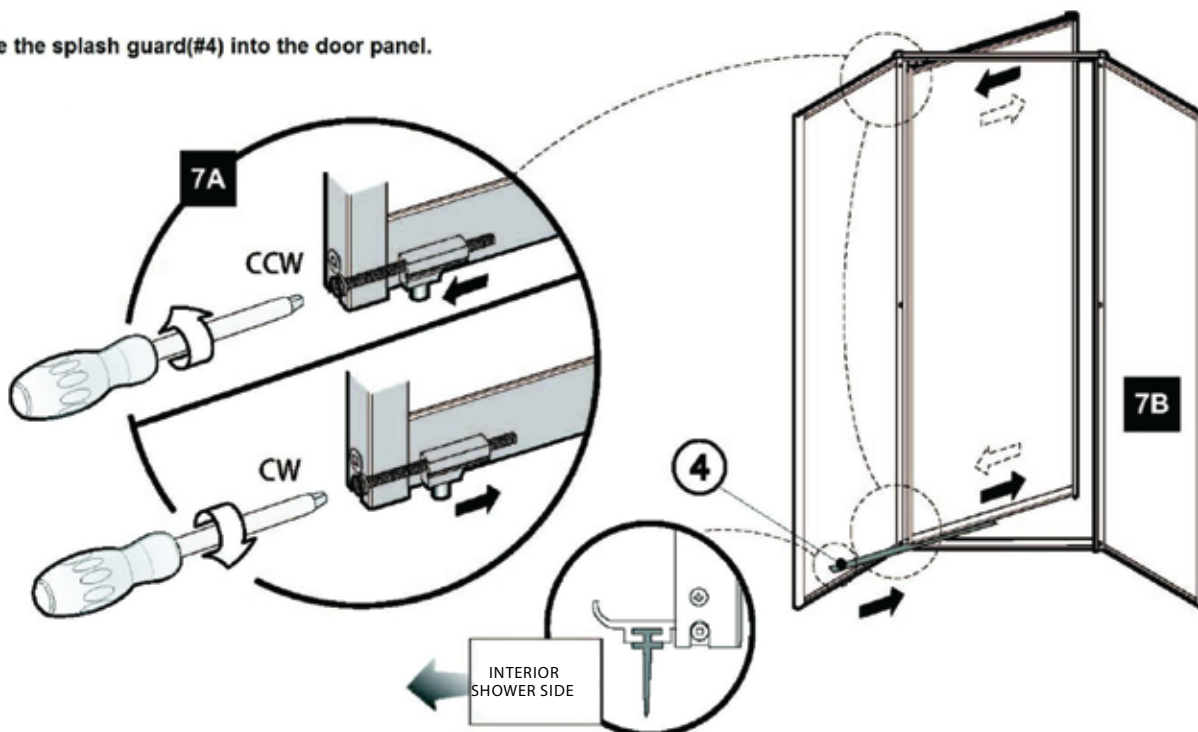

8 SILICON SEAL THE SHOWER.

8A. Silicone exterior the bottom of the fixed panel(#8) and frame (#11) and along the wall jambs(#1).

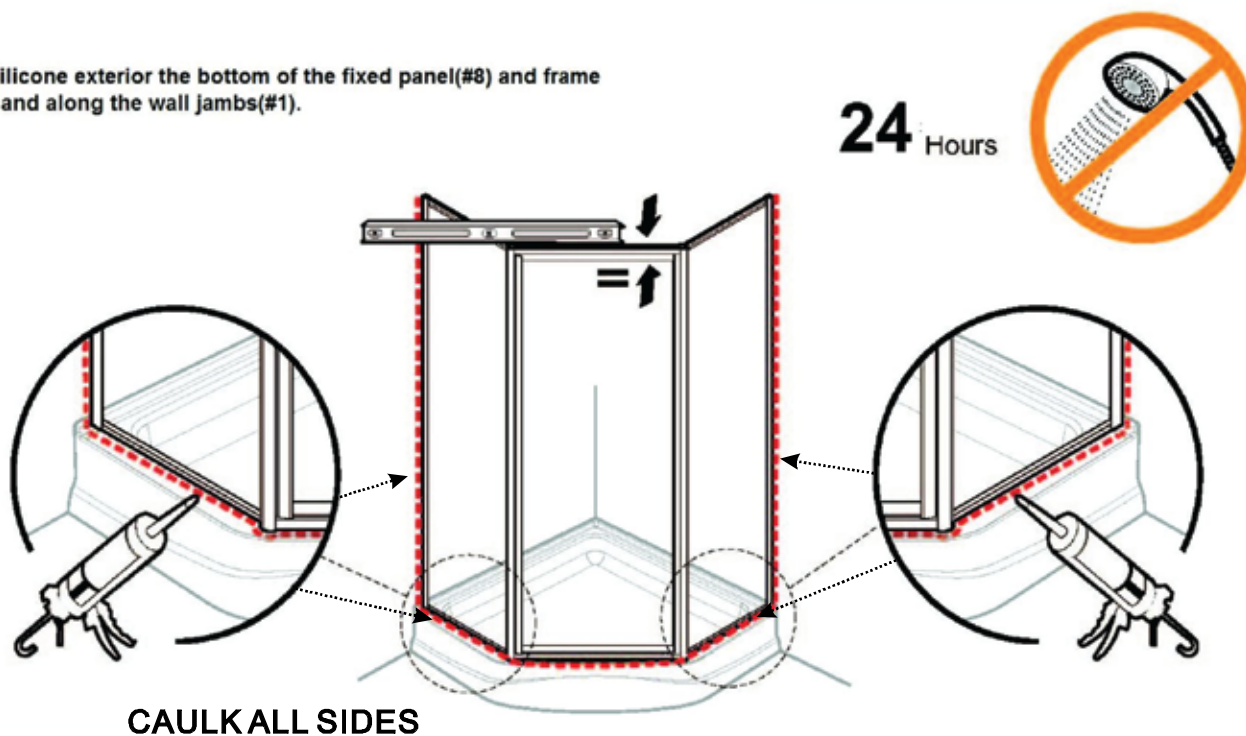

CRAFT + MAIN™

ATTENTION CONSUMER:

IMPORTANT SHOWER ENCLOSURE WARRANTY INFORMATION

PLEASE DO NOT DISCARD

Thank you for your purchase of a shower door
from FGI Industries, Ltd.

In order to be eligible for product warranty, please register
your door on our website within two (2) weeks of installation.

Go to:

<https://craftandmain.com/warranty/>
and follow the instructions.

For any questions or comments
about your new shower door,
please contact our Customer Service at:

US CUSTOMERS:

1-888-620-3667

CustomerService.US@FGI-Industries.com

6241 Northwind Parkway
Hobart, IN USA 46342

CANADA CUSTOMERS:

1-888-256-7551

customerservice.cdn@FGI-Industries.com

5970 Chedworth Way, Unit B
Mississauga, Ontario, Canada L5R 4G5