




GROMMET TOP DESIGN

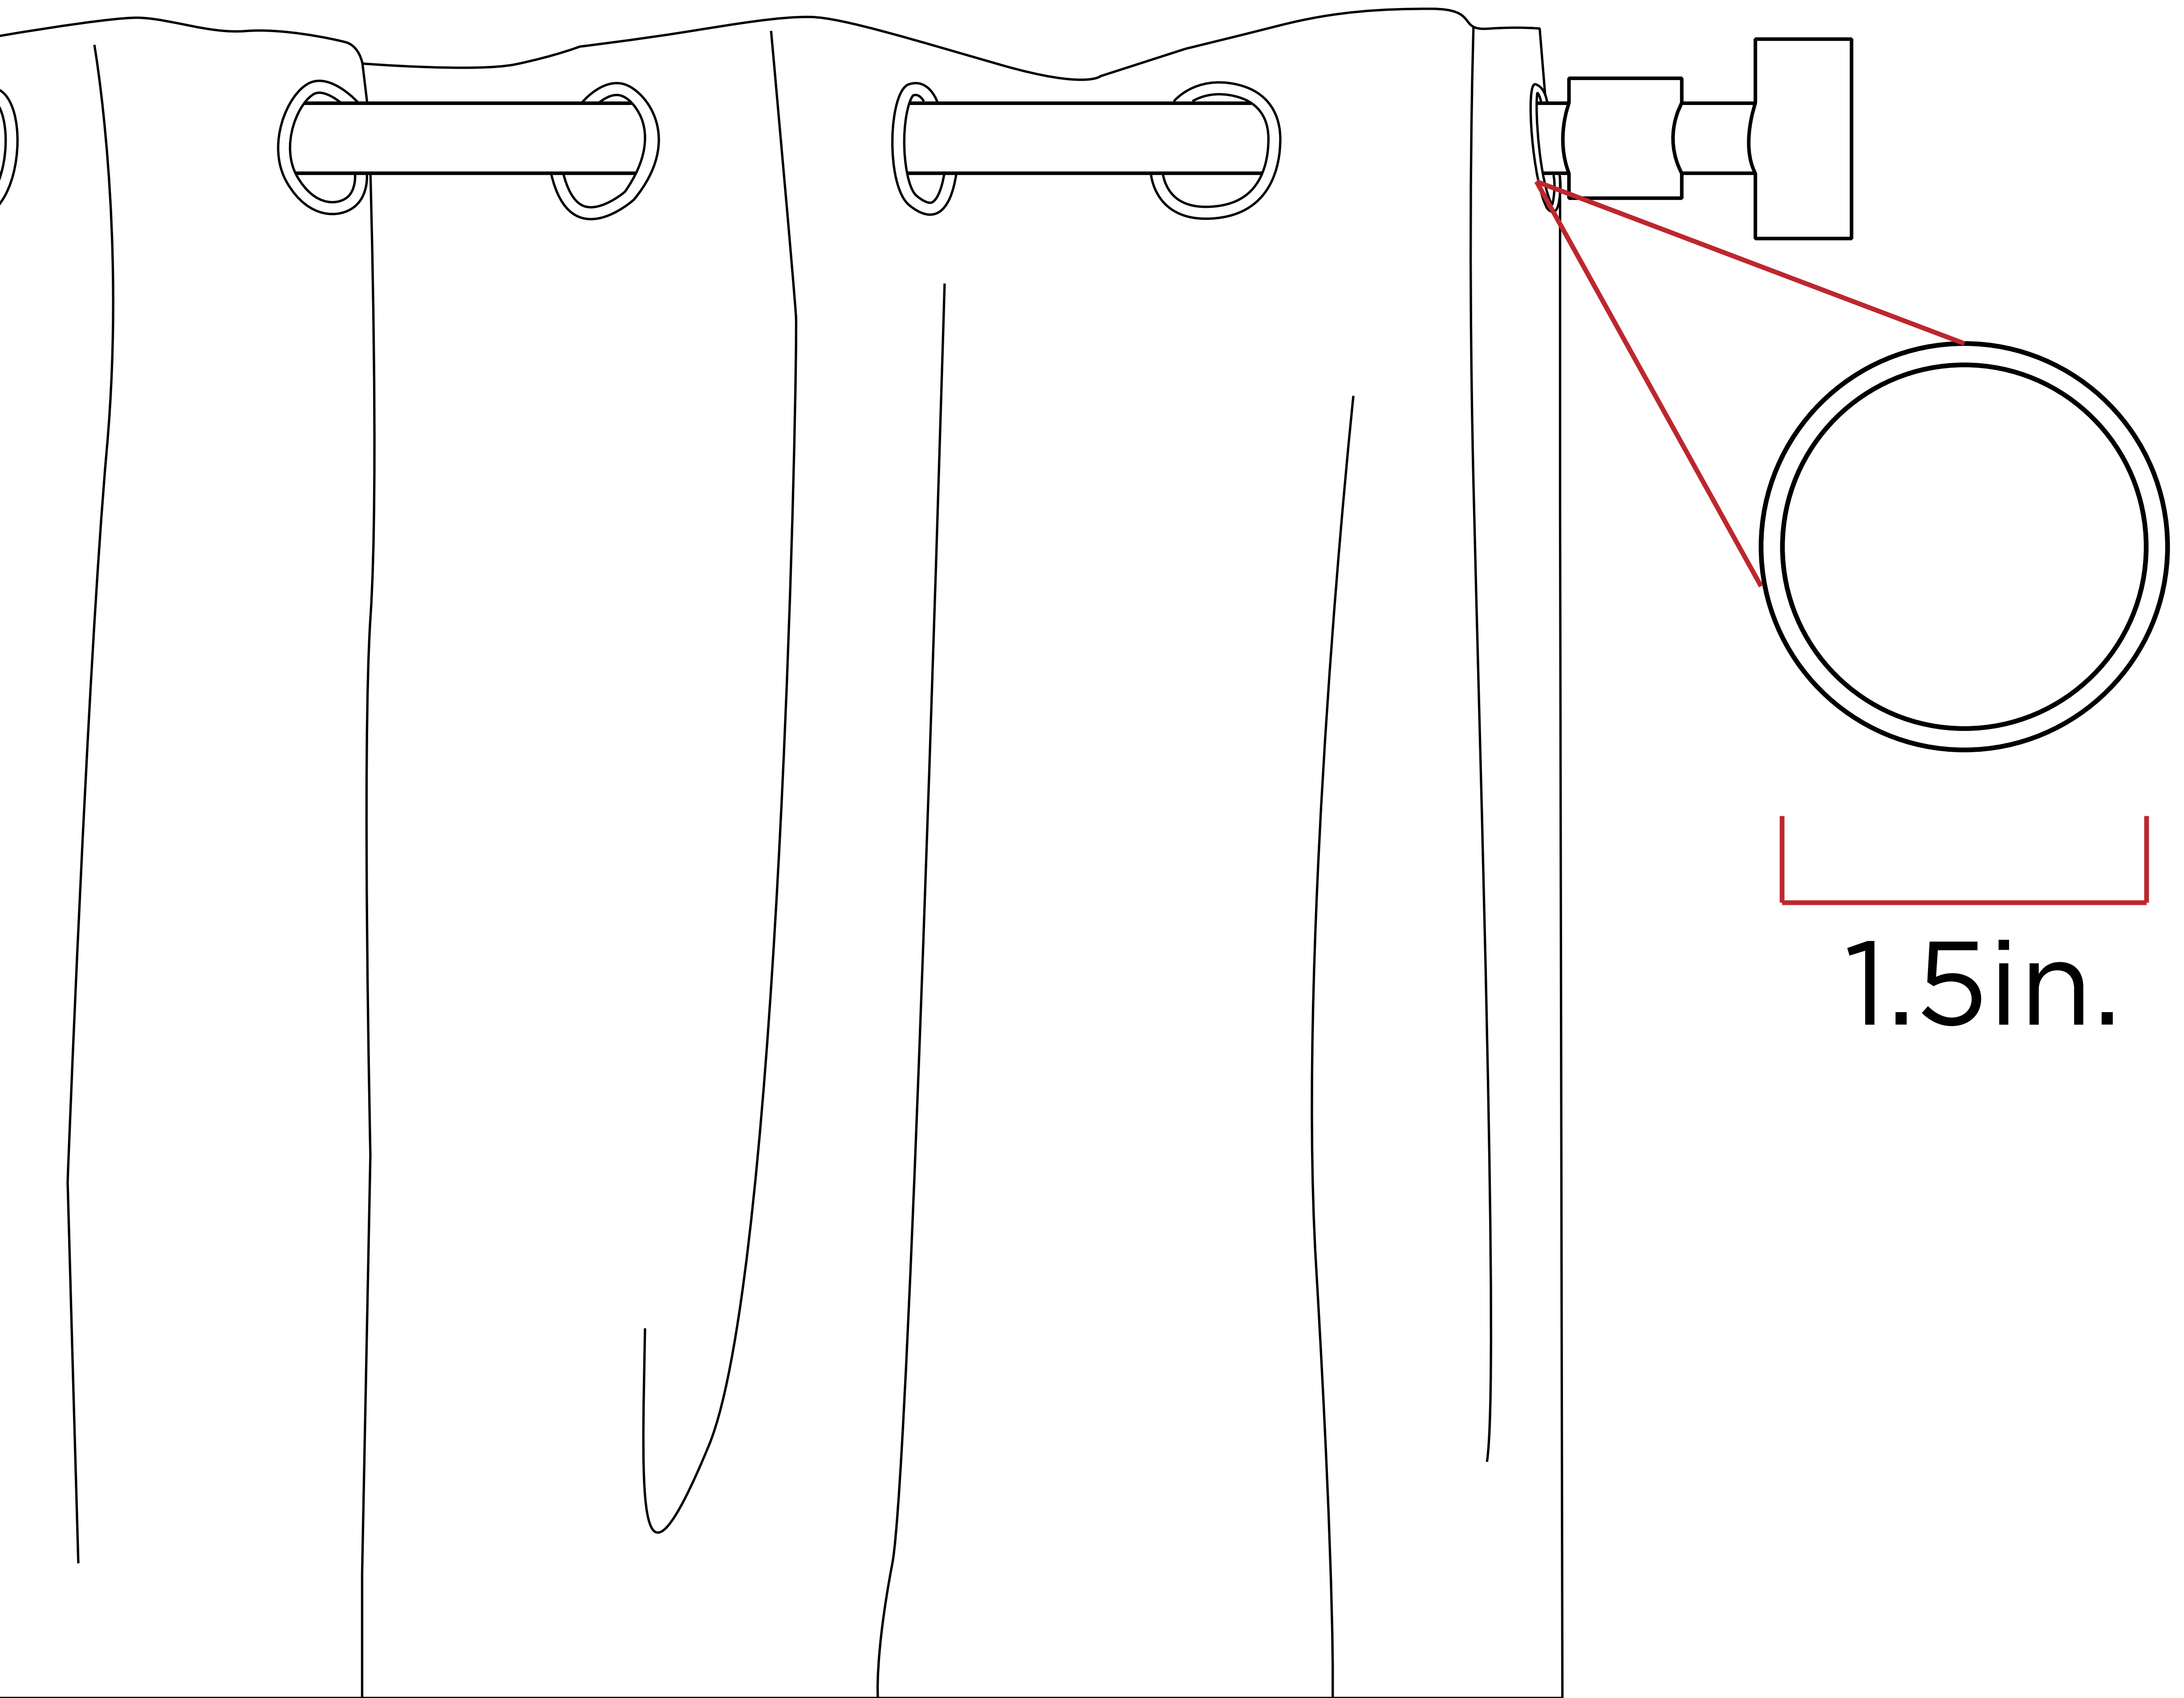


ROD POCKET DESIGN

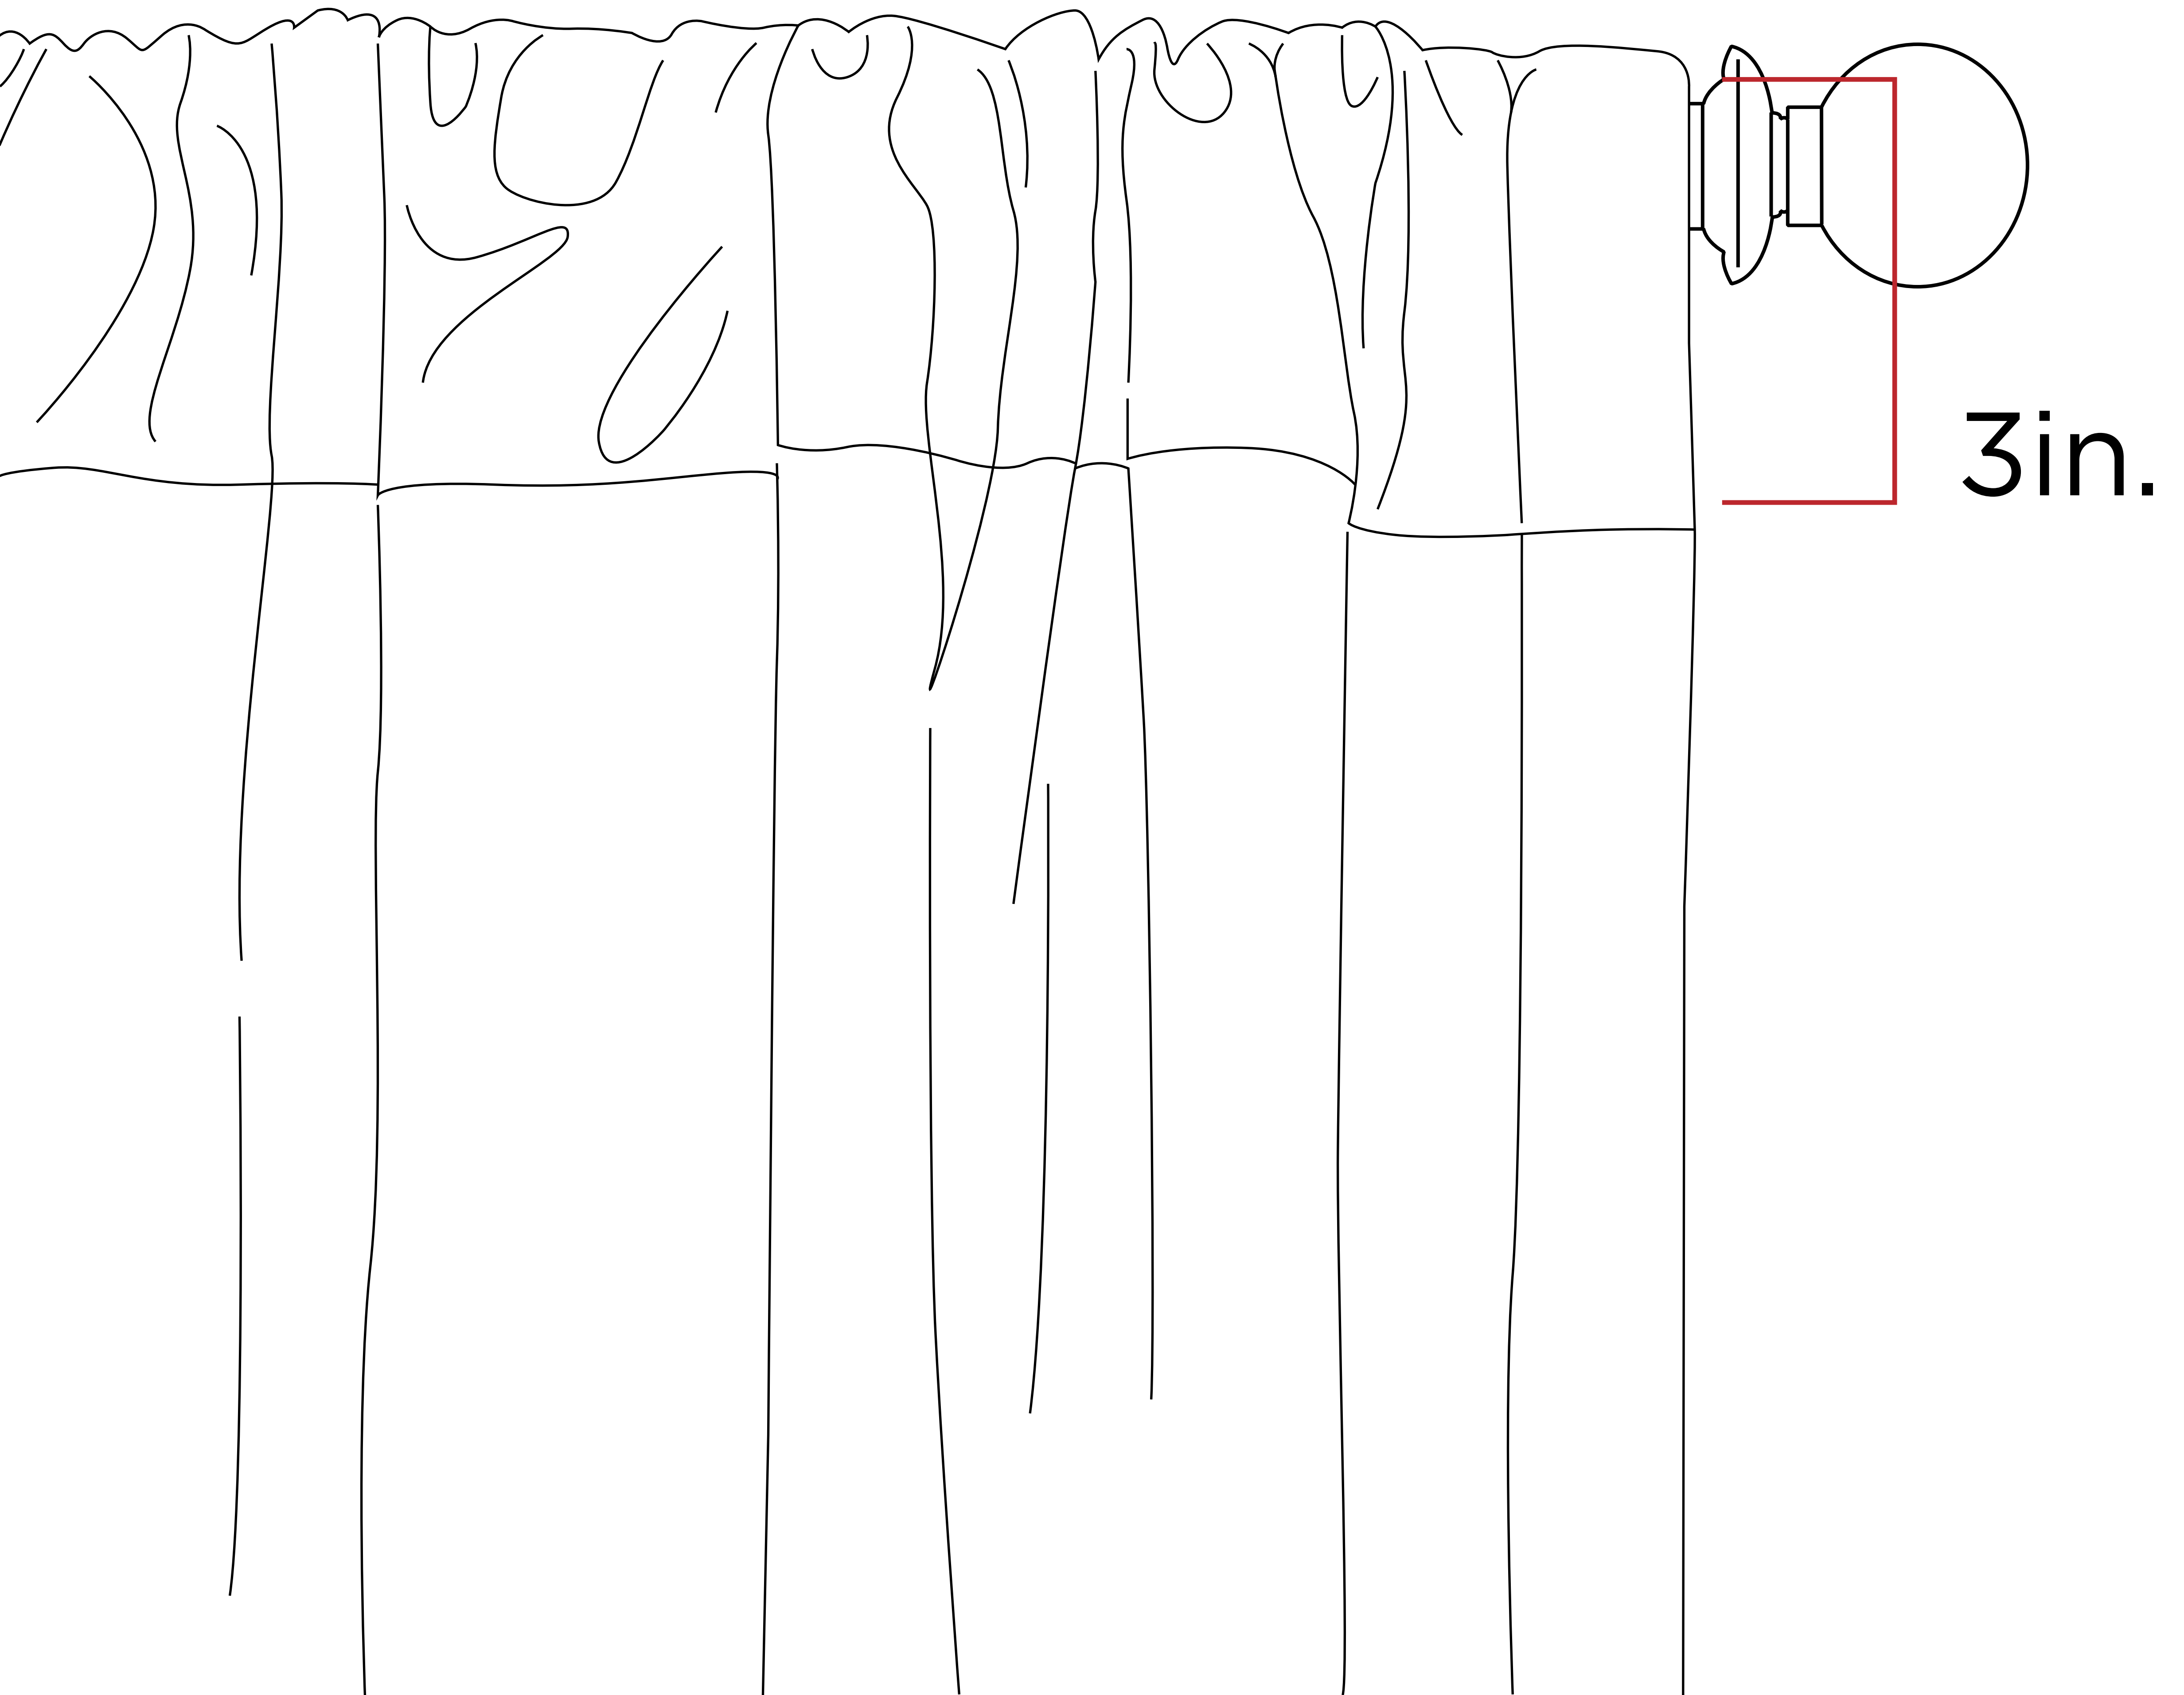


BACK TAB/ ROD POCKET DESIGN

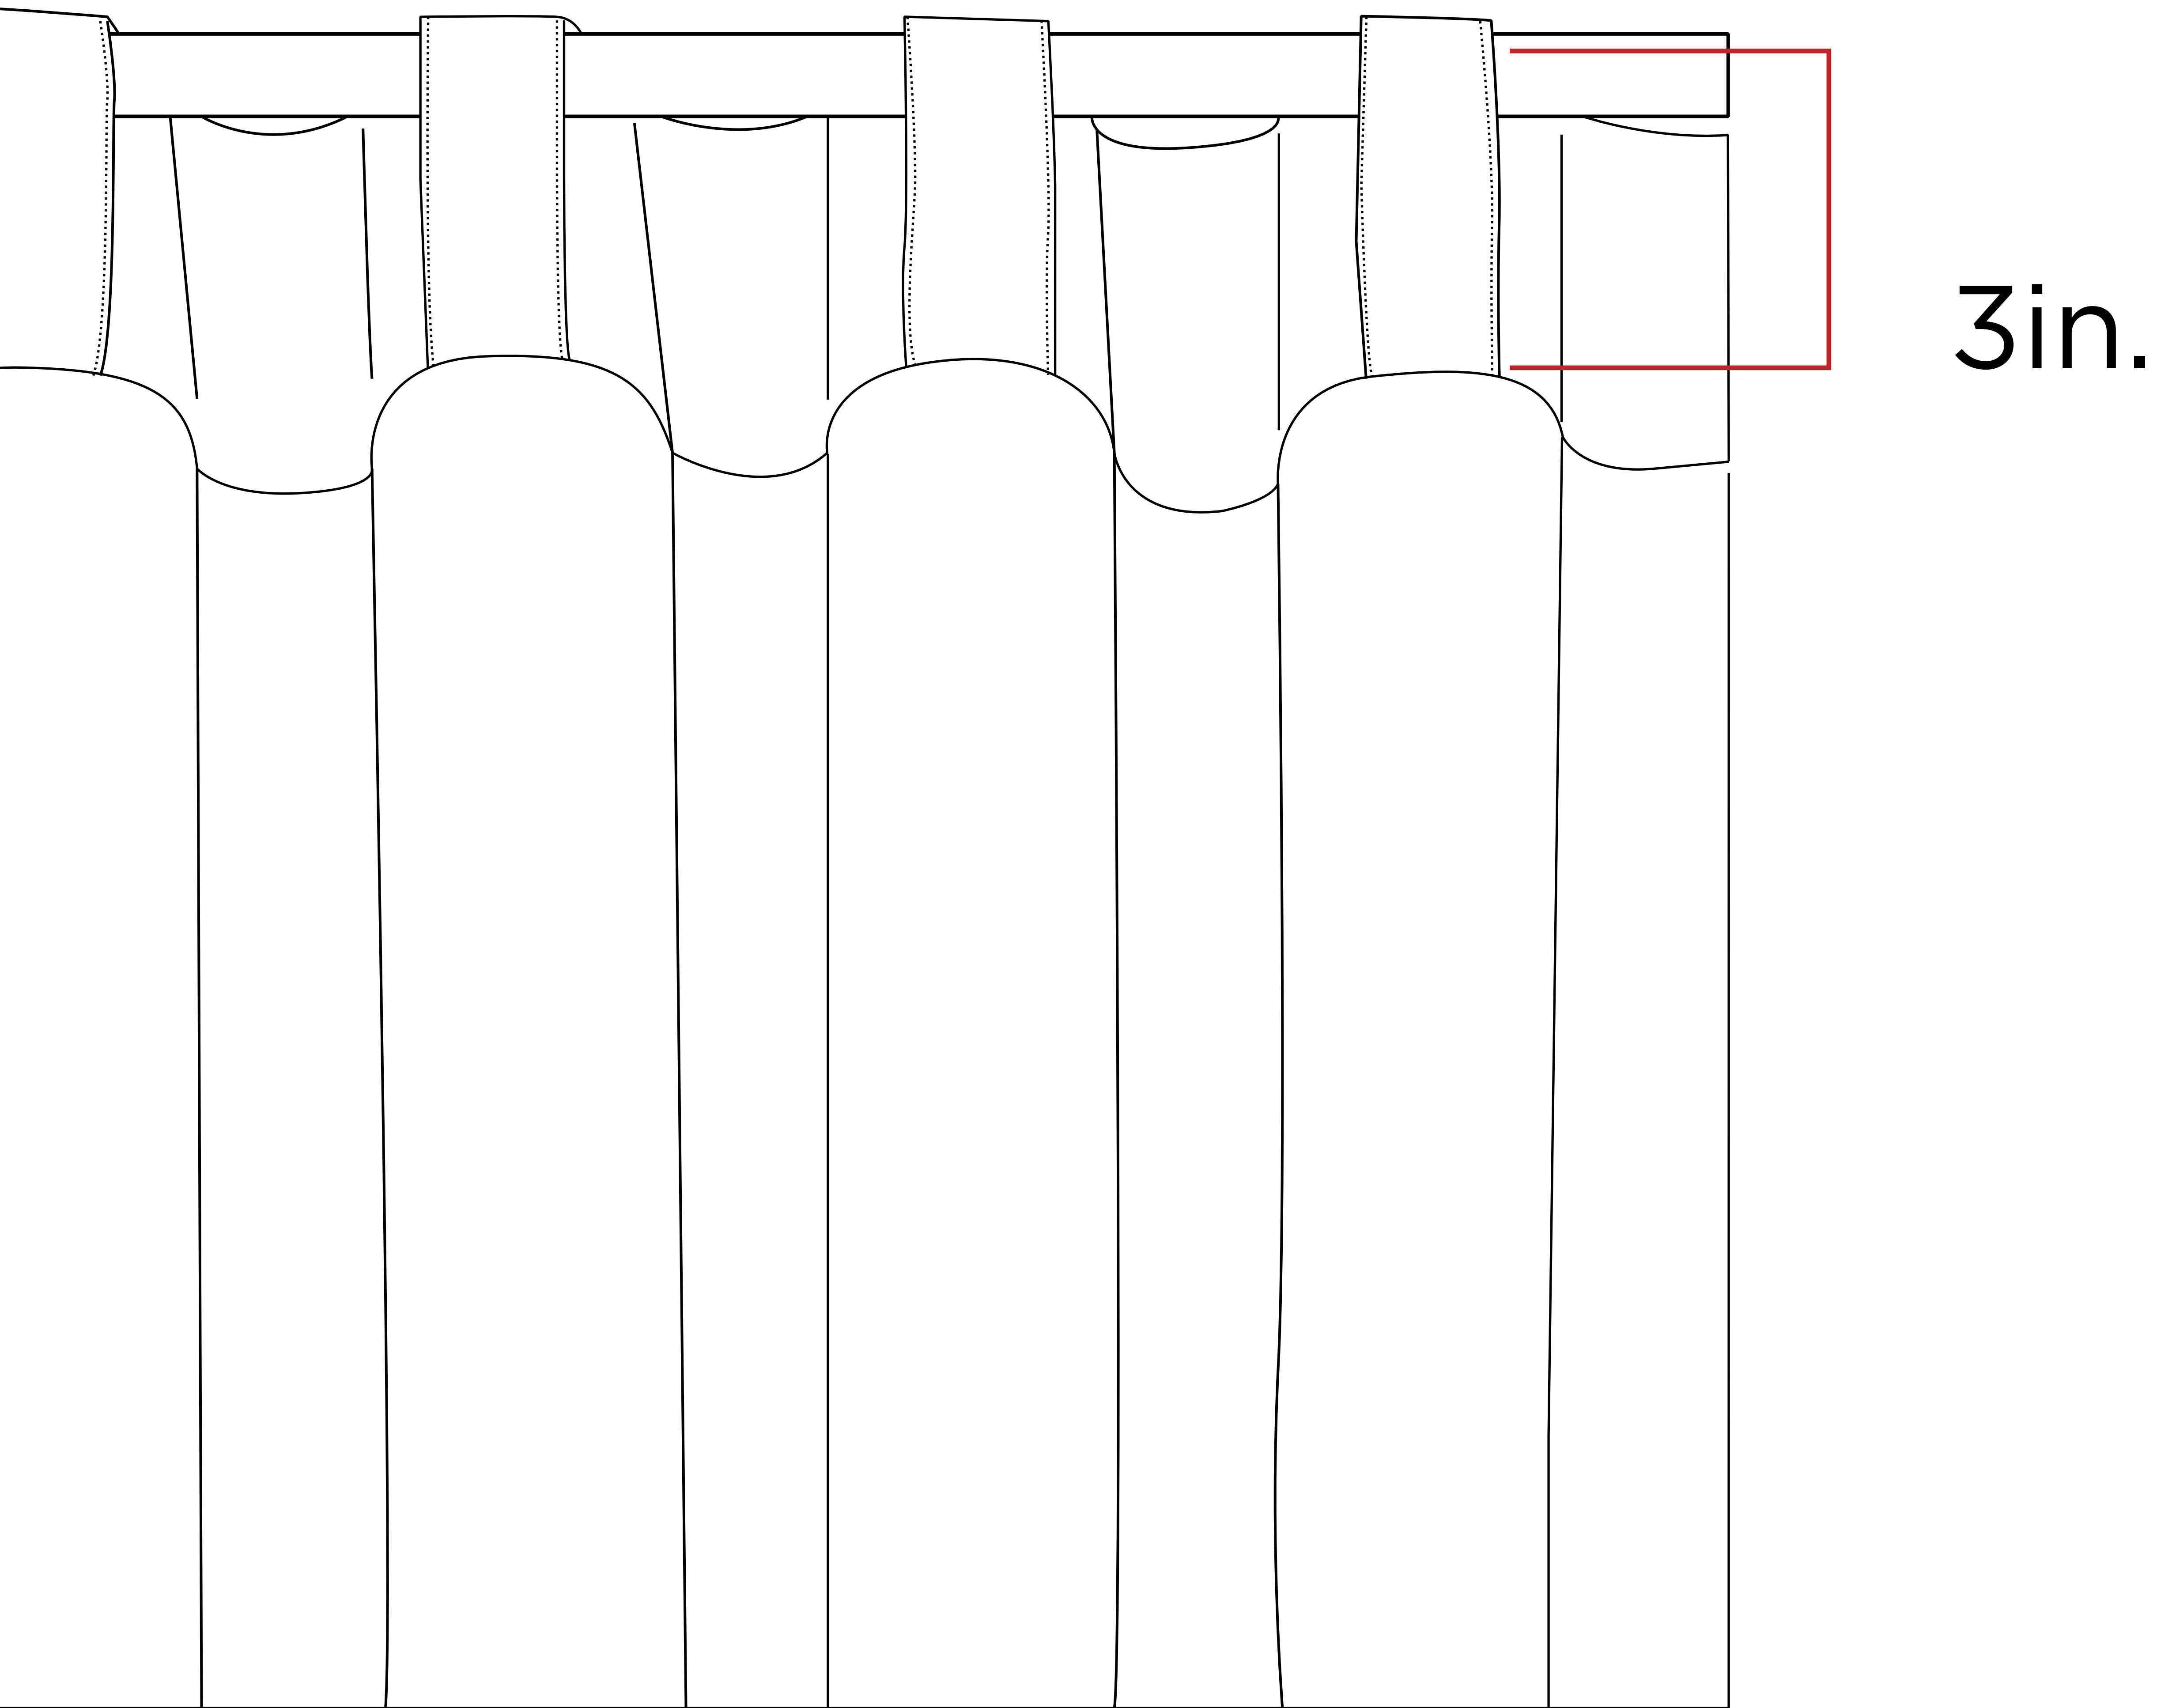

TAB TOP DESIGN

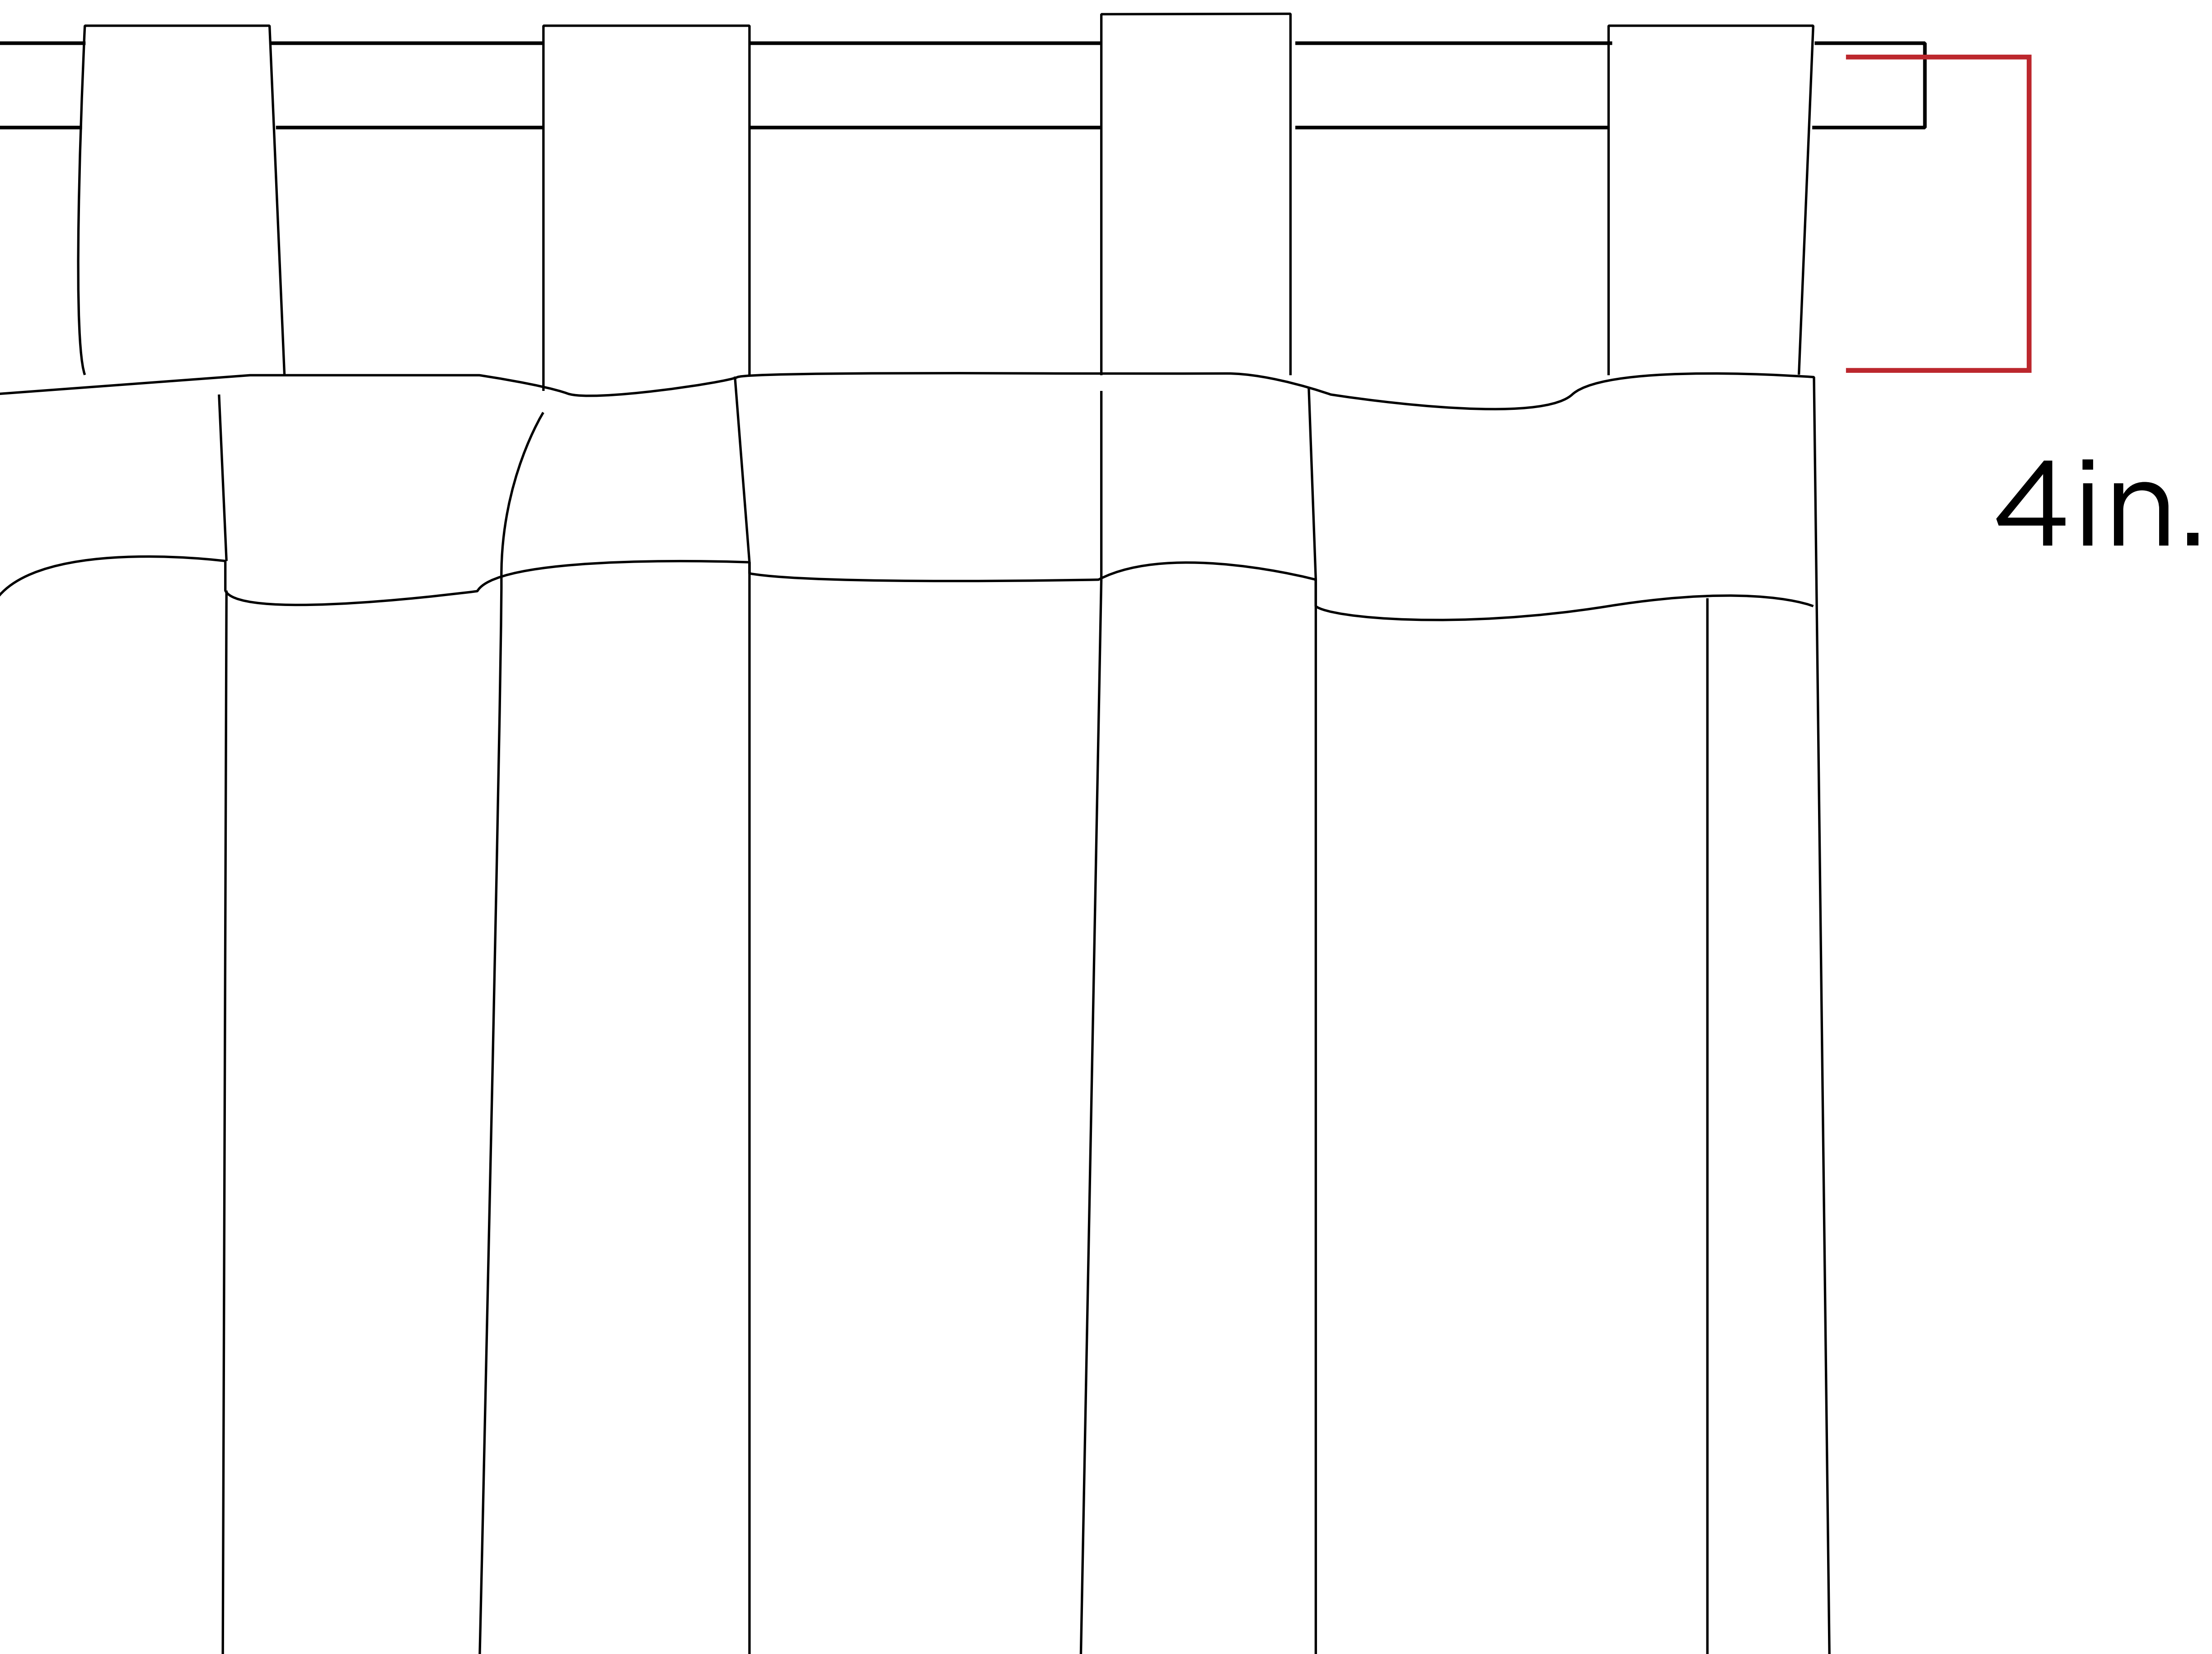


TWIST TAB TOP DESIGN

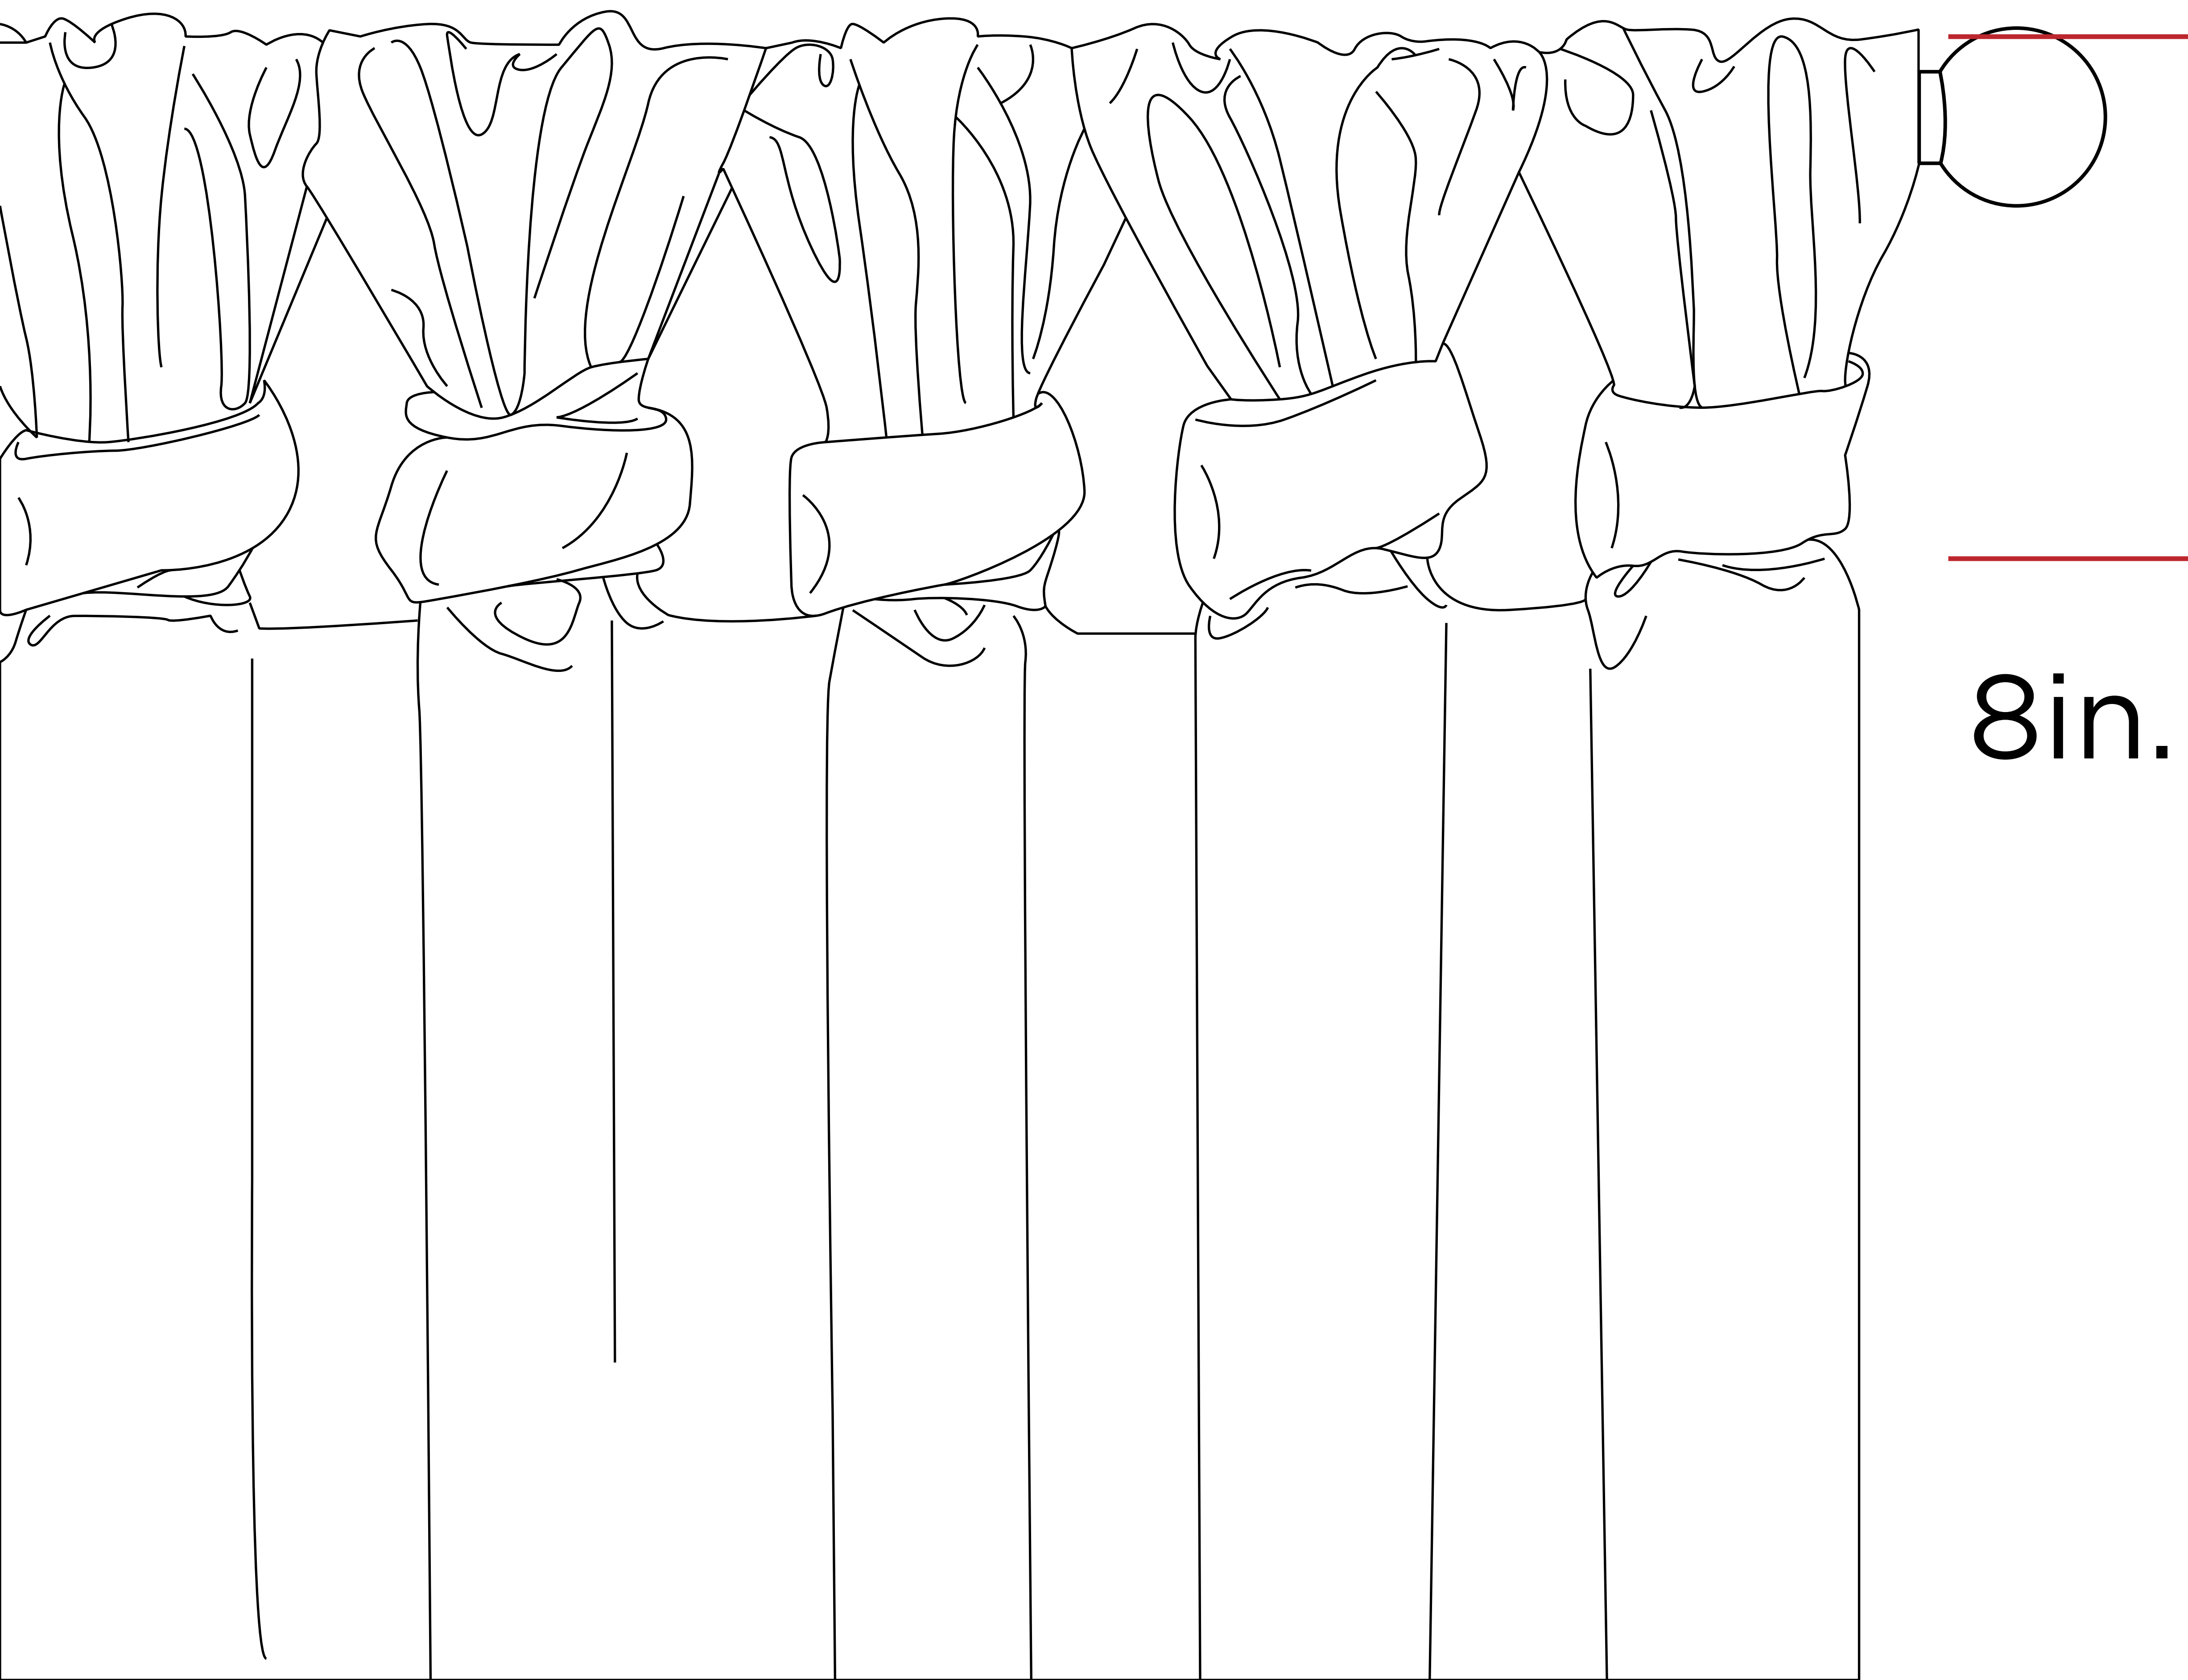


8in.


How To Choose

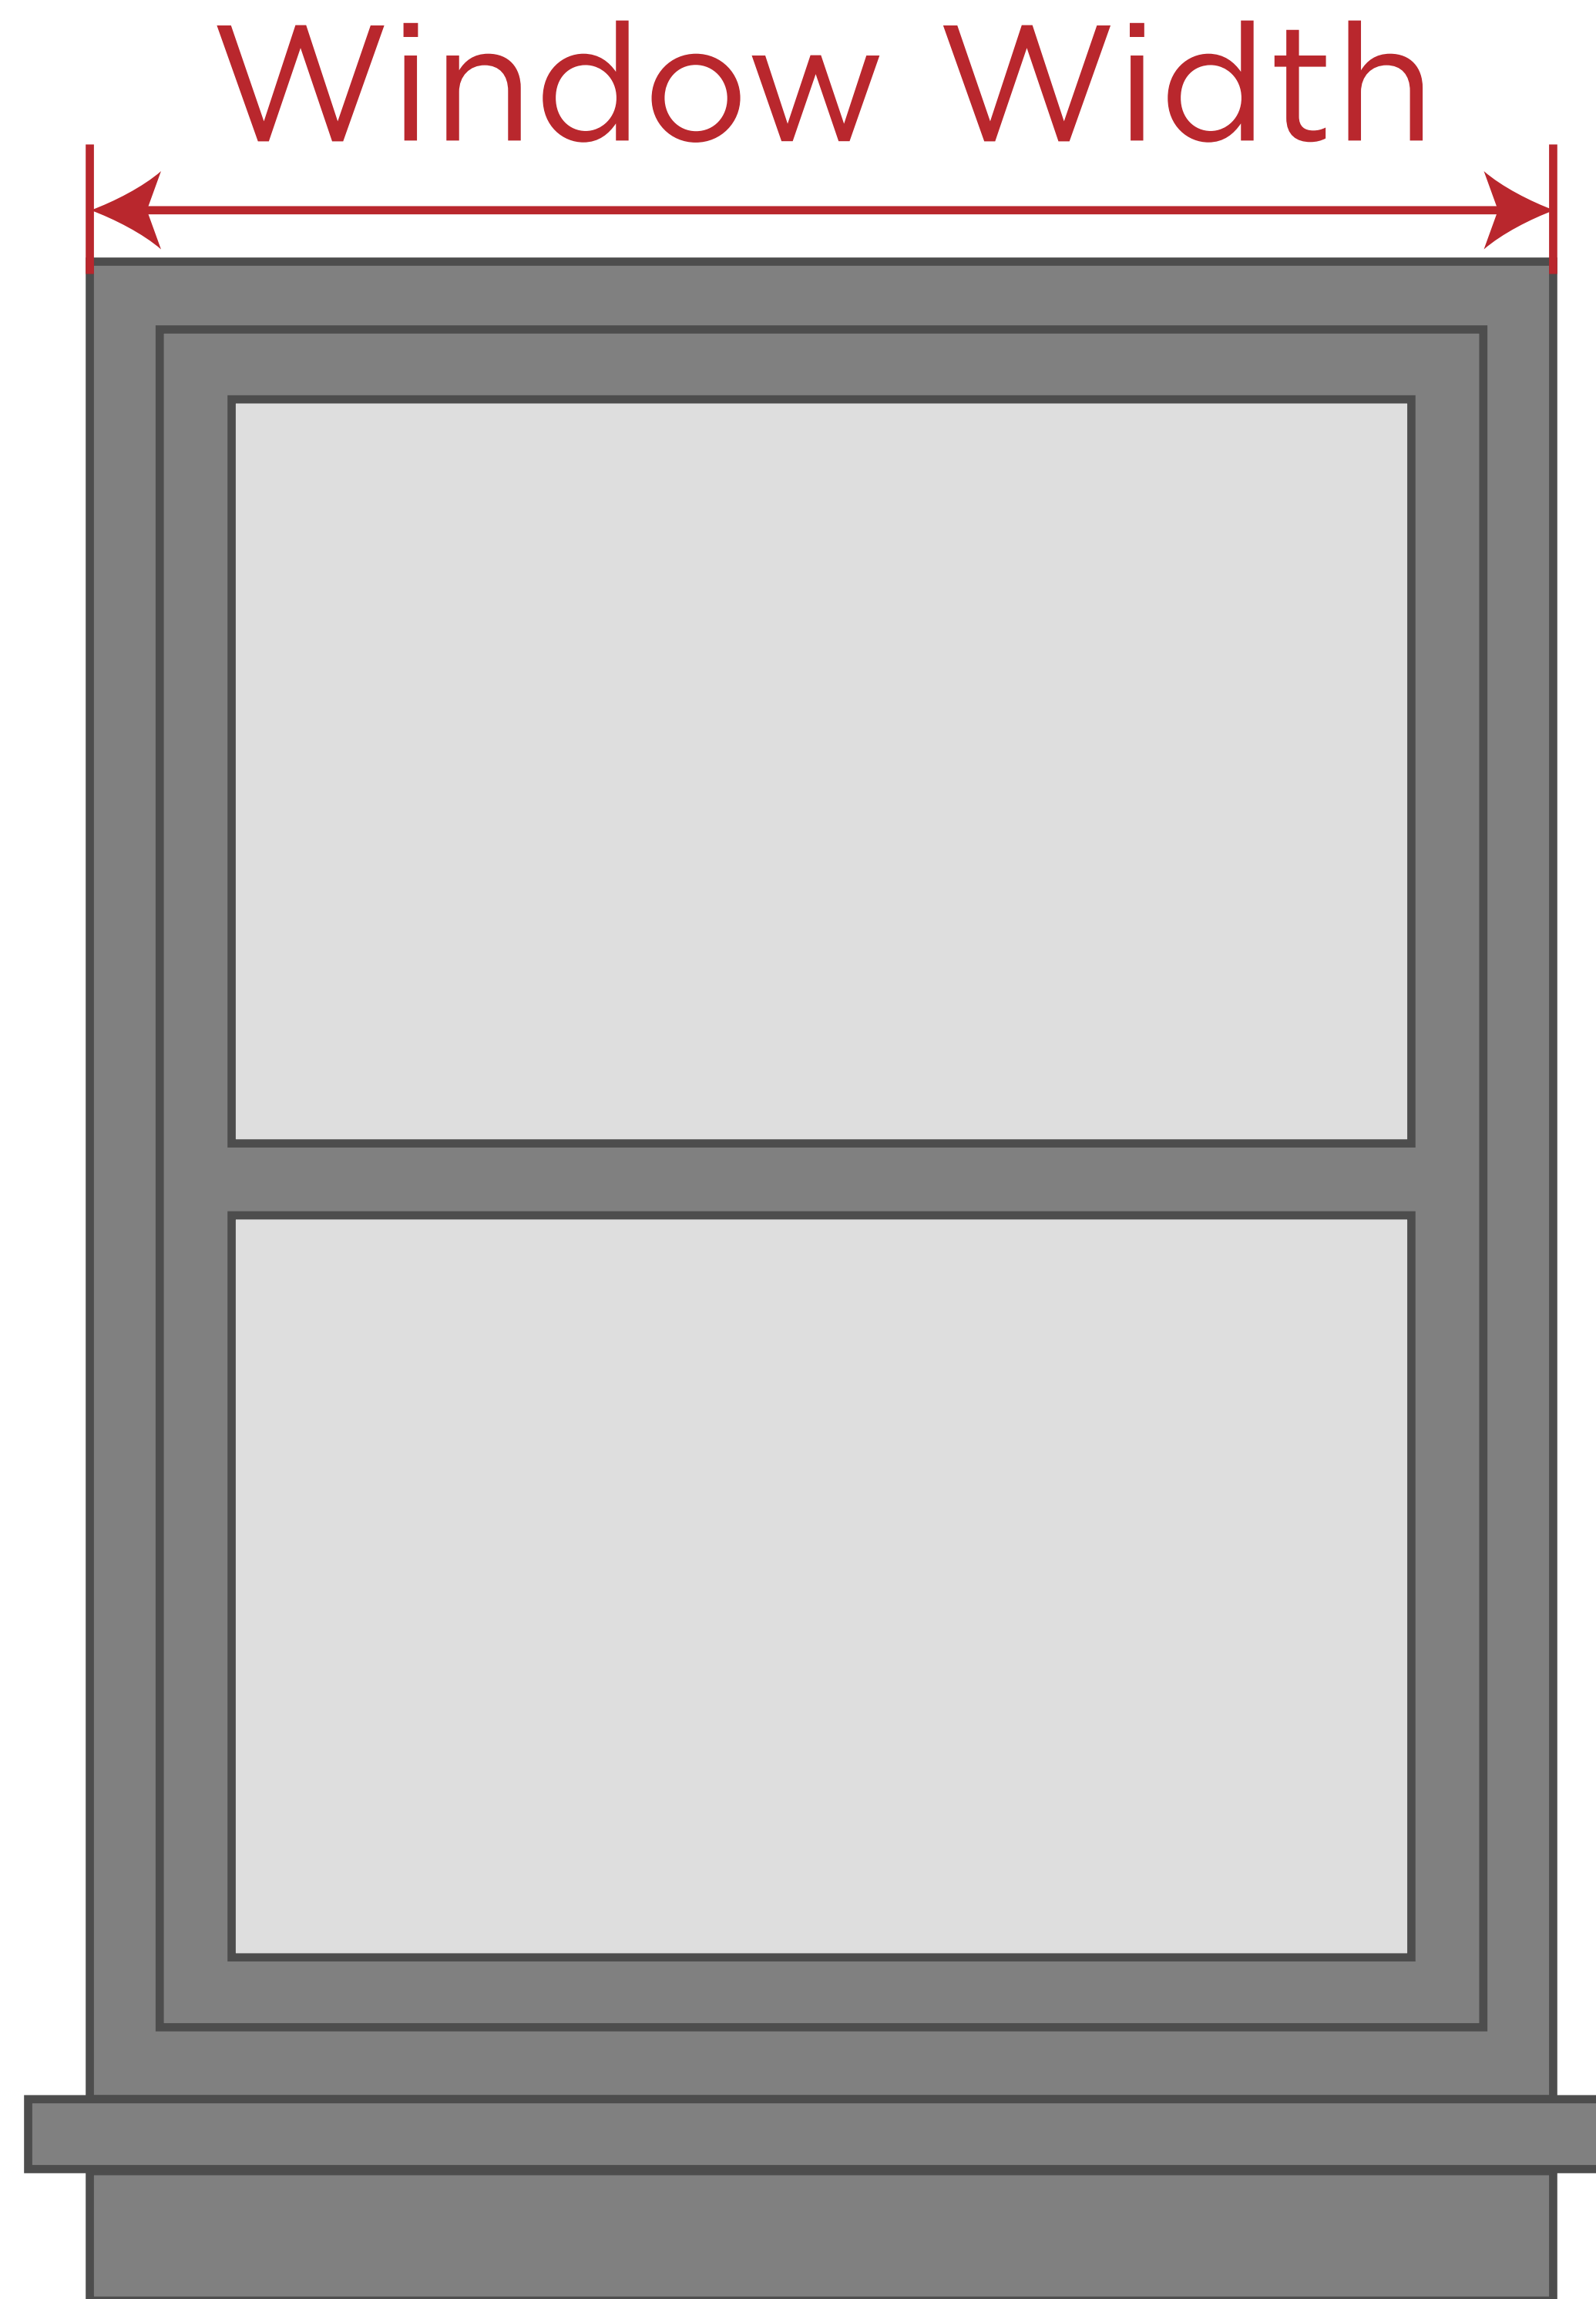


Window Width	Panels Needed
Up To 29in.	1 Panel
30in. To 29in.	1 Or 2 Panels
40in. To 48in.	2 Panels

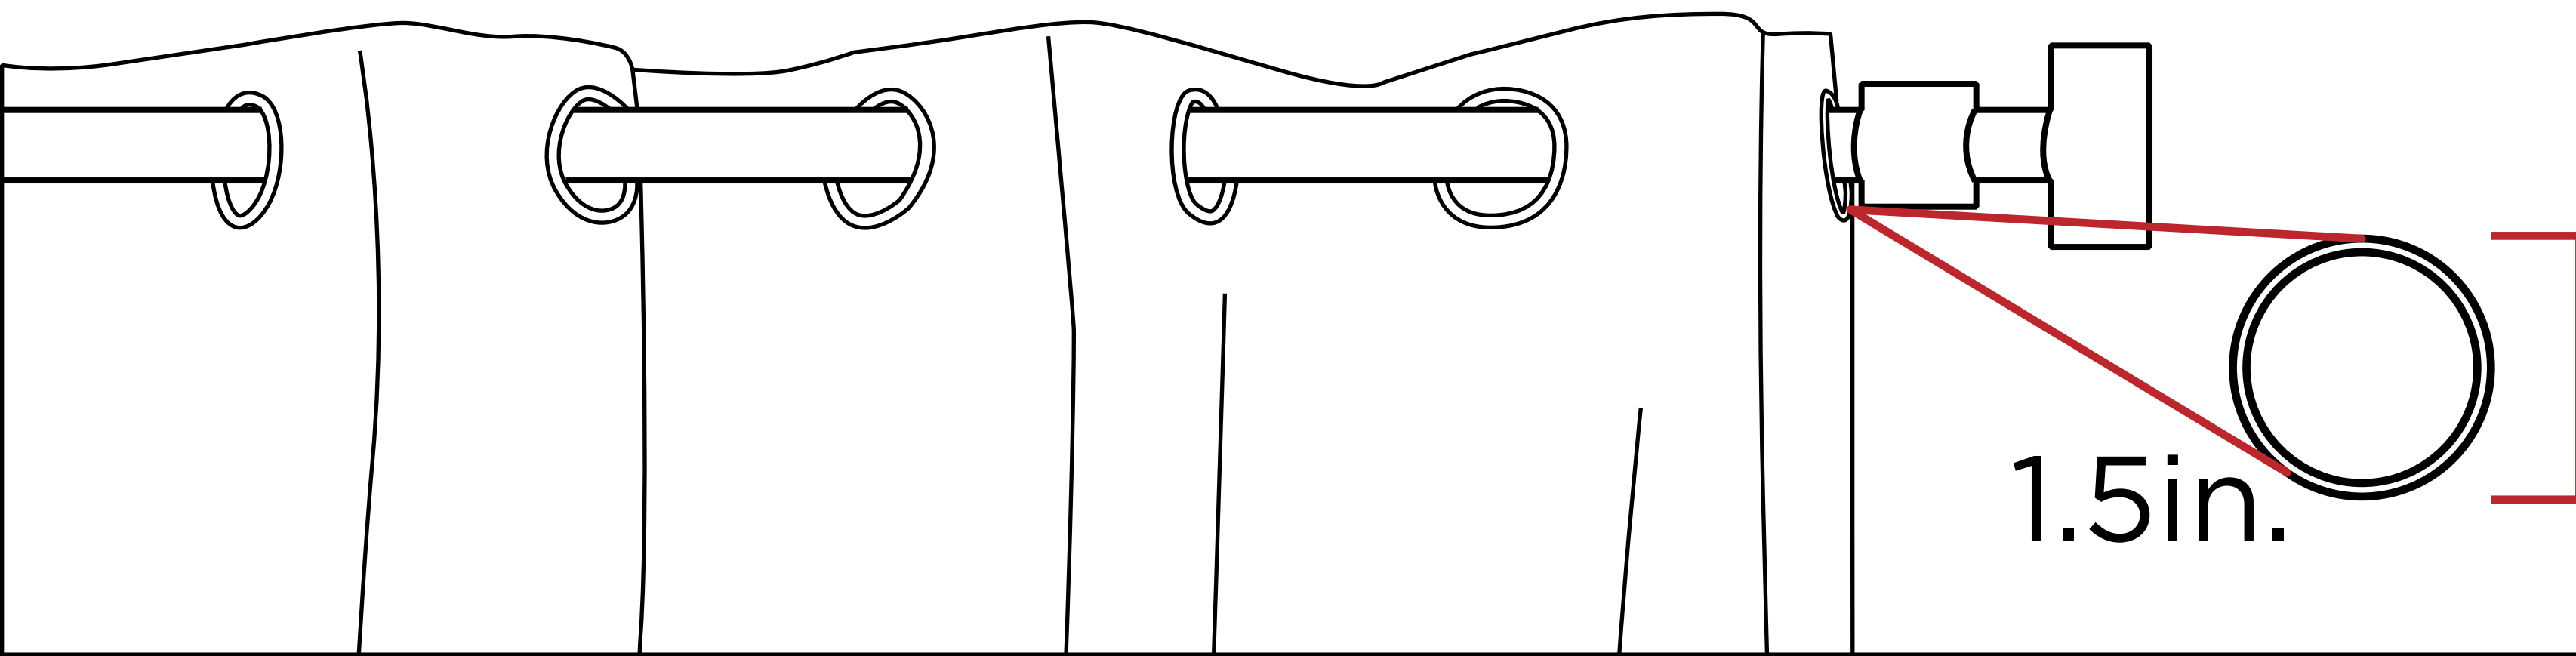


GROMMET TOP

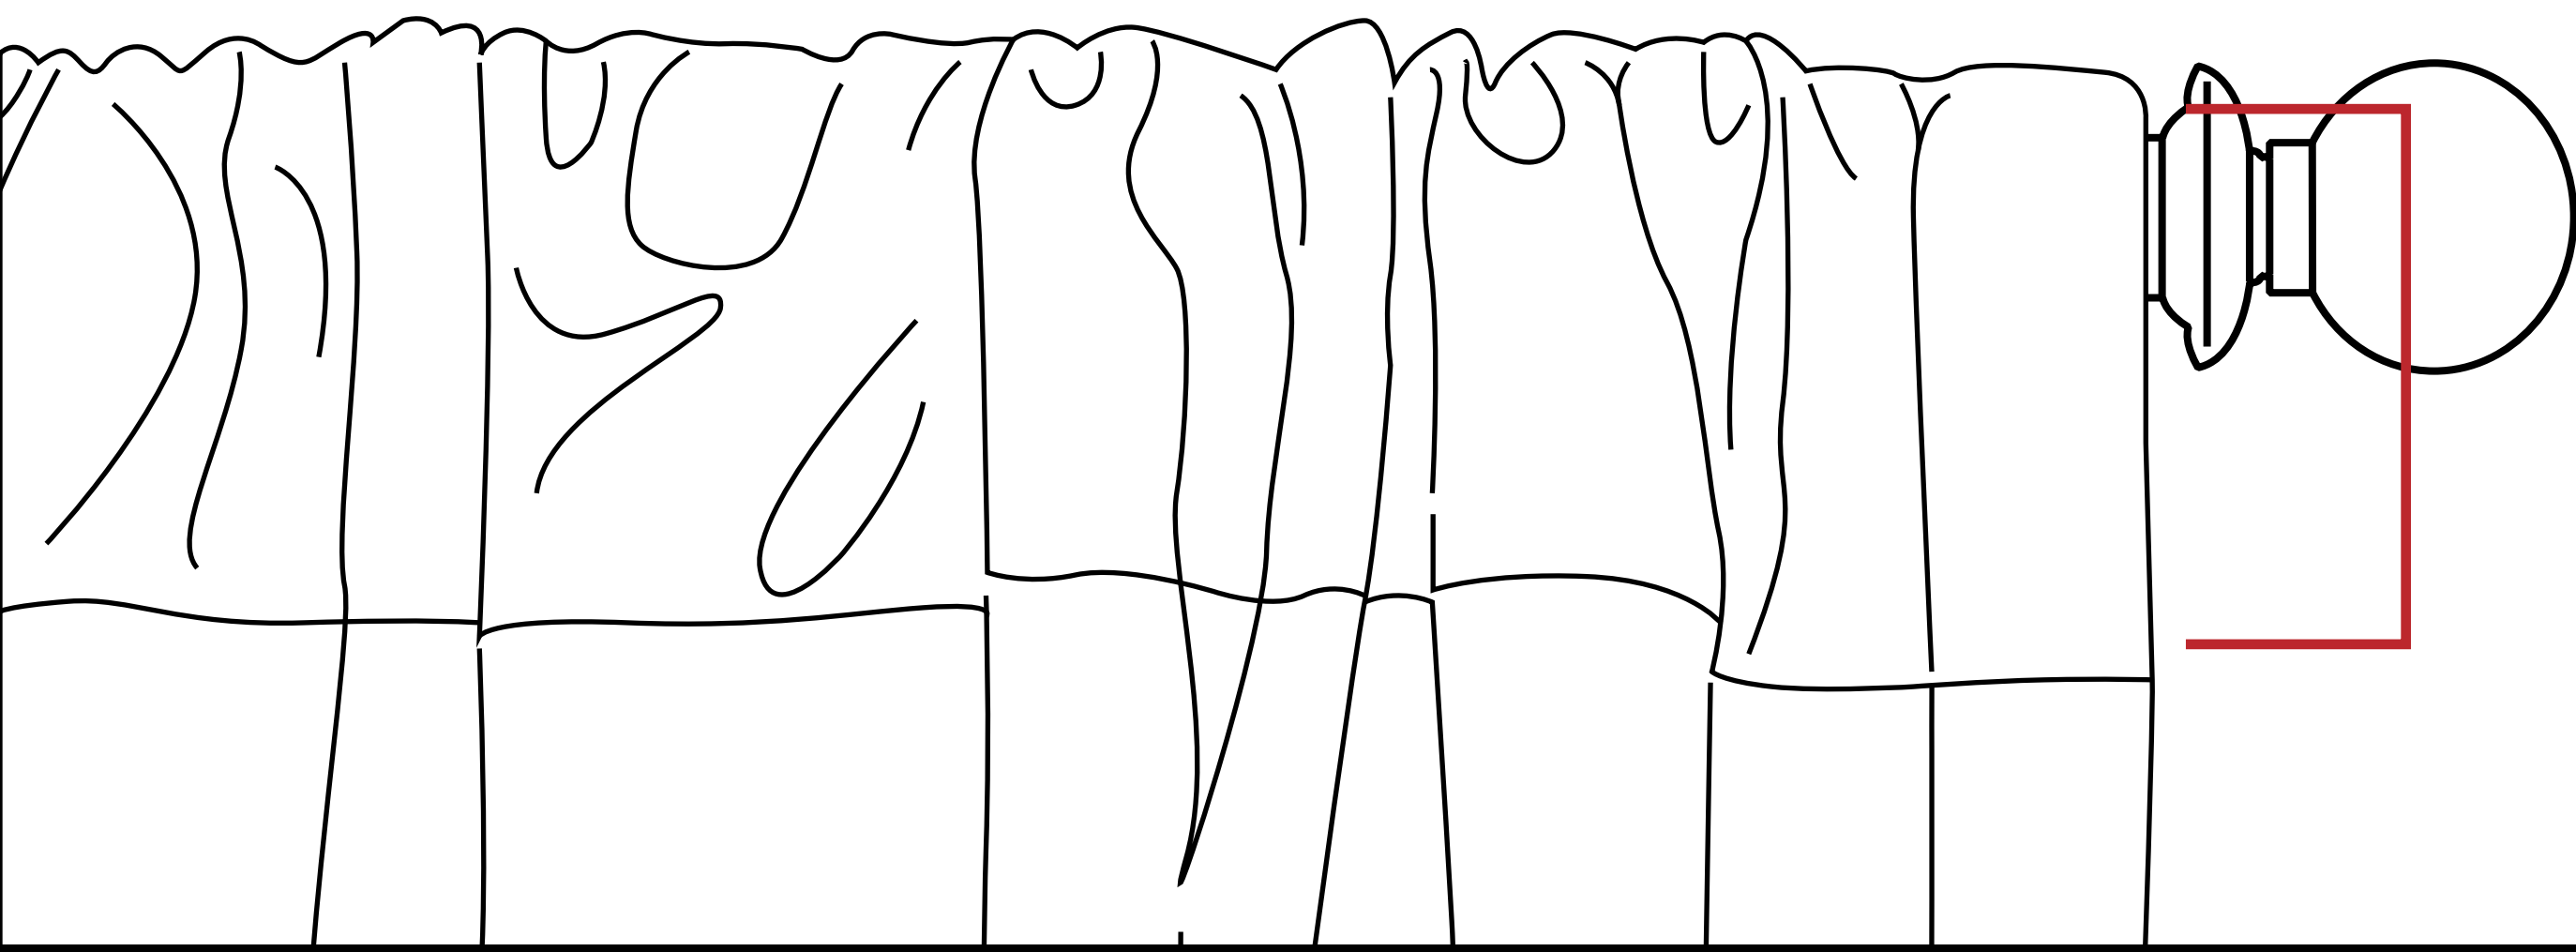


ROD POCKET

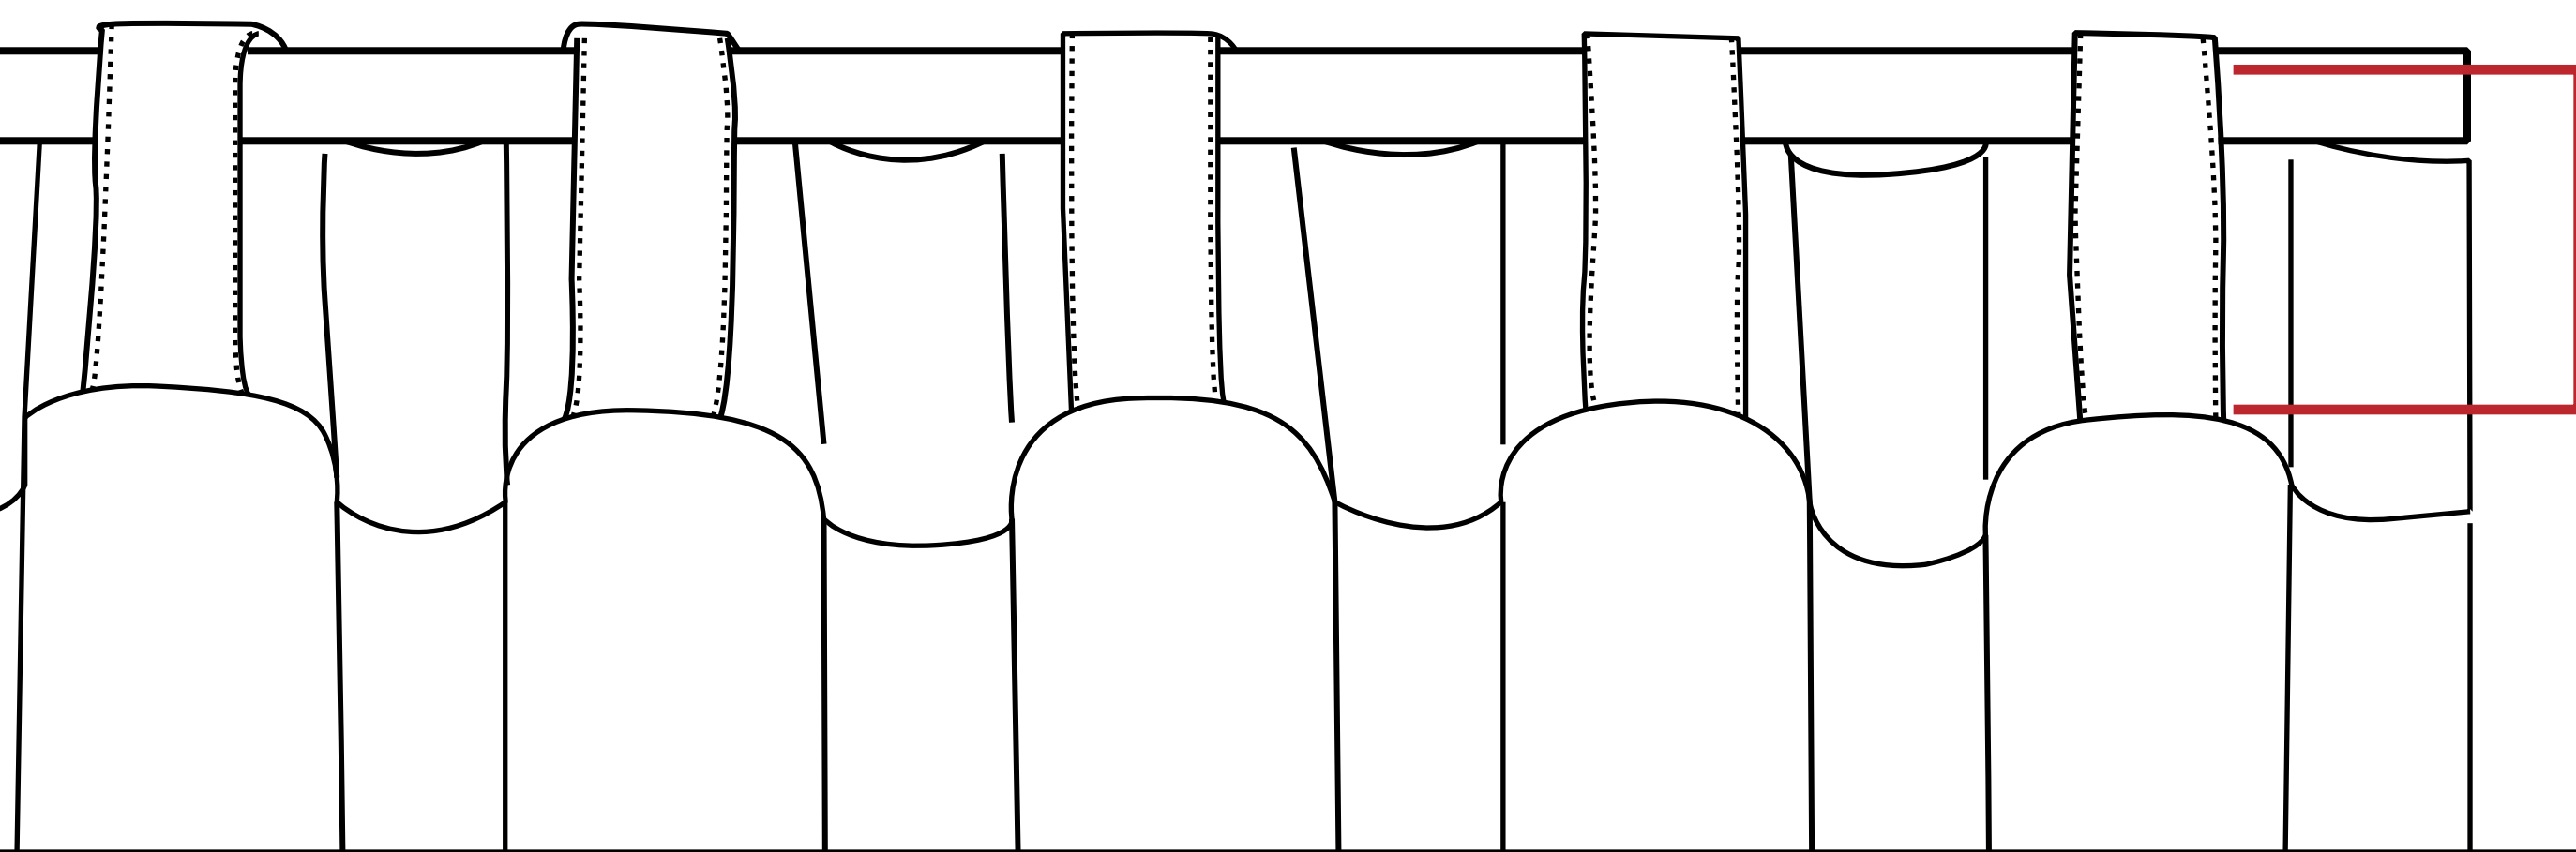

BACK TAB
/ROD POCKET

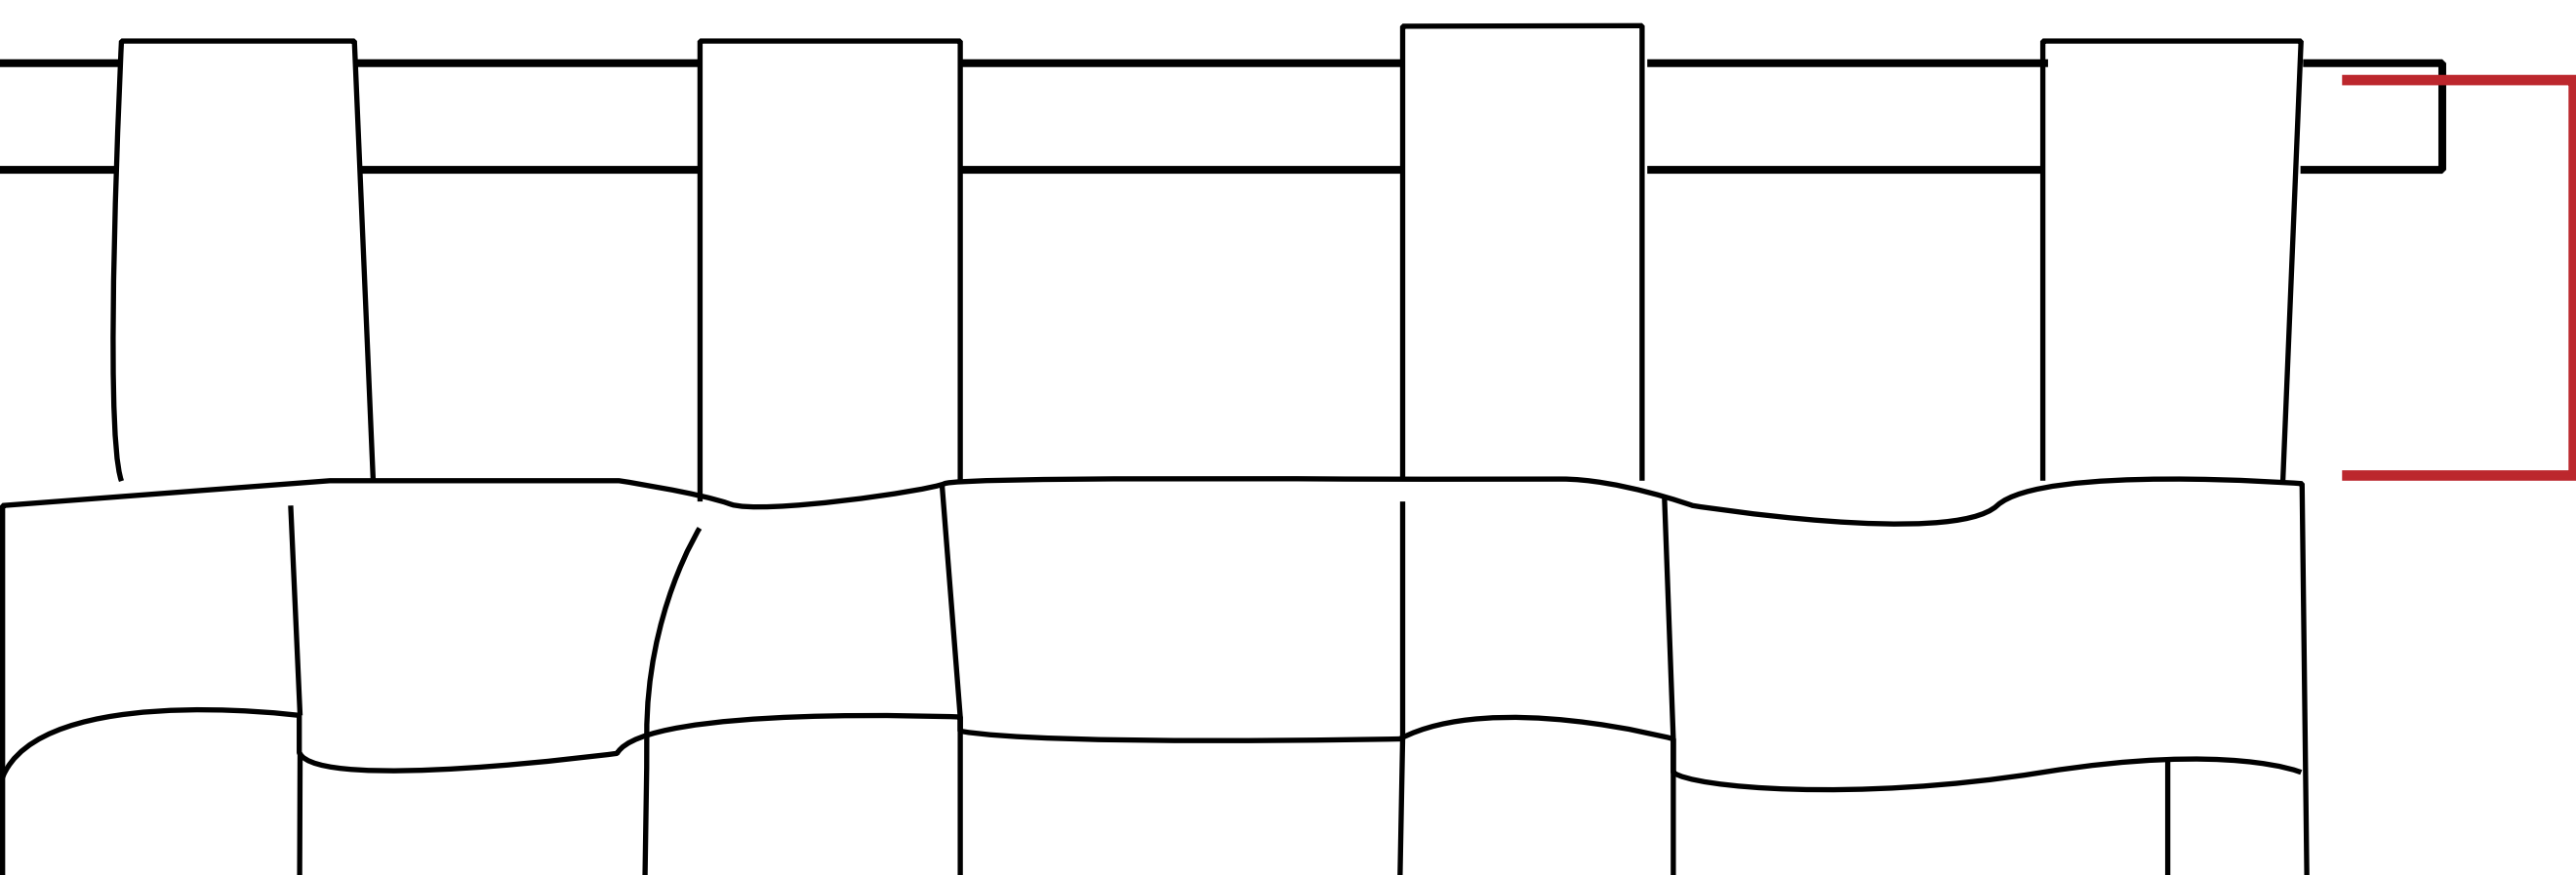

TAB TOP

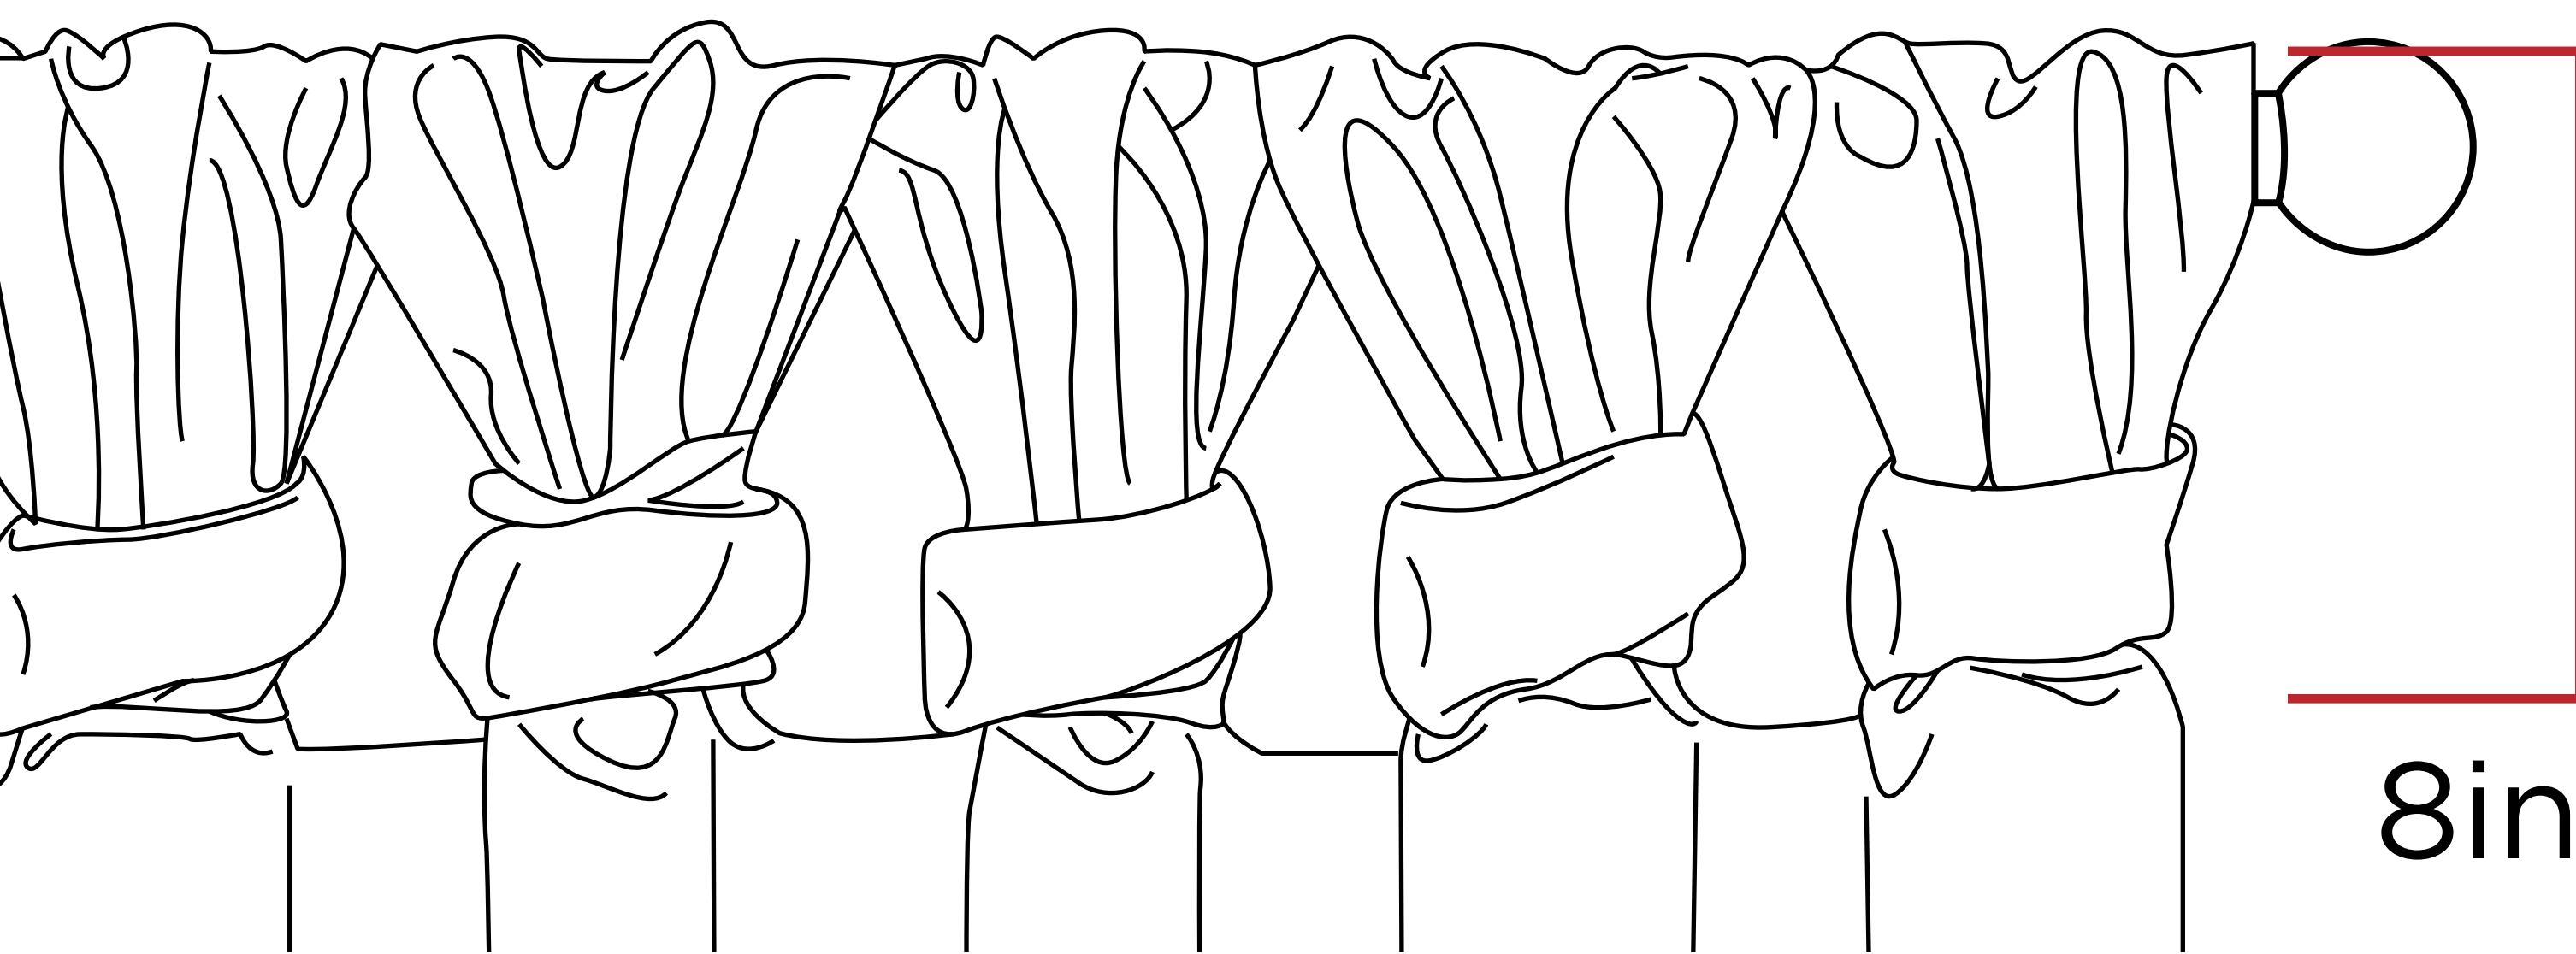

TWIST TAB TOP

Find The Perfect Fit

Ideally a curtain rod should be mounted 2in. to 4in. above the window trim.

