


# Installation/Removal Instructions

## Installation

1. Align Wallwerx base with pegboard and depress plastic rivet heads until snapped securely in place.




2. Rivet heads are fully depressed.

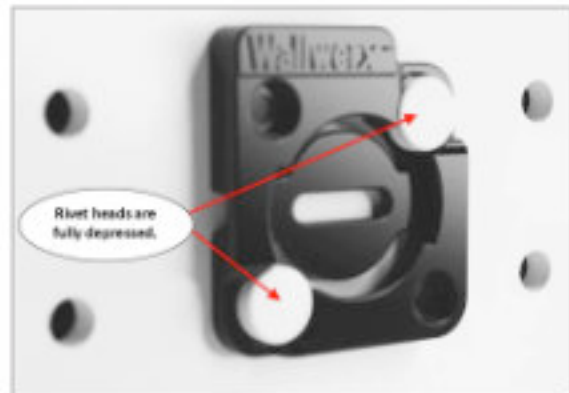

3. Install flex bracket as shown and rotate 90 degrees **clockwise** until locked in place.




4. Flex bracket locked in position and installation complete.

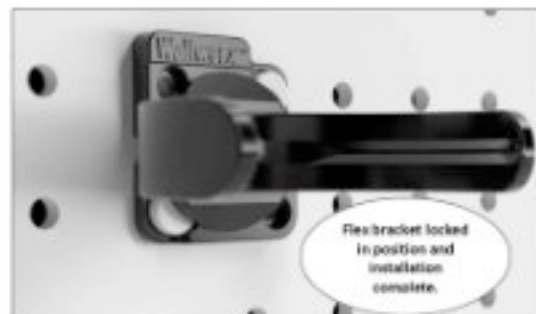

# Removal

1. Remove flex bracket by rotating **counterclockwise** 90 degrees.

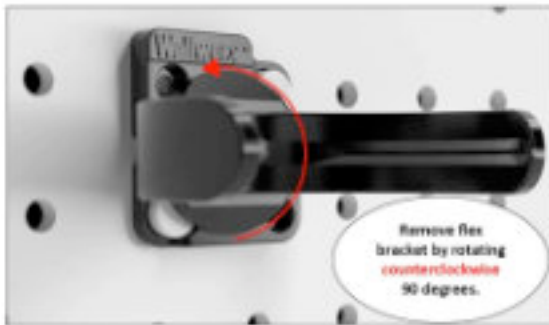

2. Remove Wallwerx base by inserting medium flat-blade screwdriver under both rivet heads and twisting to release.



3. Once both rivet heads have been released, the Wallwerx base can be removed from the pegboard.

