


Roman Shade

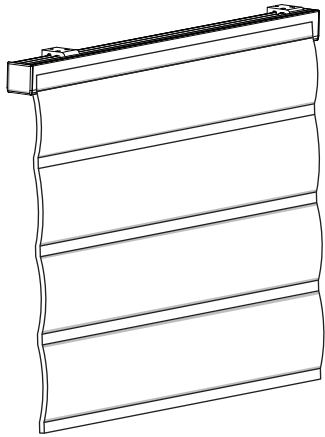

Dear Customer:

Thank you for purchasing our product. We want to reassure you that our main design focus with window blinds/shades is child safety, and we guarantee this with your new, Honeycomb Cordless Cellular Shade. In addition, we hope that you enjoy its ease of use and installation. We look forward to your continued patronage in the future.

Tools needed for installation

- 1) Metal measuring tape
- 2) Pencil
- 3) Phillips screwdrivers
- 4) Step ladder or stool
- 5) Drill & bits (1/8 ")
- 6) Level

Hardware contents

(A1) x 2
bracket



(A3) x 4
mounting Screw
(1-1/8")




(A4) x 4
wall Anchor




We hope you enjoy your new purchase!
If you have any questions regarding this product or the instructions
Please call Achim's Family of Home Furnishings
Customer Service at 1-800-54-ACHIM
Visit our website at www.achimonline.com
Made in Vietnam
V-30

step 1. installing the brackets inside mount

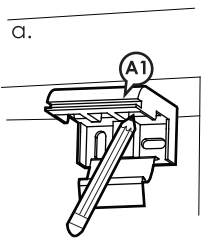


- Pencil mark the mounting screw holes at the top of the bracket.
- Drill holes at the pencil-marked locations.
- Position the brackets near each end of the head rail.

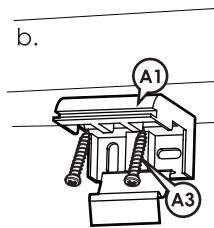


- Secure the brackets with the mounting screws provided.

outside mount

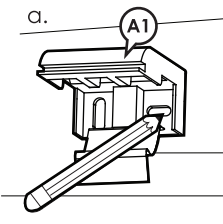


- Pencil mark the mounting screw holes at the back of the bracket.
- Drill holes at the pencil-marked locations.
- Use level at top of brackets to ensure straight alignment. Shade needs to be level for proper operation.

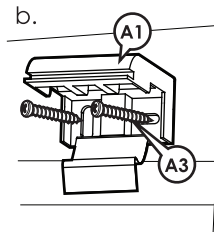


- Secure the brackets with the mounting screws provided.
- When mounting brackets on wall board or plaster, use the wall anchors provided.

step 2. installing the shade

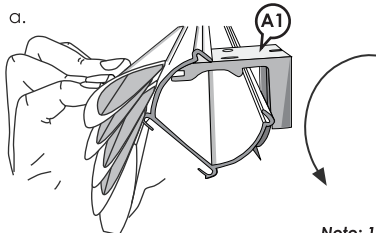


- Insert the flange of the top rail onto the top of the bracket as shown in the drawing then snap-in the rear part of the rail onto the tab of the bracket in a twisting motion.
- When locking in the shade to the bracket, be sure to avoid the spring box mechanism. For optimal results, install left and right-most brackets within 4" of the edges of the window shade.

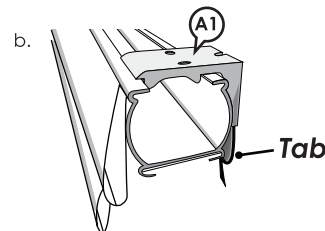

Note: 1. Avoid placing brackets over the spring box or cord pulleys.
2. When installing brackets make sure the brackets do not catch the shade cord(s) against the head rail.


step 3. operating the shade

To lower shade

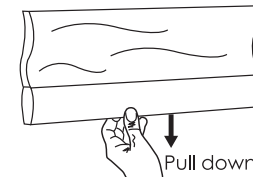

Lowering shade:
Simply grasp the center of the bottom rail and pull the shade down to desired length and release.

To raise shade

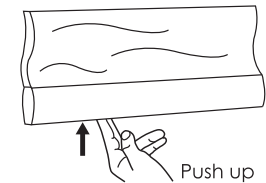

Raising shade:
Simply grasp the center of the bottom rail and push it upward to the desired length and release.

cleaning your shade:

For best results, we suggest using vacuum cleaner or dry cloth to remove dust. For spot-removal try using light damp cloth to wipe the spot clean. Do not use any kind of chemical to clean the shade as it may damage the shade.

Patent No.: US 8,291,959 B2 & Other Patents Pending

Made in Vietnam.