


Specifications

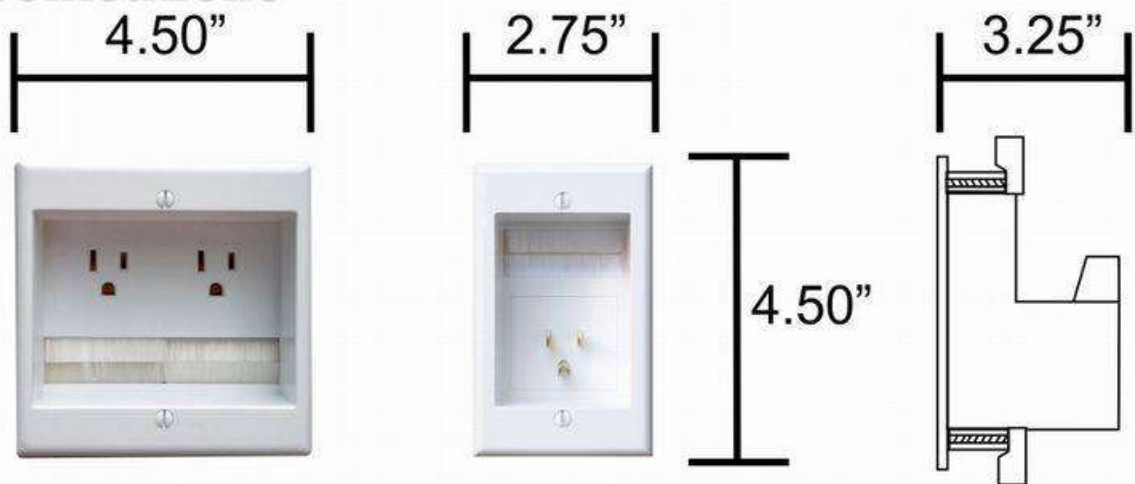

Same height as a standard wall plate.

Depth 3.25\" Installs within any standard construction wood or metal 2x4 framed drywall wall or ceiling.

Easy to install:

1. Cut out drywall between stud frame
2. Drop cables down inside wall
3. Snap together PowerConnectors
4. Secure panels with screw-driver
5. Plug into existing outlet or surge



Stud Finder



Drywall Saw



Flat-Blade

Basic tools. Not included

National Electrical Code COMPLIANCY SUPPORT

- 1) Article 334.40(B) PowerConnector tap-device
- 2) Article 334.30 Unsupported NM Cable
- 3) Article 400.7(A)(11) Permitted use of cord / approved kit using inlet to energize receptacle

Meets all US states and cities adaptive to the National Electrical Code (NEC) allowing NM type building cable.