


Panel Curtain Installation Instructions


Step 1 Panel Curtain Installation

1-1 Remove and discard the caps from the panel curtains.

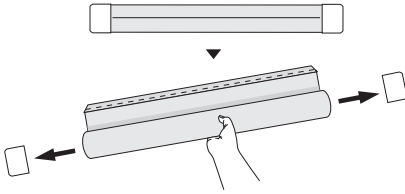


*To assist with installation, do not unfurl the curtains until they are inserted into the slider.


1-2 Push the panel retaining gates on the sliders up.

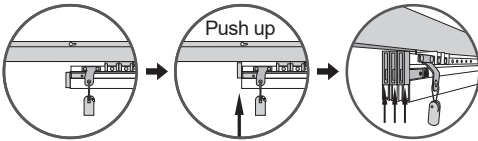


1-3 Insert the rubber liner part of panels curtain into the sliders in the order shown below, close the retaining gate, then furl the curtains.

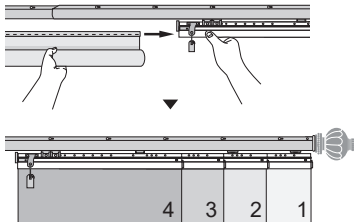

Push Down


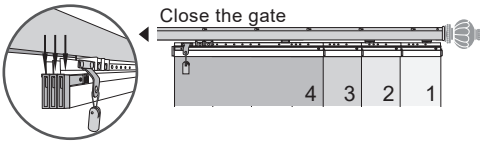


1-4 Push the tab on the end cap up to unlock, remove the end cap, and insert the panel's rubber liner into the weight.

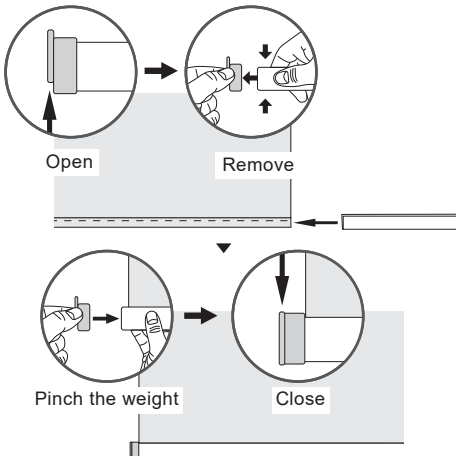


Step 2 Customizing the Panel Curtain


2-1 Measure the height of the installation. Measure and mark the panel curtain at the desired height. (a curtain weight can function as a straight edge).

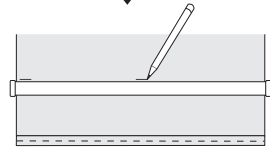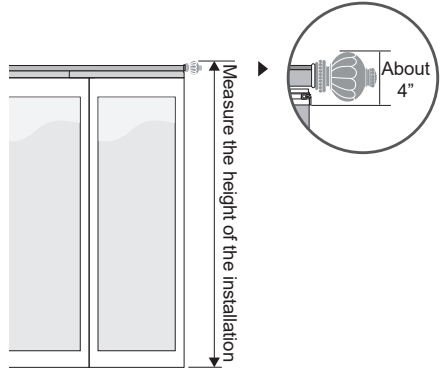

*Make sure the mark is parallel to the edge

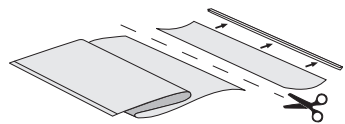


2-2 After cutting panel curtains to size with scissors or a utility knife, remove the rubber liners from the scraps. Staple the rubber liners onto panel curtains. Space the staple 2 inches apart and hammer the staples flat with a hammer.

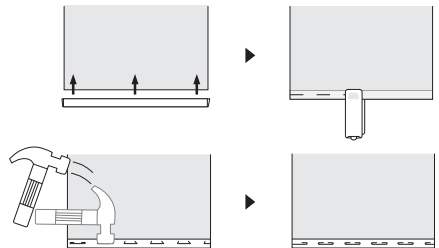

Note

Each rubber liner can be reused up the 3 times.

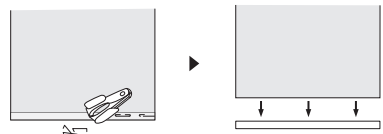

Panel	Centimeter	Inches
A	172cm	67 ³ / ₄ "
B	232cm	91 ⁵ / ₁₆ "
C	295cm	116 ¹ / ₈ "

116¹/₈" panels come with