


Assembly Instructions

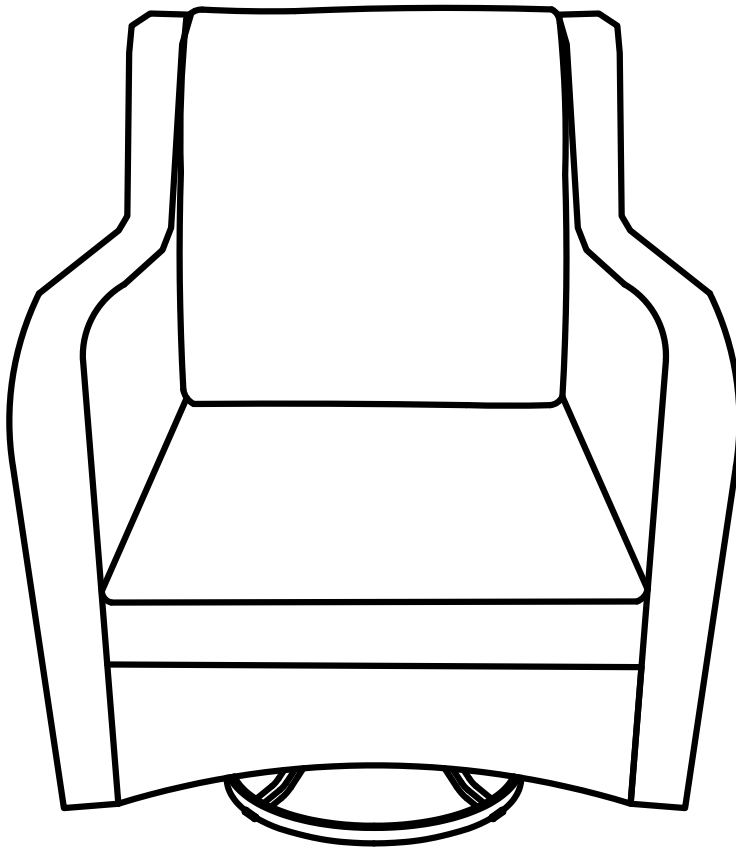











For any missing hardware, damaged parts and other problems.
WELCOME to email us at: service@behousewell.com

Or call at 1-888-733-8169 Toll free
Between 9AM and 5PM Eastern time, Monday through Friday


***Don't fully tighten all the bolts till the very end!**

PRE-ASSEMBLY PREPARATION:

- Please read through the instructions before beginning assembly.
- Clear out the space for assembly and lay out all of the parts based on the Parts List, extra room will allow you to easily determine if all the pieces are present.
- Keep small parts and pieces away from children until fully assembled.

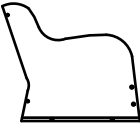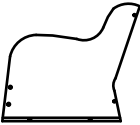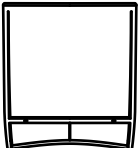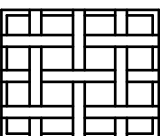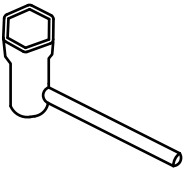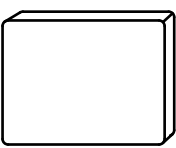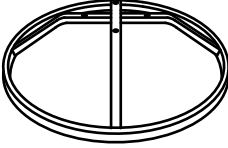
Part no.	Part	QTY	Image	Part no.	Part	QTY	Image
A1	Left arm	1		K	Washer	40	
A2	Right arm	1		L	M6	16	
B	Front Panel	1		M	M6	16	
C	Back	1		N	Allen Wrench	1	
D	Seat	1		O	Wrench	1	
E	Swivel plate with support bar	1		Q	Seat cushion	1	
F	U-shape fitting with swing arm	2		R	Back cushion	1	
G	Base	1					
H	M6*35mm	8					
I	M6*40mm	12					
J	M6*45mm	8					

Step 1: Attach left arm (A1) to back panel (C) with 2 pcs bolts (J) and 2pcs washers (K),using Allen wrench N. Note: Don't fully tighten the bolts.

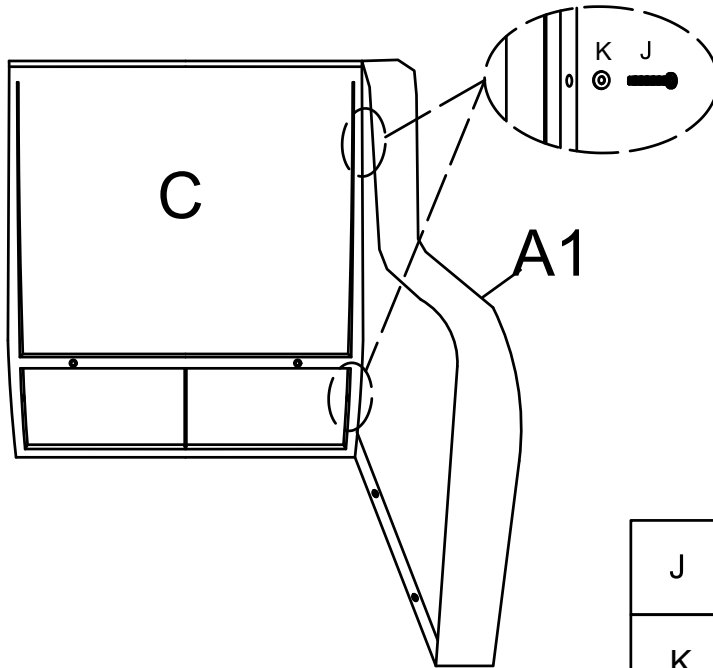


J		M6*45	2
K		Ø16*Ø6.5*1	2

Step 2: Attach right arm (A2) to back panel (C) with 2 pcs bolts (J) and 2pcs washers (K),using Allen wrench N. Note: Don't fully tighten the bolts .

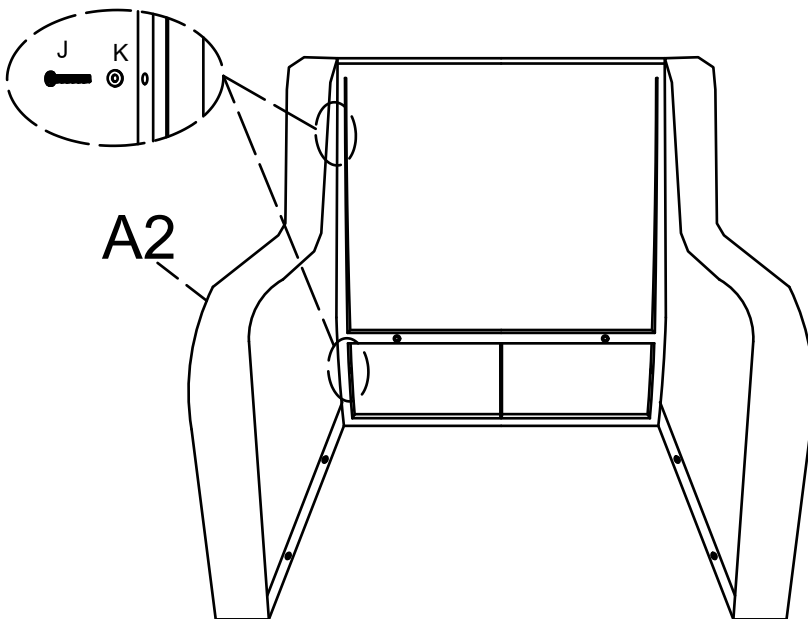


J		M6*45	2
K		Ø16*Ø6.5*1	2

Step 3: Attach front panel B to arms A1&A2 with 4pcs bolts H and 4pcs washers K, using Allen wrench N. Note: Don't fully tighten the bolts.

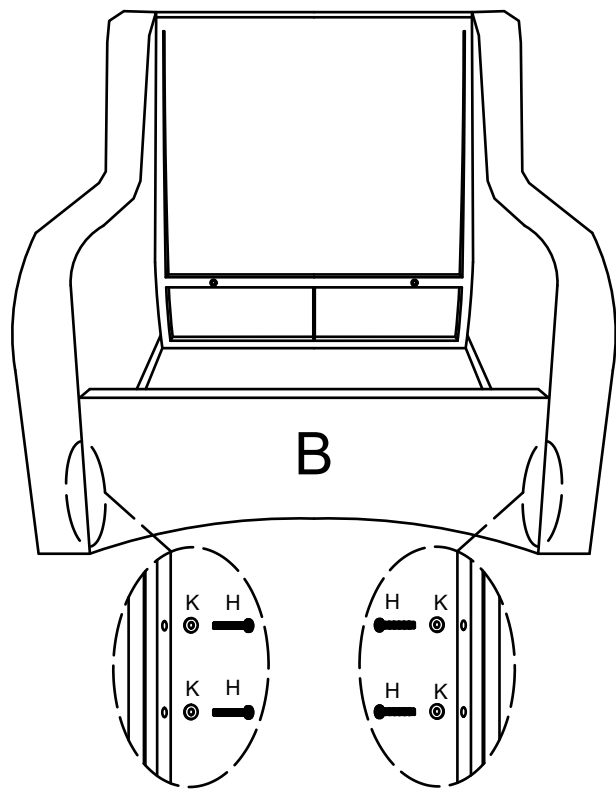


H		M6*35	4
K		Ø16*Ø6.5*1	4

Step 4: Attach seat D to back C and front panel B with 4pcs bolts H and 4pcs washers K, using Allen wrench N. Note: Don't fully tighten the bolts.

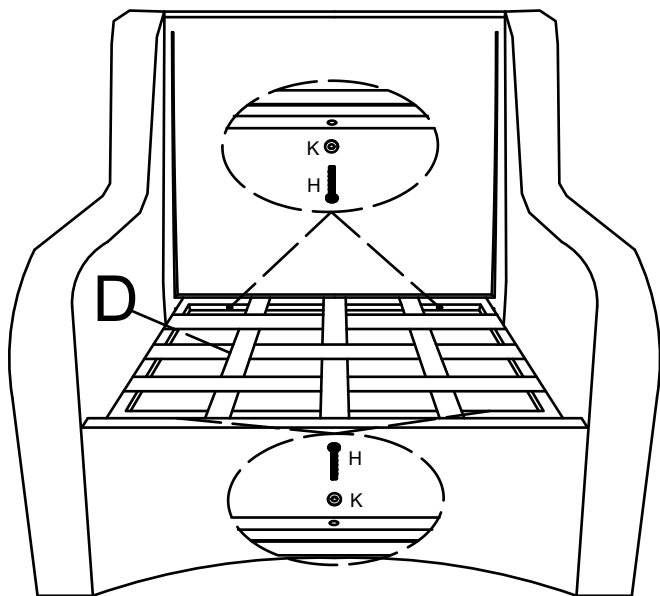


H		M6*35	4
K		Ø16*Ø6.5*1	4


Step 5: From horizontal direction, attach 2pcs part F to part E with 4pcs bolts I, 8pcs washers K, 4pcs spring washers L, and 4pcs nuts M, using Allen wrench N and wrench O. Note: Don't fully tighten the bolts.

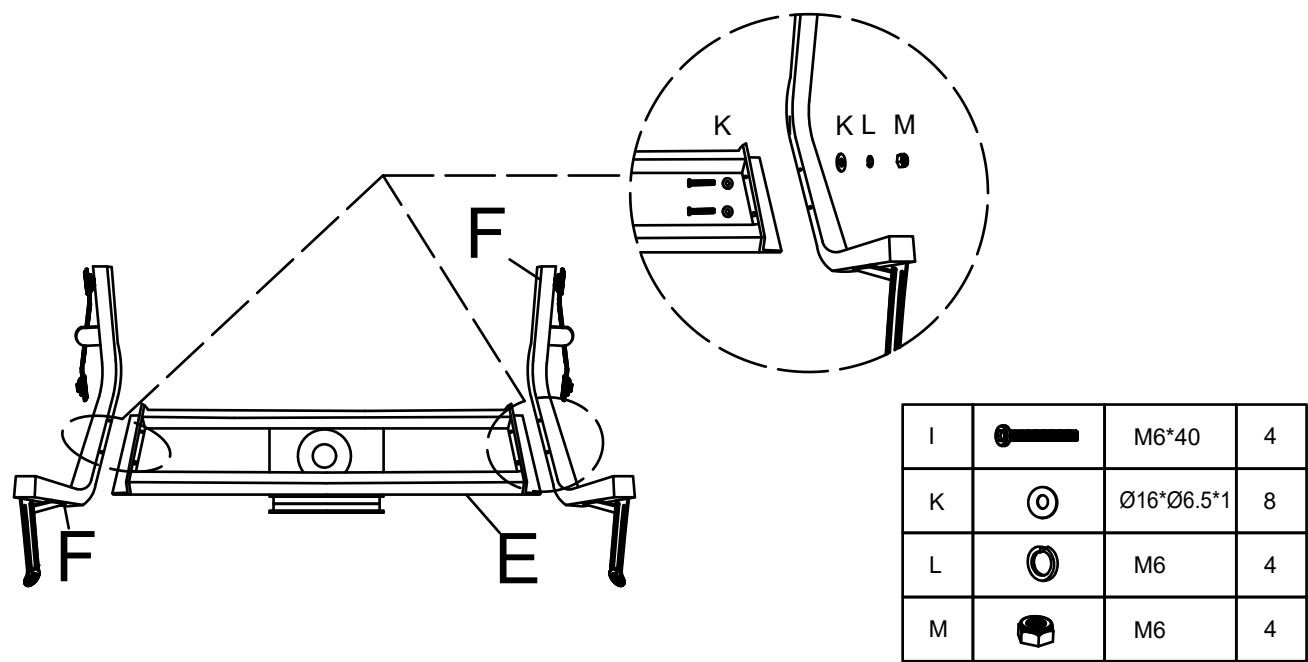

Step 6: From vertical direction, attach 2pcs part F to part E with 4pcs bolts I, 8pcs washers K, 4pcs spring washers L, and 4pcs nuts M, using Allen wrench N and wrench O. Note: Don't fully tighten the bolts.

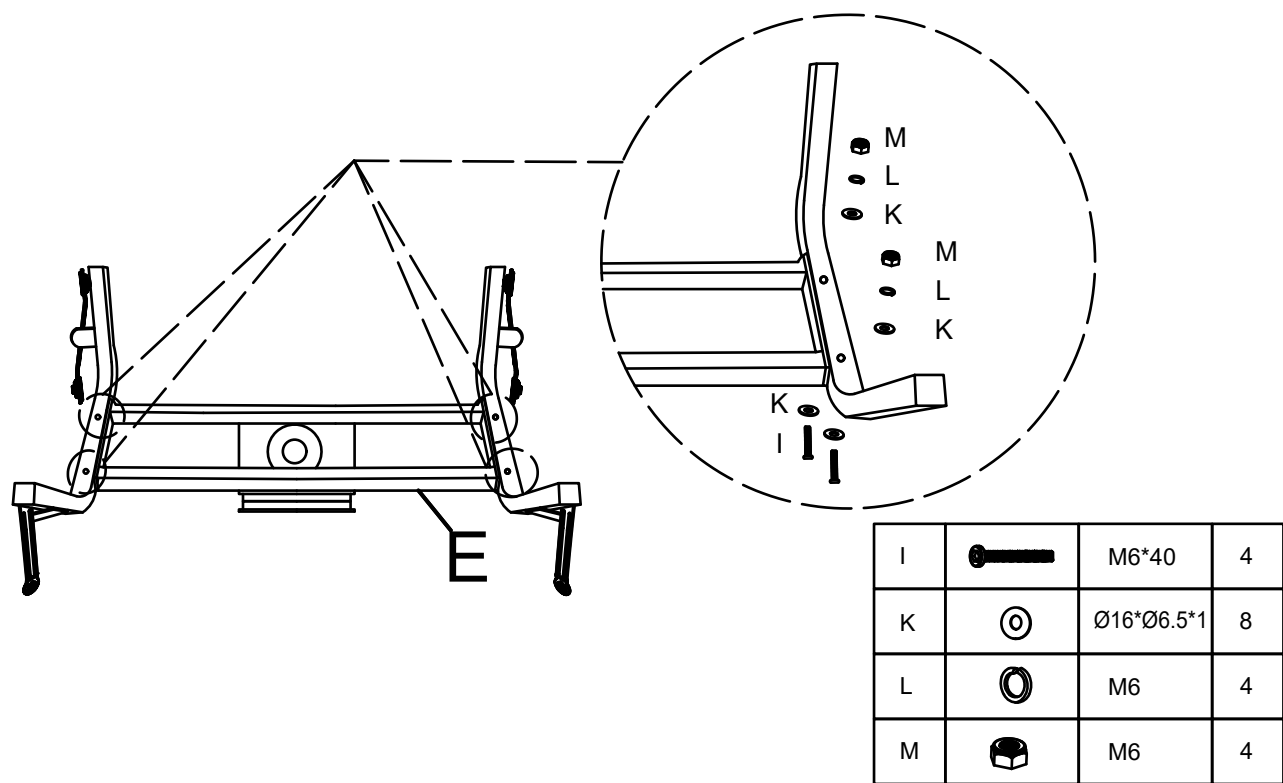


Step 7: Attach swivel plate to part G with 4pcs bolts I, 8pcs washers K, 4pcs spring washers L, and 4pcs nuts M, using Allen wrench N and wrench O.
Note: Don't fully tighten the bolts.

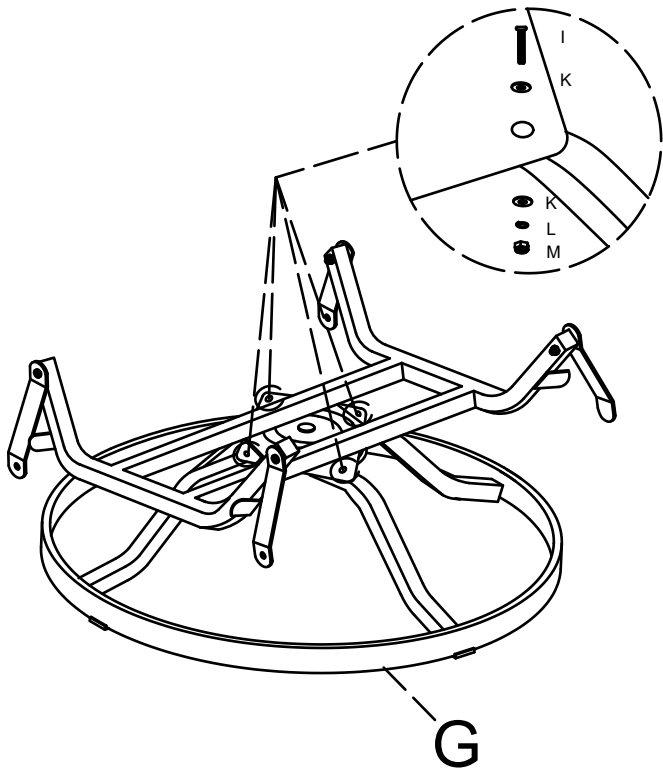


I		M6*40	4
K		Ø16*Ø6.5*1	8
L		M6	4
M		M6	4

Step 8: Put the 4pcs bolts and 4pcs washers K to arms A1&A2 using Allen wrench N .Note: Please fully tighten all the bolts.

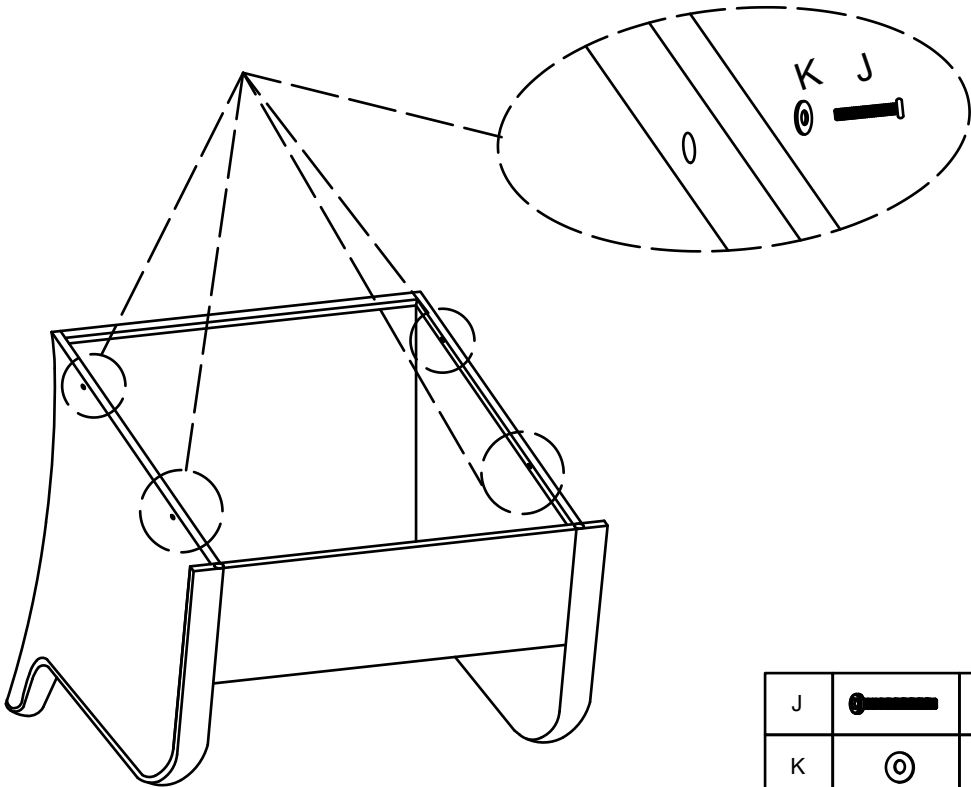

J		M6*45	4
K		Ø16*Ø6.5*1	4

Step 9: Attach swing arms to arms A1&A2 with 4pcs nut M and 4 spring washers L, using Allen wrench N and wrench O. Note: Please fully tighten all the bolts.

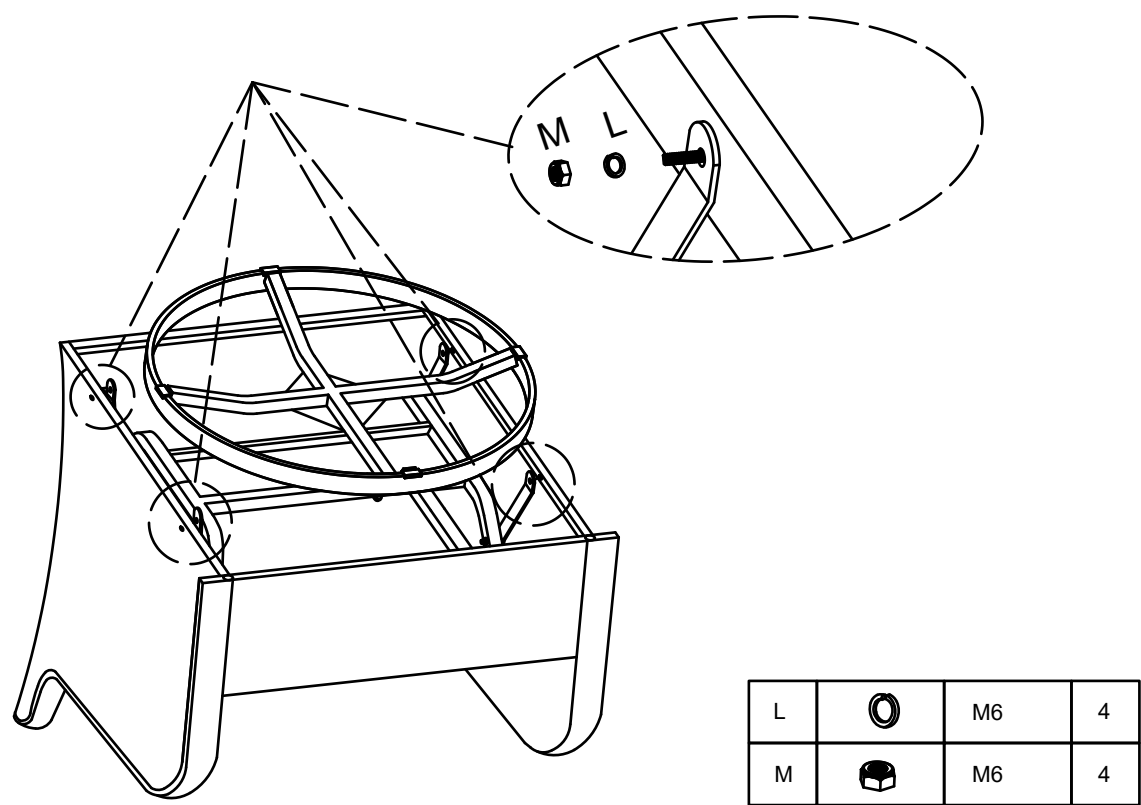

Step 10: Put seat cushion Q and back cushion R onto the seat. Assembly is now complete and the product is ready for use.

