



USE AND CARE GUIDE

SATURN ACCORDION DOOR



THANK YOU

We appreciate the trust and confidence you have placed in Everbilt through the purchase of this Accordion door. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Everbilt!

Warranty

WHAT IS COVERED

2 years warranty applies only to manufacturing defects.

WHAT IS NOT COVERED

Does not cover damages caused by impacts, cuts, burns, or incorrect installation.

Contact the Customer Service Team at 1-877-527-0313 or visit www.HomeDepot.com.



Questions, problems, missing parts? Before returning to the store, call Everbilt Customer Service
8 a.m. - 7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m., EST, Saturday

1-877-527-0313


HOMEDEPOT.COM

Care and Cleaning

1. Lubricate the top rail once a month using silicone-based spray lubricant.
2. Keep the door clean by wiping it with a damp cloth using a mild detergent if necessary.


Pre-Installation

TOOLS REQUIRED

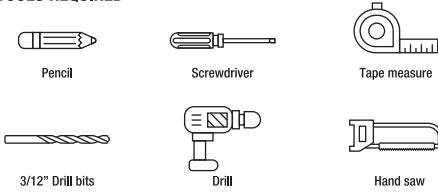

NOTE: Hardware not shown to actual size.

PACKAGE CONTENTS

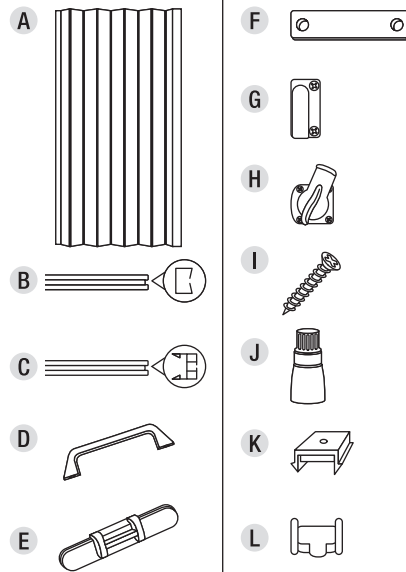


Part	Description
A	Door
B	Top rail
C	Closure channel
D	Handles
E	Handle pins
F	Magnetic metal plates
G	Latch clip
H	Bolt lock
I	Flathead screws
J	Lubricant
K	Snap clips
L	Top rollers

IMPORTANT:
Please read the instructions carefully before installing the door. Check that all the parts from the list are complete. Make sure you have enough clearance space to work.

Pre-Installation

- ☐ Take measurements of the height and width of the space where you will install the door.
- ☐ If the width is smaller than that of the top rail, adjust the rail by cutting it on one end.
- ☐ If the height is shorter, adjust the door by cutting the panels from the bottom of the door.

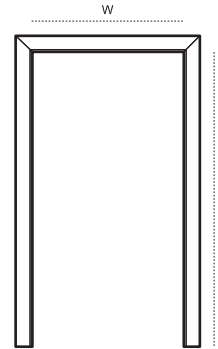


NOTE: Panel kits are sold separately.

Installation


1 Install The Top Rail (TR)

- ☐ Wood:
Position the TR in the center of the frame and install a screw (25mm) in the hole closest to the center of the TR.
- ☐ Concrete/Gypsum:
Position the TR in the center of the frame, mark the locations for the holes, and install an anchor and a screw (25mm) in the hole closest to the center of the TR.
- ☐ Lubricate the sliders and the TR.

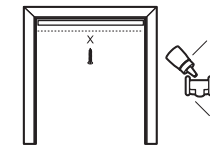


3 Install The Handles

- ☐ Attach the pins to one handle.
- ☐ Pass the pins through the holes in the lead panel.
- ☐ Press the handle firmly in place.

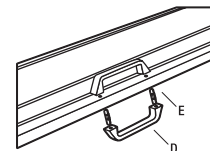


To cut the panels

- ☐ Secure the panels with adhesive tape and remove any screws.
- ☐ Cut the panels according to the desired measurements.
- ☐ Place the screws back in their original positions.
- ☐ Remove the adhesive tape.

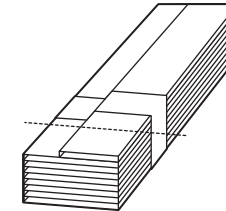


2 Place The Door On The Rail And Secure The Rail

- ☐ Rotate the rail.
- ☐ Slide the door into the TR and rotate the rail.
- ☐ Secure the TR with the 25mm screws.

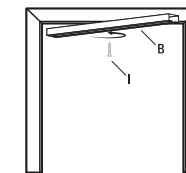

4 Secure The Door


- ☐ Measure the height of the frame, distribute the snap clips, and install them using 25mm screws.
- ☐ Press the anchor panel against the snap clips.

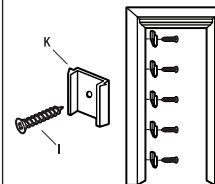

Installation

5 Install The Closing Channel And Metal Plates


- ☐ Place the closing channel vertically and secure it with two 25mm screws.
- ☐ Close the door and check the position of the metal plates. Mark the desired location.
- ☐ Install the metal plates using 25mm screws.
- ☐ Install a 25mm screw in the center of the closing channel.

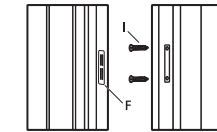

Installation

7 Install the Double Doors

- ☐ Cut the top rails to the same size.
- ☐ First, install one top rail and secure it with 25mm screws. Slide both doors, with anchor panels at each end.
- ☐ Install the second top rail and secure it with 25mm screws. Slide one door onto the second top rail.
- ☐ Install a screw in the center of the two top rails, but do not tighten it completely.
- ☐ Follow steps 2 and 5 of the installation for a single door.
- ☐ Remove the magnets from one door and install a closing channel in its place.

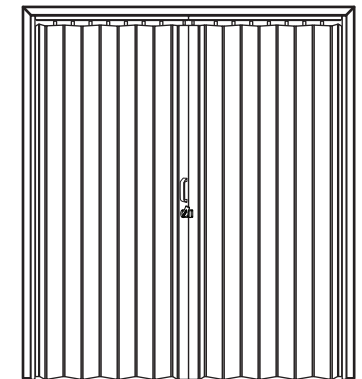

8 Add Panel Kits To Your Door

- ☐ Remove the screws from the second panel and take out the first panel and the lead panel.
- ☐ Add the necessary panel kits.
- ☐ Reinstall the first panel and the lead panel, and screw them in place.

