

ROTBLOC®

PREVENT THE PREMATURE GROUNDLINE
ROT OF YOUR TREATED 4X4 WOOD POSTS.

THE WOOD POST
BARRIER WRAP **4X4**




DO IT YOURSELF!

- UNFOLD AND WRAP AROUND YOUR POST TIGHTLY.
- STAPLE DOWN YOUR SEAM WITH A HAMMER-TACKER.
• USE T-50 1/2 IN. STAPLES.
- SET POST WITH 2 IN. OF ROTBLOC VISIBLE ABOVE GROUND.
- FILL IN YOUR HOLE WITH DIRT, GRAVEL OR CEMENT.



@ROTBLOC_LLC

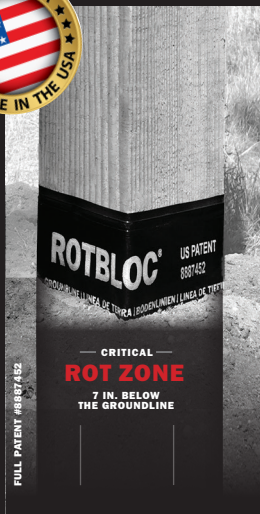

Service life doubled! Non-Toxic!
Fast install! 100% Recyclable!

WWW.ROTBLOC.COM

