
Outdoor Privacy Screen


76"X47"

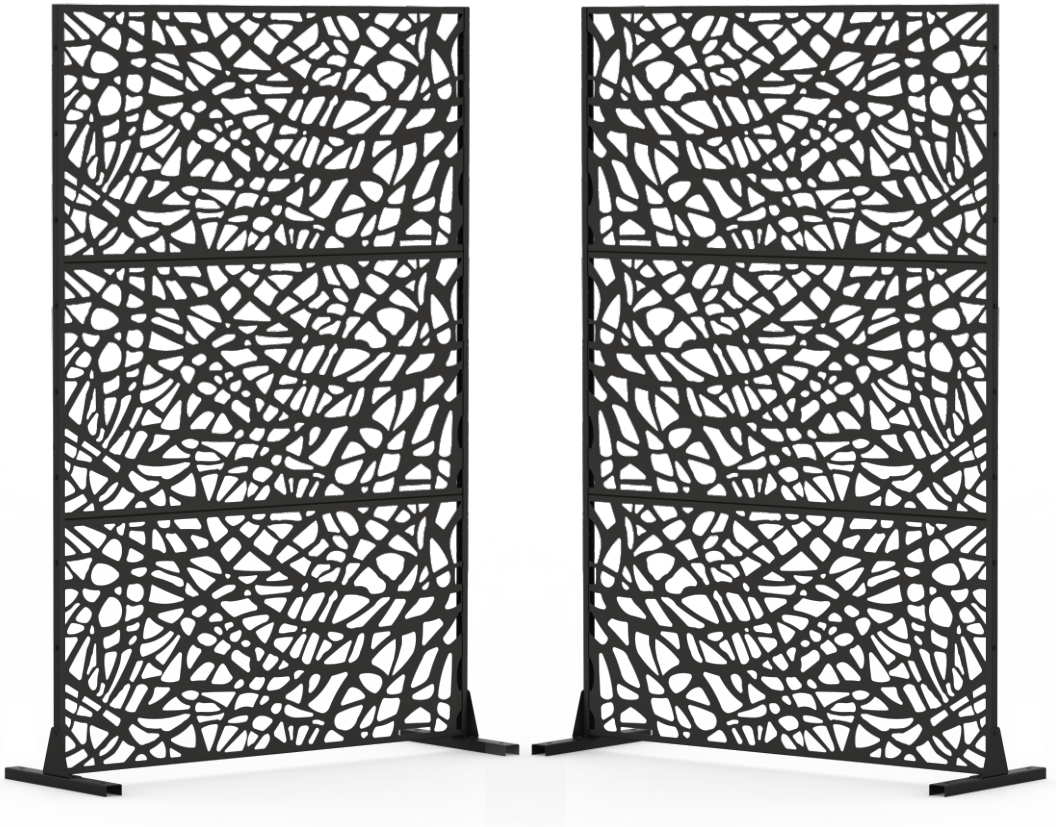


If the privacy screen will be used in a strong wind area,we highly recommend you using four Hex-Head Sleeve Anchors to fix the privacy screen on solid ground.

Before assembling, we recommend:


1. Wear Gloves.

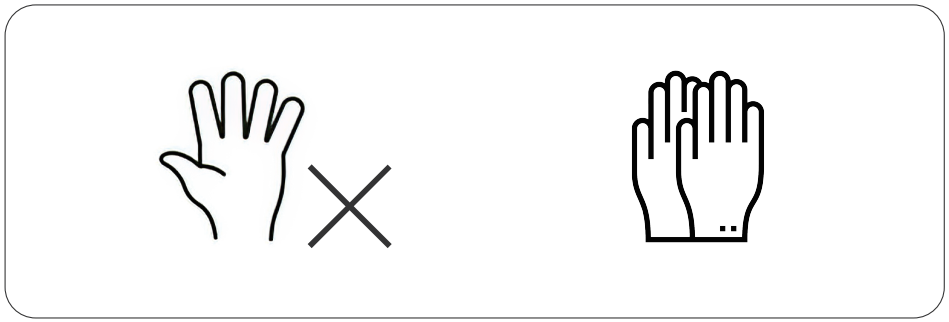


2. Don’t assemble the privacy screen on a Hard Surface.

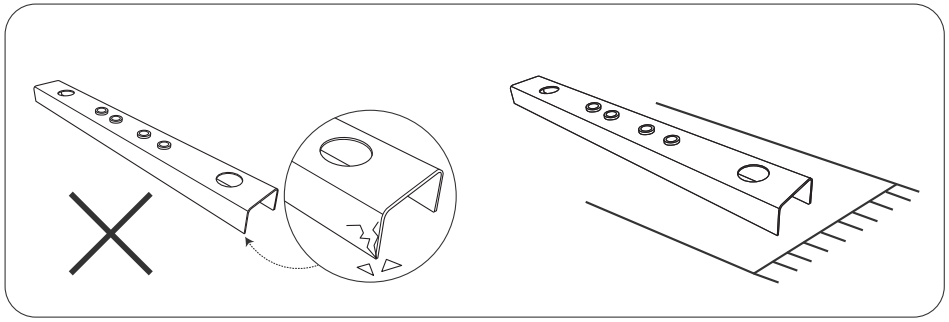


3. Ask for a Helping Hand.

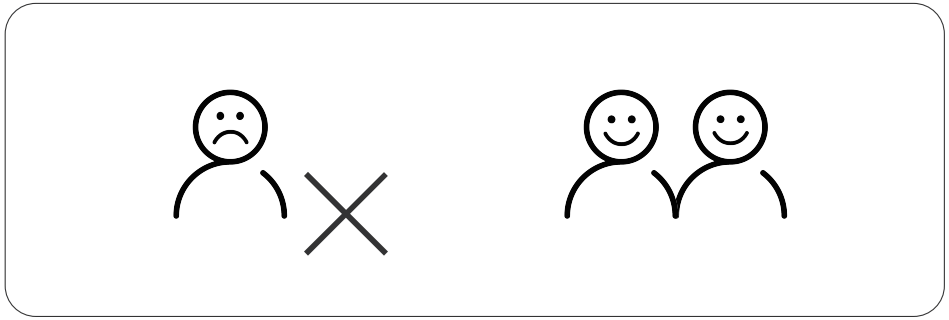


4. Use Hex-Head Sleeve Anchors to fix the privacy screen on solid ground if necessary.

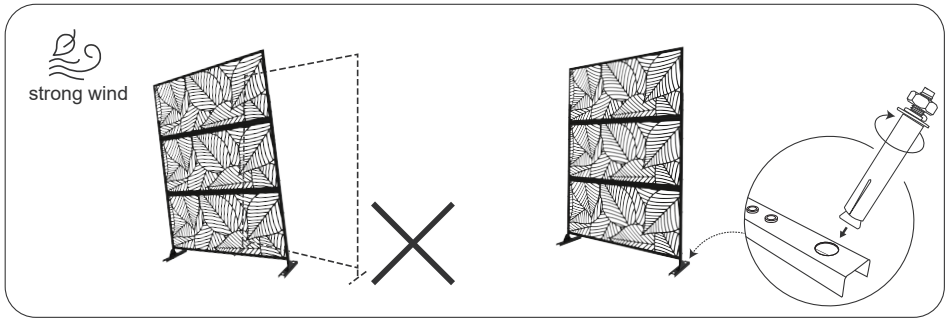

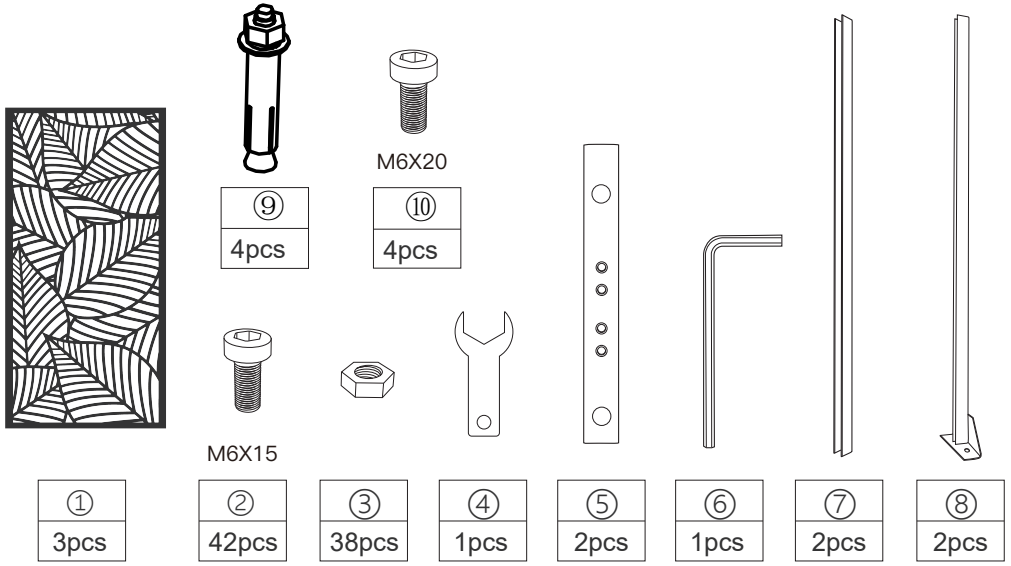


Vertically Install

①

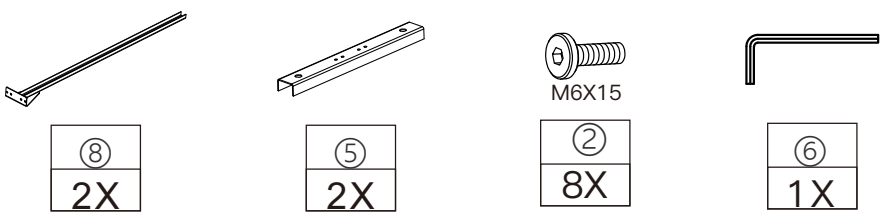



⑧	⑤	②	⑥
2X	2X	8X	1X

②




①	②	③	⑥
1X	4X	4X	1X

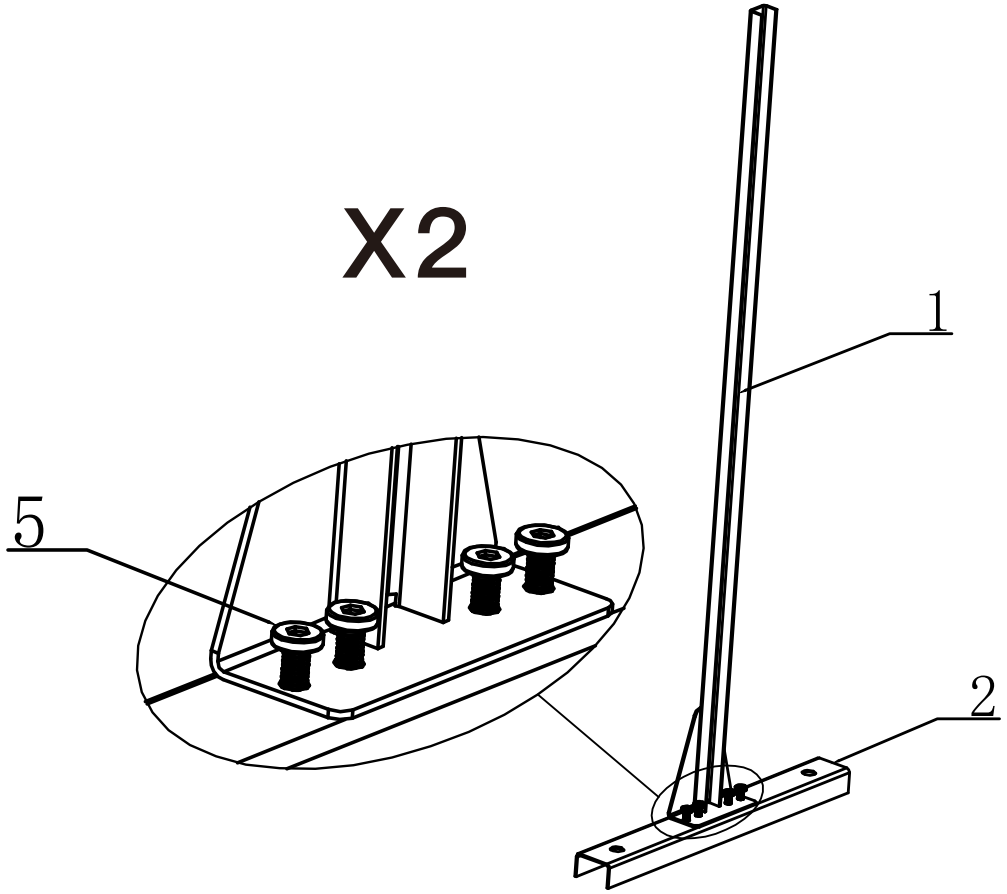

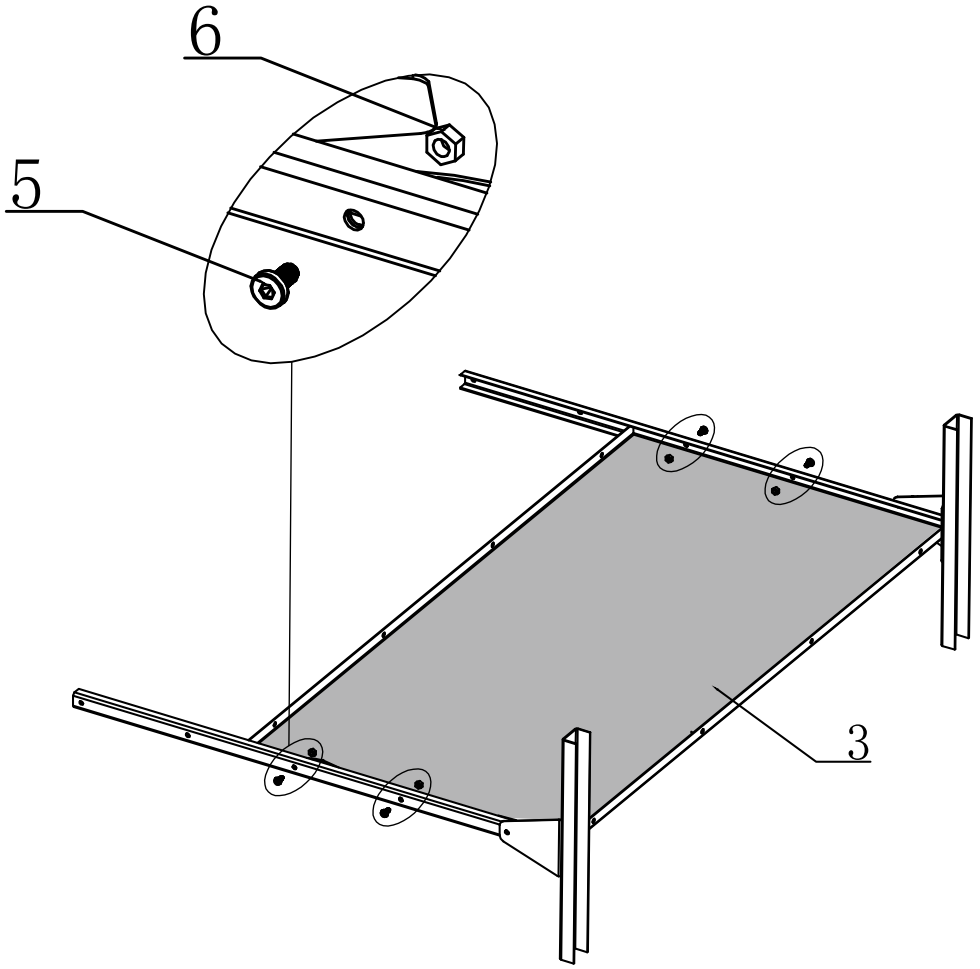

③






M6X15






①	②	③	⑥
1X	4X	4X	1X

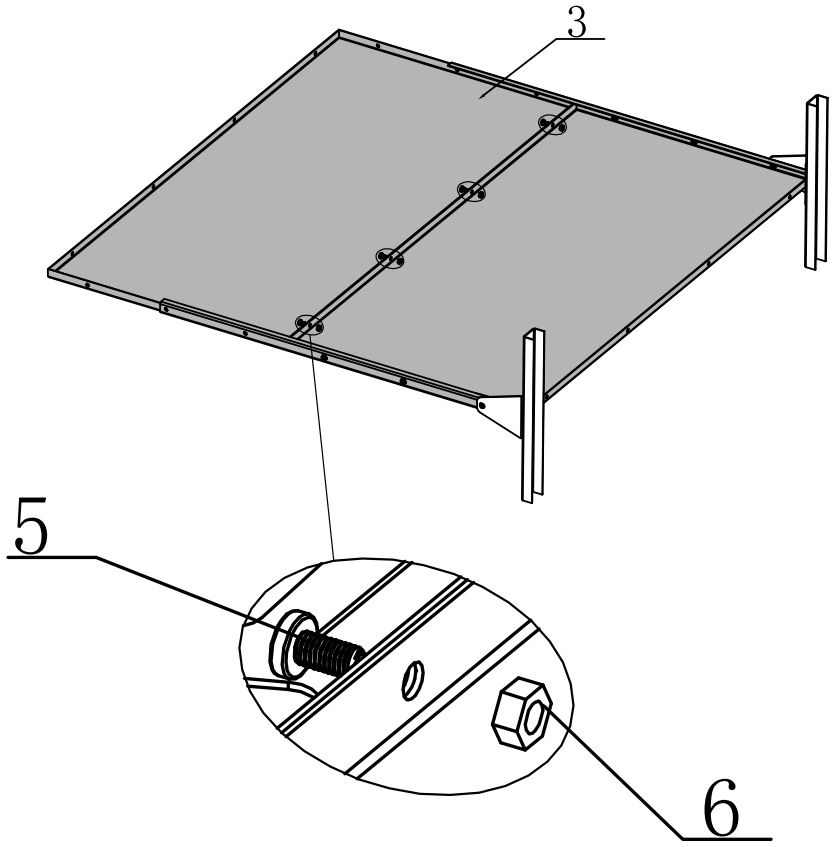

④






M6X15






⑦	②	③	⑥
2X	4X	4X	1X

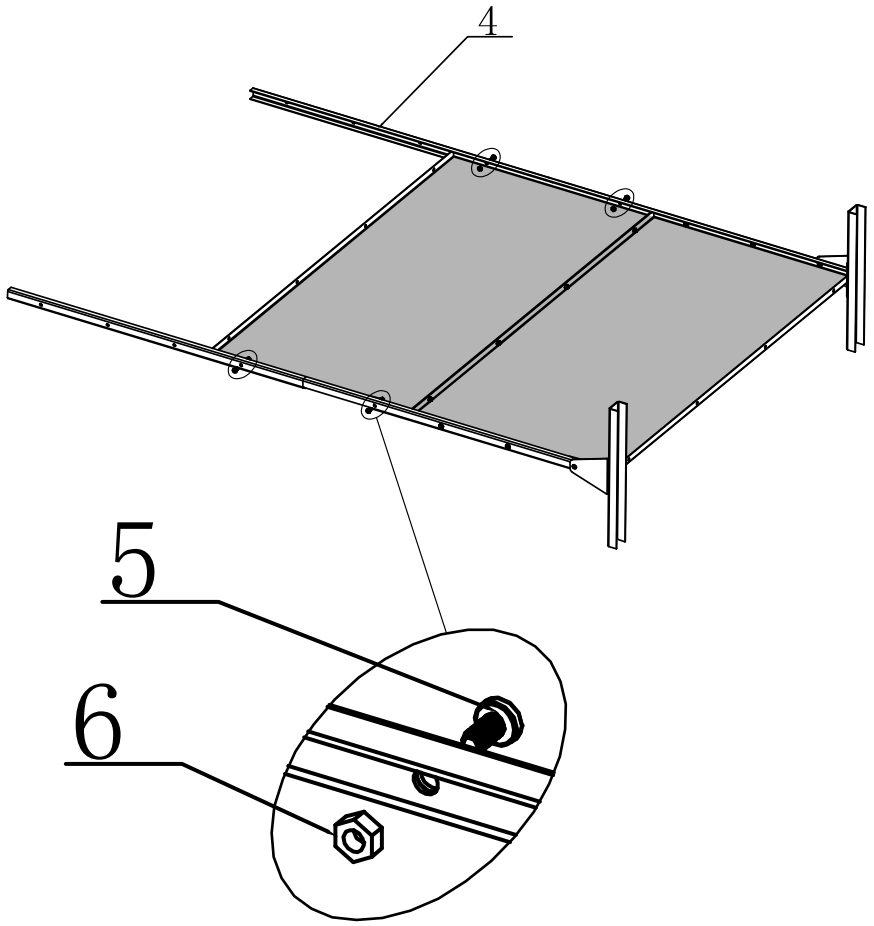

⑤






M6X15





①	②	③	⑥
1X	4X	4X	1X

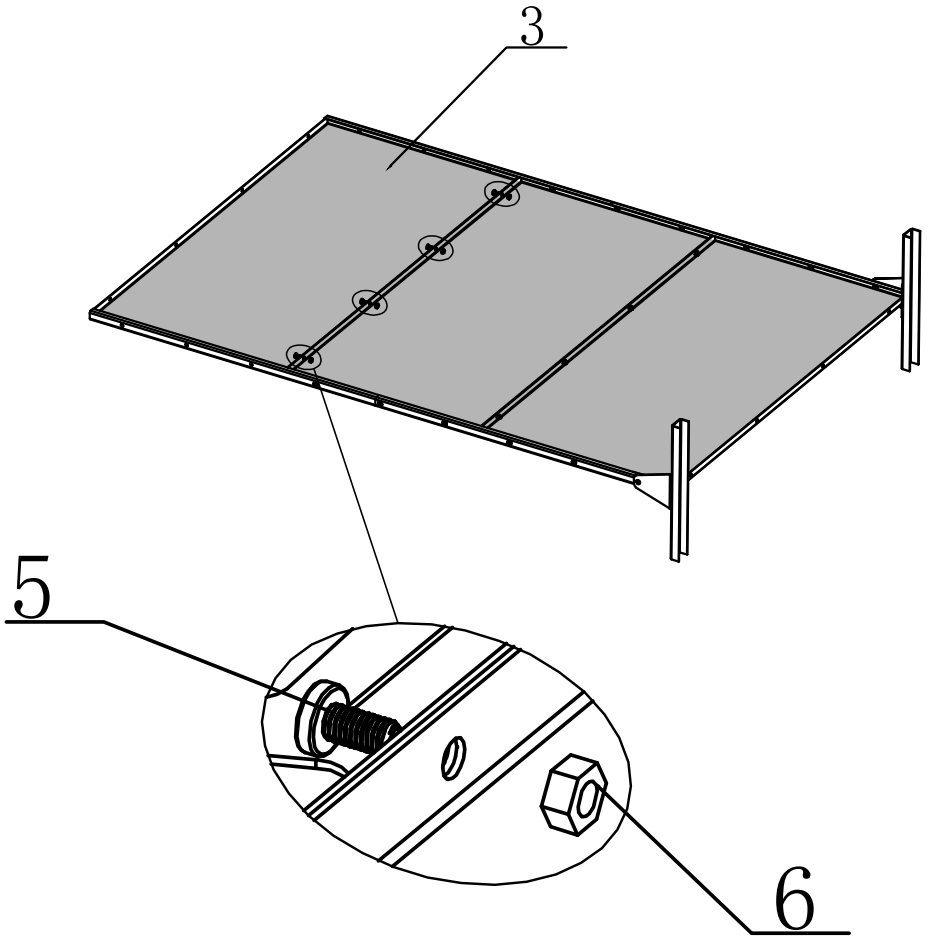

⑥




M6X15





②	③	⑥
4X	4X	1X

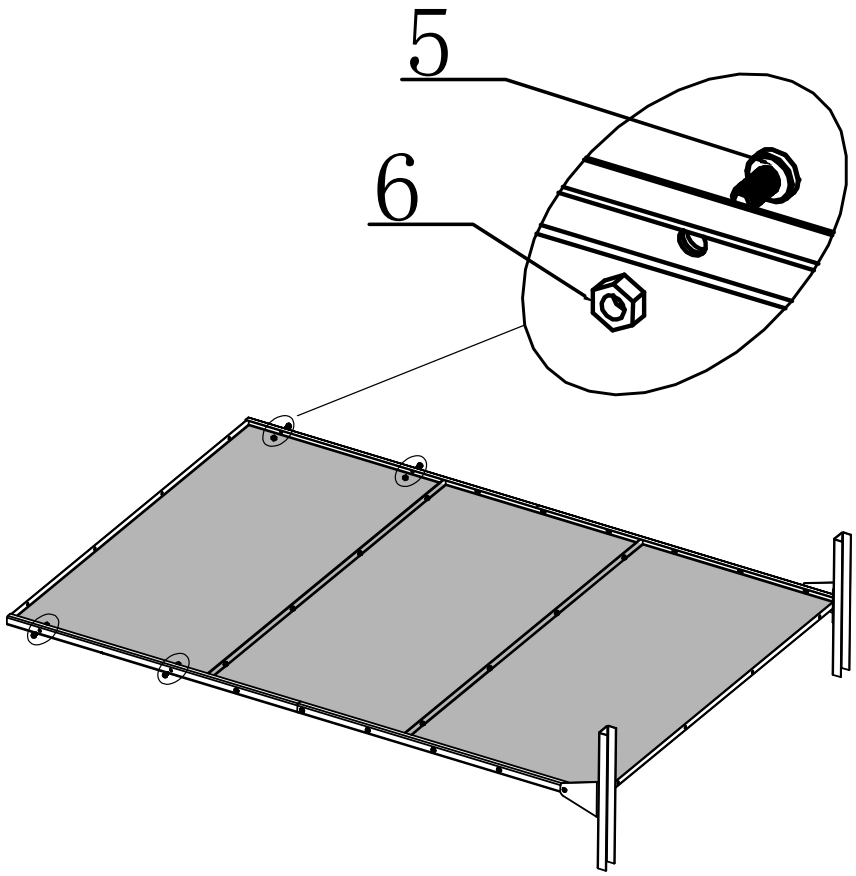


Single Panel Installtion

⑦



⑨
4X

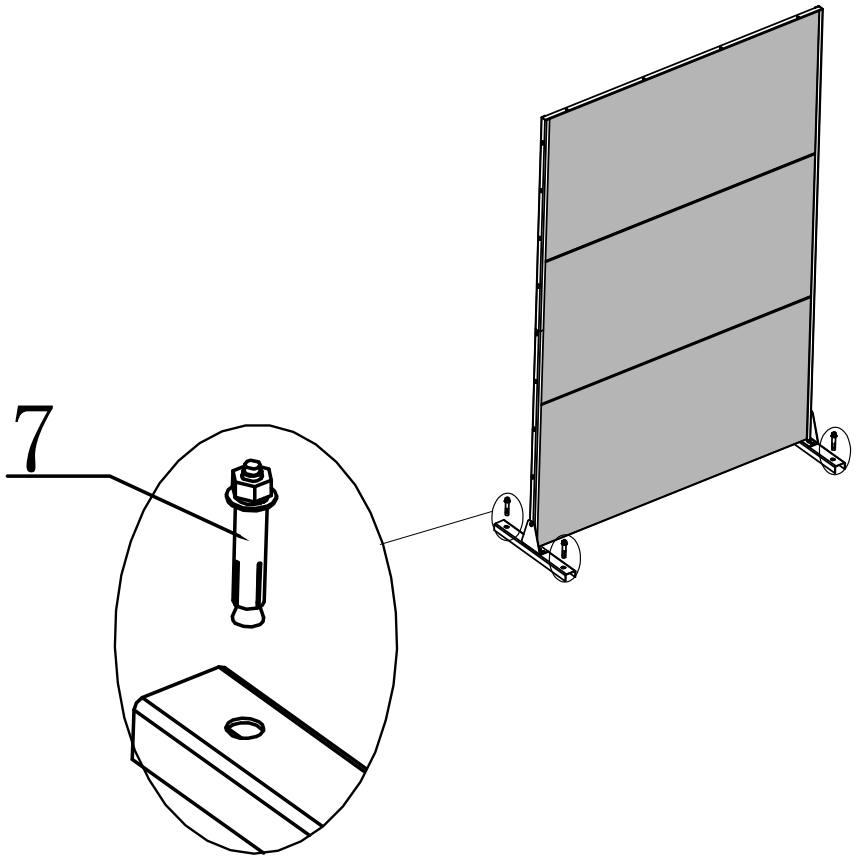

⑧

